


EZ-FIT™ EMD II

(Surface Mounted) Sliding Door Operator


**Installation, Adjustment and Troubleshooting Manual
Includes Access Control Options**

Applications:

- Pedestrian Applications
- Colleges / Schools
- Light Industry
- Medical Centers
- Office Buildings
- Pharmacies
- Residential
- Shopping Malls
- Specialty

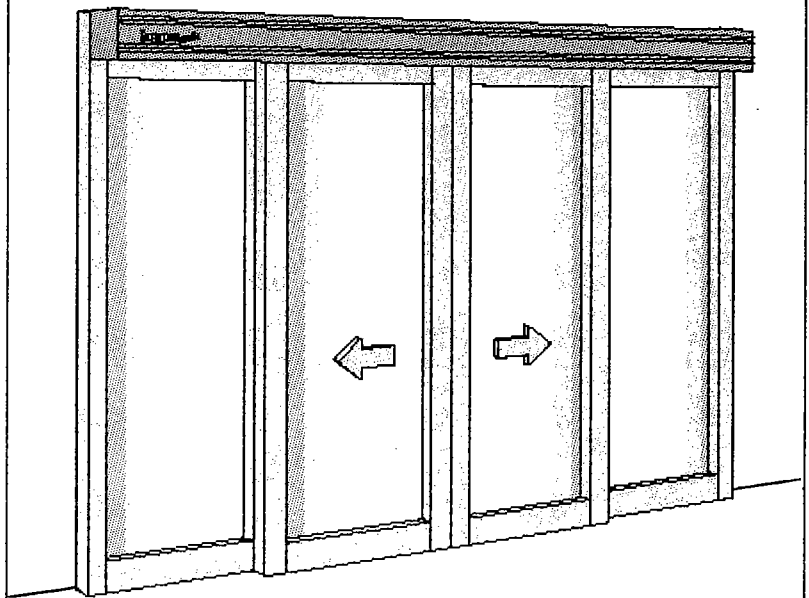

Complies with ANSI/BHMA A156.10-1999 standards for power operated pedestrian doors. UL 325 Listed.

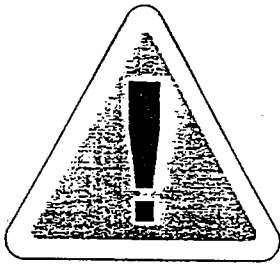

CAUTION

Improperly adjusted doors can cause injury and equipment damage.

Inspect door operation daily using safety checklist in Owner's Manual and at door.

Have door adjusted as described in Owner's Manual.

Safety devices must be in place and operational.

Have door inspected at least once a year by an AAADM inspector, and always after any adjustment or repair.

In the following manual, the word:

Caution means that injury or property damage can result from failure to follow instructions;

Note indicates important steps to be followed or important differences in equipment.

Table of Contents

Table of Contents	1
Important Information	2
Technical Specifications	2

Getting Started

Introduction	3-4
Models	5
Part Identification & Options	6-8
Space Required	9
Pre-Installation Questions	10
Installation Overview	11
Installation Examples	12
Fastening Requirements	13
Tools And Test Equipment	13
Site Inspection	14

Installation

EZ-Fit EMD II Installation	15-34
----------------------------	-------

Adjustments And Troubleshooting

Electrical Connections	35
Wiring The CUD-9 (CUD-9S) Control Unit	36-37
Adjusting The CUD-9 (CUD-9S)	38
Using The PMD	39-43
Wiring The CUJ-9 (CUD-9S) Control Unit	44-46
Adjusting The CUJ-9 (CUD-9S)	47-49
Wiring Options	50-55
Sign Placement	56
Troubleshooting	57-62

Reference

ANSI / BHMA A156.10 - 1999 Reference	63
Frequently Asked Questions	64
Maintenance / Planned Maintenance Checklist	65-66
Door Handing And Layout	67
Appendix	68-72
Parts List	73-75
Notes	76
Bulletins and Revisions	Inside Back Cover

Important Information

Important notice!

To avoid bodily injury, material damage and malfunction of the product, the instructions contained in this manual must be strictly observed during installation, adjustment, repairs and service etc. Only Besam trained experts should be allowed to carry out these operations.

Radio and television reception

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been designed to comply with the emission limits in accordance with EN 50081-1 (US market FCC Part 15) which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna.
- Relocate the receiver with respect to the equipment.
- Move the receiver away from the equipment.
- Plug the receiver into a different outlet so that equipment and receiver are on different branch circuits.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions.

Note!

Instructions, design, specifications and illustrations which are contained in this manual are not binding. Rights reserved for changes without previous notice.

Environment

This operator may be equipped with batteries containing materials which are hazardous to the environment. Remove the batteries from the operator before it is scrapped. The batteries must be disposed of safely.

Technical Specifications

Power supply 120 V AC $\pm 10\%$, 60 Hz breaker
10 A per Operator

Note!

A switch with clearly marked off-position, having a contact separation of at least 1/8" in all poles, must be incorporated in the Mains wiring.

Power consumption max. 250 W

Auxiliary voltage 18 V DC, 0.5 A

Control fuse F1 2 Amp

Motor fuse F2 5 Amp

Recommended max. door weight: 1 leaf - 400 lb
2 leaves - 200 lb per door leaf

Door Travel EMD II -1 & -2 35.5" to 118"

Opening/Closing Speed Variable up to approx. 4.5 ft/sec.
(Two leaves) *

Low Speed Variable up to approx. 1 ft/sec.
(Two leaves) *

Hold open time 0-60 seconds *

Ambient temperature -30° F to 113° F

To be installed internally or externally with suitable weather protection.

* To be adjusted to comply with ANSI/BHMA A156.10.
Note that local codes may vary.

NOTE:

The glazing material of all doors shall comply with the requirements in the American National Standard Performance Specification and Methods of Test for Safety Glazing Material Used in Buildings, Z97.1-1975.

Introduction

This manual contains the necessary details and instructions for the installation, maintenance and service of the Besam sliding door operator, EZ-Fit EMD II. The EZ-Fit EMD II is designed for a surface mounted installation between two vertical jambs. The header holds the drive and control units, and supports the sliding doors and sidelites, if required.

A Besam EZ-Fit EMD II sliding door operator ensures all-around safety. It can be combined with the full range of Besam safety units, such as Eye-Cue MWD presence and microwave motion detectors. It is easy to install for both new construction and retrofit applications and can be adapted to a wide range of installations.

How The EZ-Fit EMD II Works

The EZ-Fit EMD II consists of a motor, gear box, control unit, tension wheel, and transmission rods, (plus optional battery unit and locking devices), forming a compact drive unit mounted inside a header/support beam. The door leaf is fitted to a door carrier/carriage wheel bracket and is driven by a tooth belt on a field-replaceable Delrin track.

Opening

When an opening signal is received by the control unit, the door is opened at the EZ-Fit EMD II's high speed. Before the door is fully open, it slows to low speed. The motor stops when the door is fully open.

Closing

When the hold-open time has run out, the door will close, slowing to low speed before it reaches the fully closed position.

Safety functions integrated in the EZ-Fit EMD II

Opening and Closing

When opening, the doors will stop if an obstruction is contacted by the moving door leaf. The door will close again after a time delay.

When closing, the doors immediately reverse if an obstruction is contacted, then resume closing at low speed to detect whether the obstruction has cleared.

Microprocessor

The control unit's microprocessor has a self-monitoring device that detects interference within its functional range, or faulty signals in door operation, and automatically adjusts to ensure safe operation.

Other Safety Features

The optional emergency battery unit automatically opens or closes the doors during a power failure. The operator can also interface with a fire alarm or smoke detector. The doors are equipped with a panic breakout kit that allows the doors to swing outward when pushed in an emergency situation.

Safety Sensors

Safety sensors, such as the Besam Eye-Cue MWD, can be connected for an even higher degree of safety.

Introduction

EZ-Fit EMD II layout types

Besam provides several layouts for the EZ-Fit EMD II sliding door system. Operators can be bi-parting or single slide (left or right handed), and sidelites may be installed fixed to the interior or hinged to break out in emergency situations. (See page 67 for illustrations of various layouts.)

All EZ-Fit EMD II sliding door systems are ready for installation when delivered. The sidelites and active leaves are fully prepared and all hardware is installed. Operators are supplied with all mounting hardware, and rivnuts have been installed in the side jambs. (If you are retrofitting the EZ-Fit EMD II to existing frames or doors, see pages 68-70 for guidelines.)

Before installing the EZ-Fit EMD II sliding door system, check to see that you have been supplied the correct equipment and that all necessary tools and hardware are at hand (see page 13). Also, check the installation site for any factors that might interfere with proper installation (see page 14).

EZ-Fit EMD II naming conventions

The designation EMD refers to a surface mounted operator and sliding door system. AMD refers to a concealed operator.

The Roman numeral II indicates the second generation drive module for these operators.


This may be followed by several hyphenated numbers. If the numeral 2 appears as the first digit, it means that the model in question is a bi-parting door system; otherwise, it is a single-slide door system. The remaining numbers show the overall frame width (OFW) of the door system in feet, then inches if needed.

Thus, the EZ-Fit EMD II-2-8-6 (for example), is a surface mounted operator with a second generation drive module; bi-part system with two sliding leaves; with an OFW of eight feet and six inches. The EZ-Fit EMD II-8-6 is a surface mounted operator with a second generation drive module; single-slide system with one sliding leaf; with an OFW of eight feet and six inches.


Models

Two main models are available: Bi-Parting and Single Sliding, as shown below. The tables describe the measurements for each model. See page 27 for the relative drive units.


Bi-Part Model No.	A	L	B
EMD II-2-8	36"	96"	24-3/8"
EMD II-2-10	48"	120"	30-3/8"
EMD II-2-12	60"	144"	36-3/8"
EMD II-2-14	72"	168"	42-3/8"
Key:	$(L/2) - 12"$	$(2C) + 9-1/2"$	$(L/4) + 3/8"$

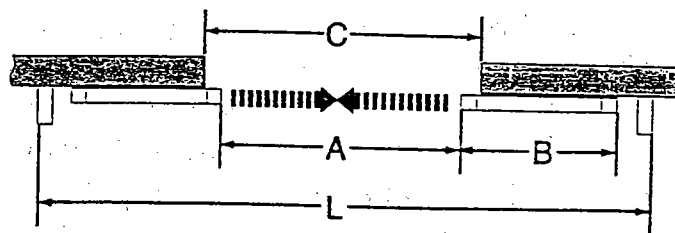

EMD II-2, bi-parting doors

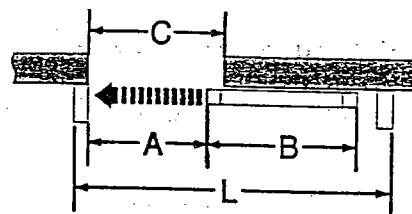

EMD II, single-sliding door, right-opening

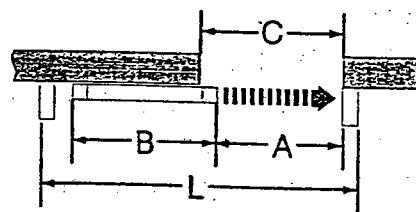

EMD II, single-sliding door, left-opening


Single Slide Model No.	A	L	B
EMD II-7	35-1/4"	84"	41-1/2"
EMD II-8	41-1/4"	96"	47-1/2"
EMD II-8-6	44-1/4"	102"	50-1/2"
Key:	$(L/2) - 6-3/4"$	$(2C) + 6-1/4"$	$(L/2) - 1/2"$

Note: Charts are for narrow stile doors with 1/4" glazing. Wider stiles or thicker glazing will reduce the A dimension accordingly.

- A = Clear Door Opening
- L = Overall Frame Width
- B = Door leaf Width (Active and Side Leaves)
- C = Finished Opening Width
- Key = Formula of Door Dimensions

Part Identification & Options


(Operator for bi-parting frame doors shown. Some equipment optional.)

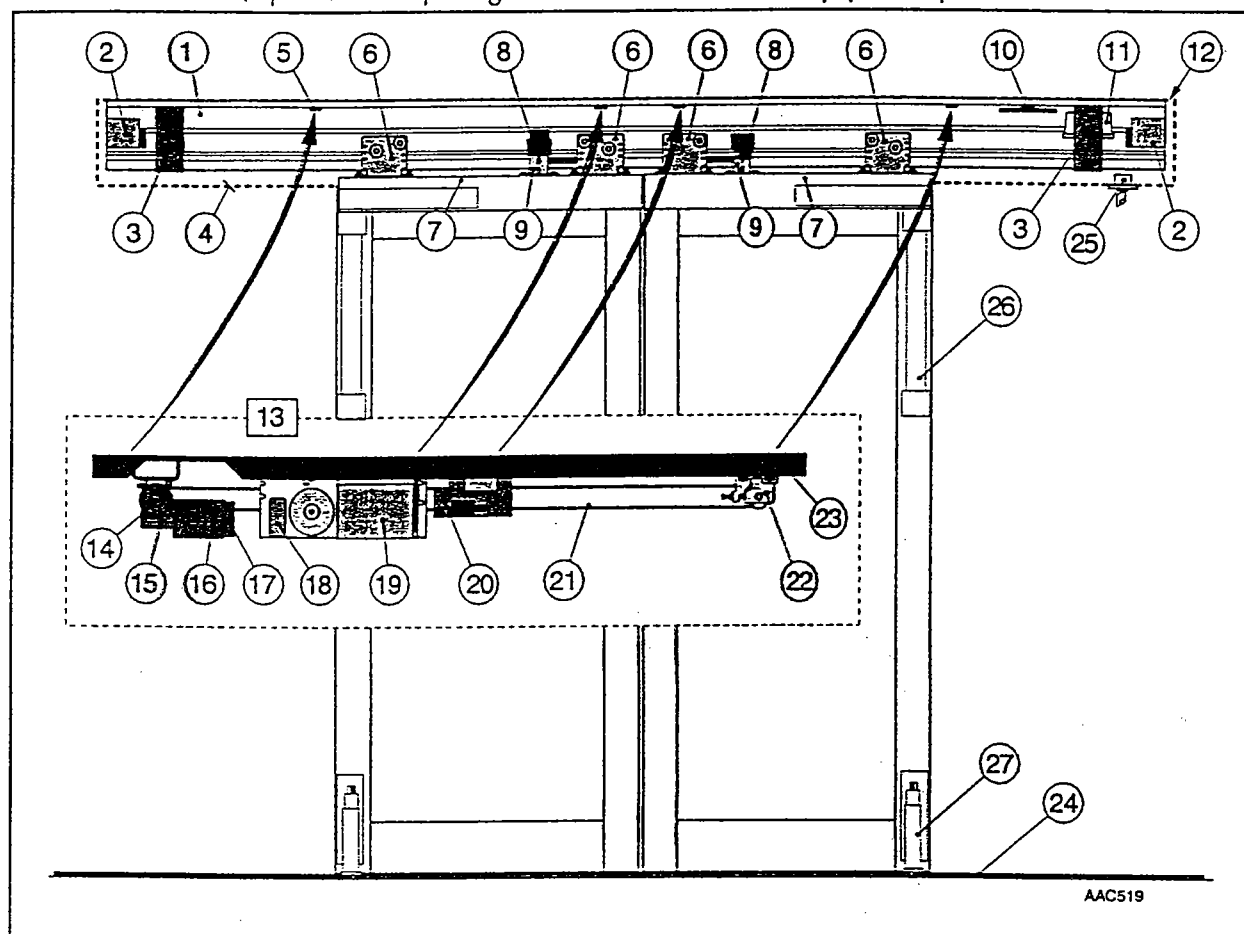

- | | |
|-----------------------------------|--|
| 1. Header | 15. Gear Box |
| 2. Door Stop | 16. Motor Unit |
| 3. Cover Bracket | 17. Revolution Counter |
| 4. Cover | 18. Emergency Battery Unit (Optional) |
| 5. Bracket for Drive Unit (4 pcs) | 19. Control Unit |
| 6. Carriage Wheel Bracket | 20. Electro-mechanical Locking Device (Optional) |
| 7. Door Carrier | 21. Tooth Belt |
| 8. Transmission Rod Attachment | 22. Tension Wheel |
| 9. Door Drive Bracket | 23. Cable Channel |
| 10. Cable Shelf | 24. Floor Guide Track |
| 11. Junction Box | 25. Program Selector |
| 12. Cable Inlet | 26. PSA arm |
| 13. Drive Unit | 27. Pin Guide |
| 14. Drive Wheel | |

See pages 73-75 for spare part numbers.

Part Identification & Options

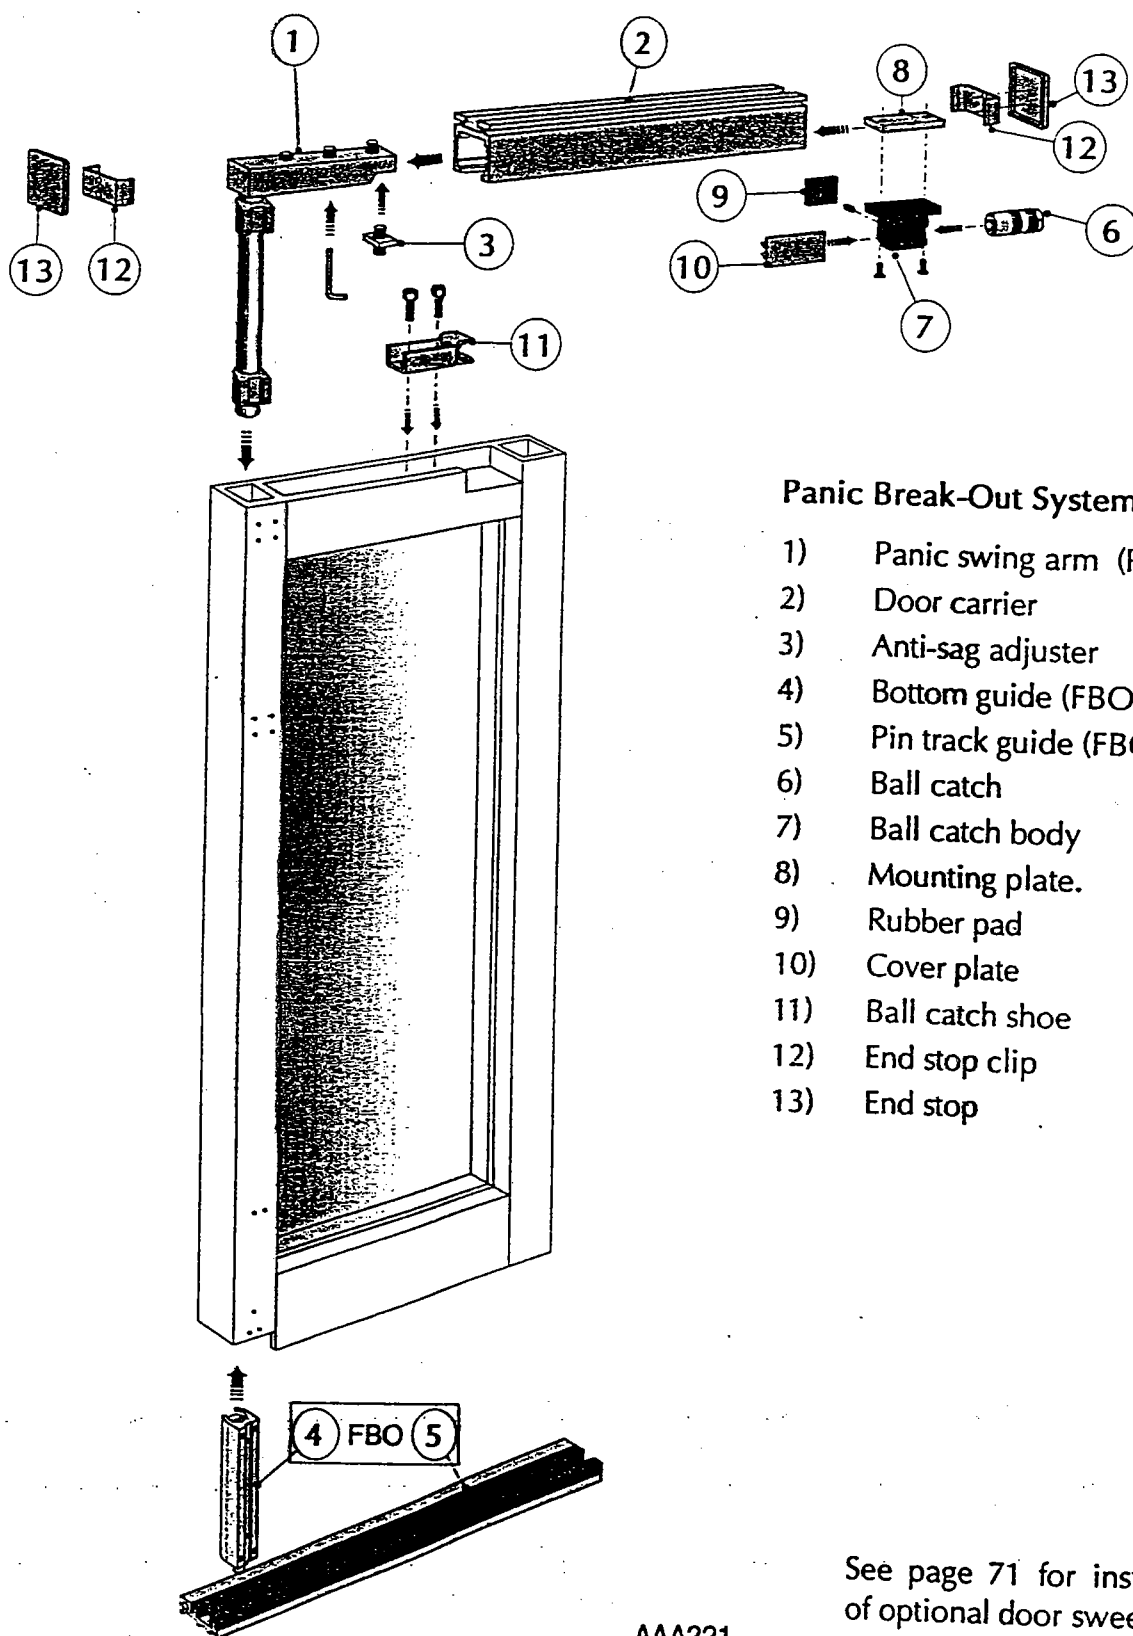

AAA221

Part Identification & Options

Bottom Guide Systems

Two basic guide systems are available: The standard pin guide (FBO, or Full Break Out) with guide track, and the non-panic floor guide.

The FBO pin guide has several options for guide tracks, including recessed track (flush with floor level), recessed threshold, and surface threshold.

See pages 17-18 and 21 for guide installation.

Pin Guide

P/N: 50-15-390

 
Non-Panic Floor Guide

P/N: 50-15-015


Pin Guide



Non-Panic







FBO

 


Breakout Sidelite
(Pin Guide and Track)

    Non-Panic



Recessed Track
(Pin Guide)

Recessed Threshold
and Track (Pin Guide)

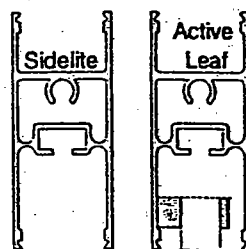


Surface Threshold
and Track (Pin Guide)

Space required

Frame doors

Typical configuration with sidelite shown.

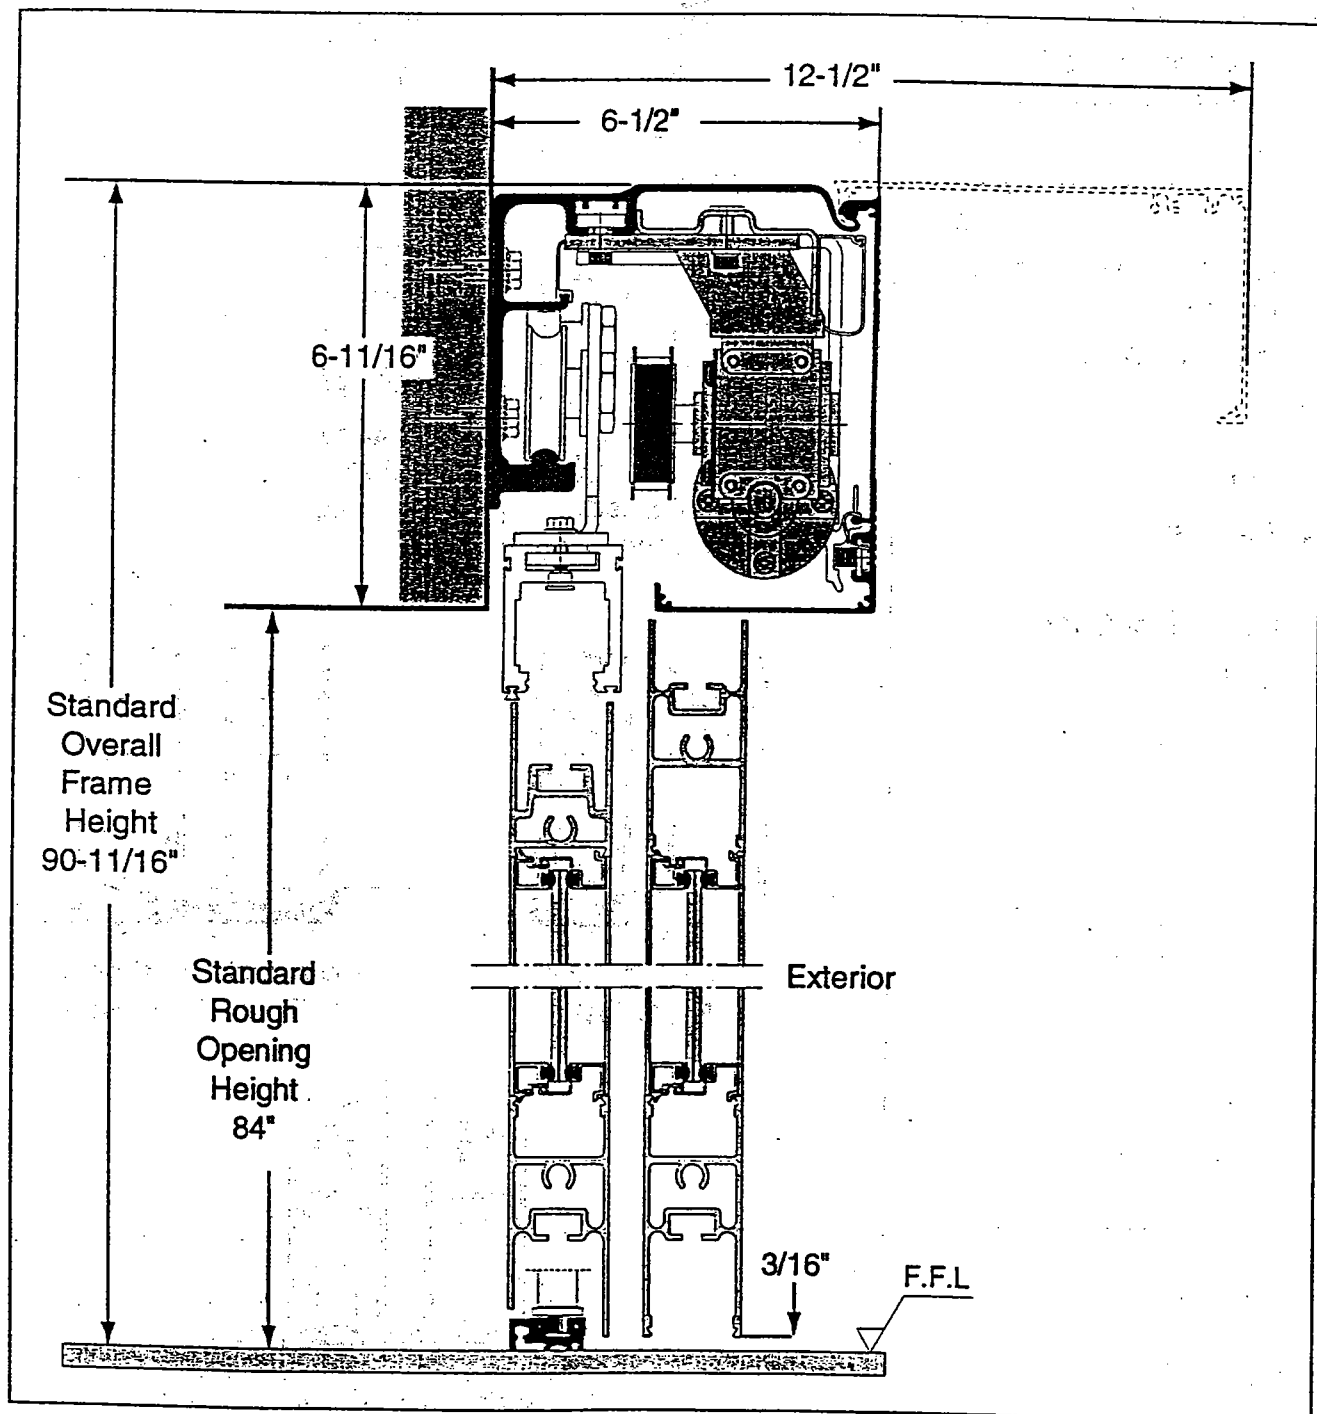

Pre-Installation Questions

This section will help you to determine the right configuration and preparation for your doors.

- A. Is this installation a bi-parting or single-slide?
- B. If a single slide, what is the handing, left or right? (See page 67.)
- C. Where will power and signal wires enter the operator housing? (Back, End cover, Transom tube.)
- D. Is this a Full Breakout (FBO) or Non Panic installation?
- E. Does the operator require special software for the controller? See page 27.

General Tips / Safety Concerns

Caution! Make sure that the power is off before installing, including battery backup if so equipped.


Caution! Make sure that the wall is properly reinforced at the installation points. See page 13 for specifications and suggestions.

Installation Overview

This is only a summary of the installation process. See the rest of this manual for detailed information.

- 1: Start by determining the answers to the pre-installation questions on page 10.
- 2: Inspect and prepare site. Install header to jamb tubes, tilt into place, level and plumb, then secure to finished opening with shims and appropriate fasteners. See page 13 for fastener recommendations.
- 3: Full Breakout: mount the pin or threshold guide track. Non-Panic: mount the non-panic floor guide(s).
- 4: Mount the moving door panels.
- 5: Mount the sidelites, if applicable.
- 6: Adjust all door panels for alignment and smooth manual movement. Adjust all breakouts.
- 7: Install the drive unit.
- 8: Connect and adjust transmission rods from drive unit to active door panels.
- 9: Complete all electrical connections to other operators or optional equipment.
- 10: Adjust the control unit for optimal and safe performance, in accordance with current ANSI/BHMA A156.10 specifications.
- 11: Apply safety signage to the door(s).
- 12: Train facility manager in operation.
- 13: Explain to the facility manager the daily safety check described in the owner's manual, and leave a copy of the owner's manual with the facility manager.

Installation Examples

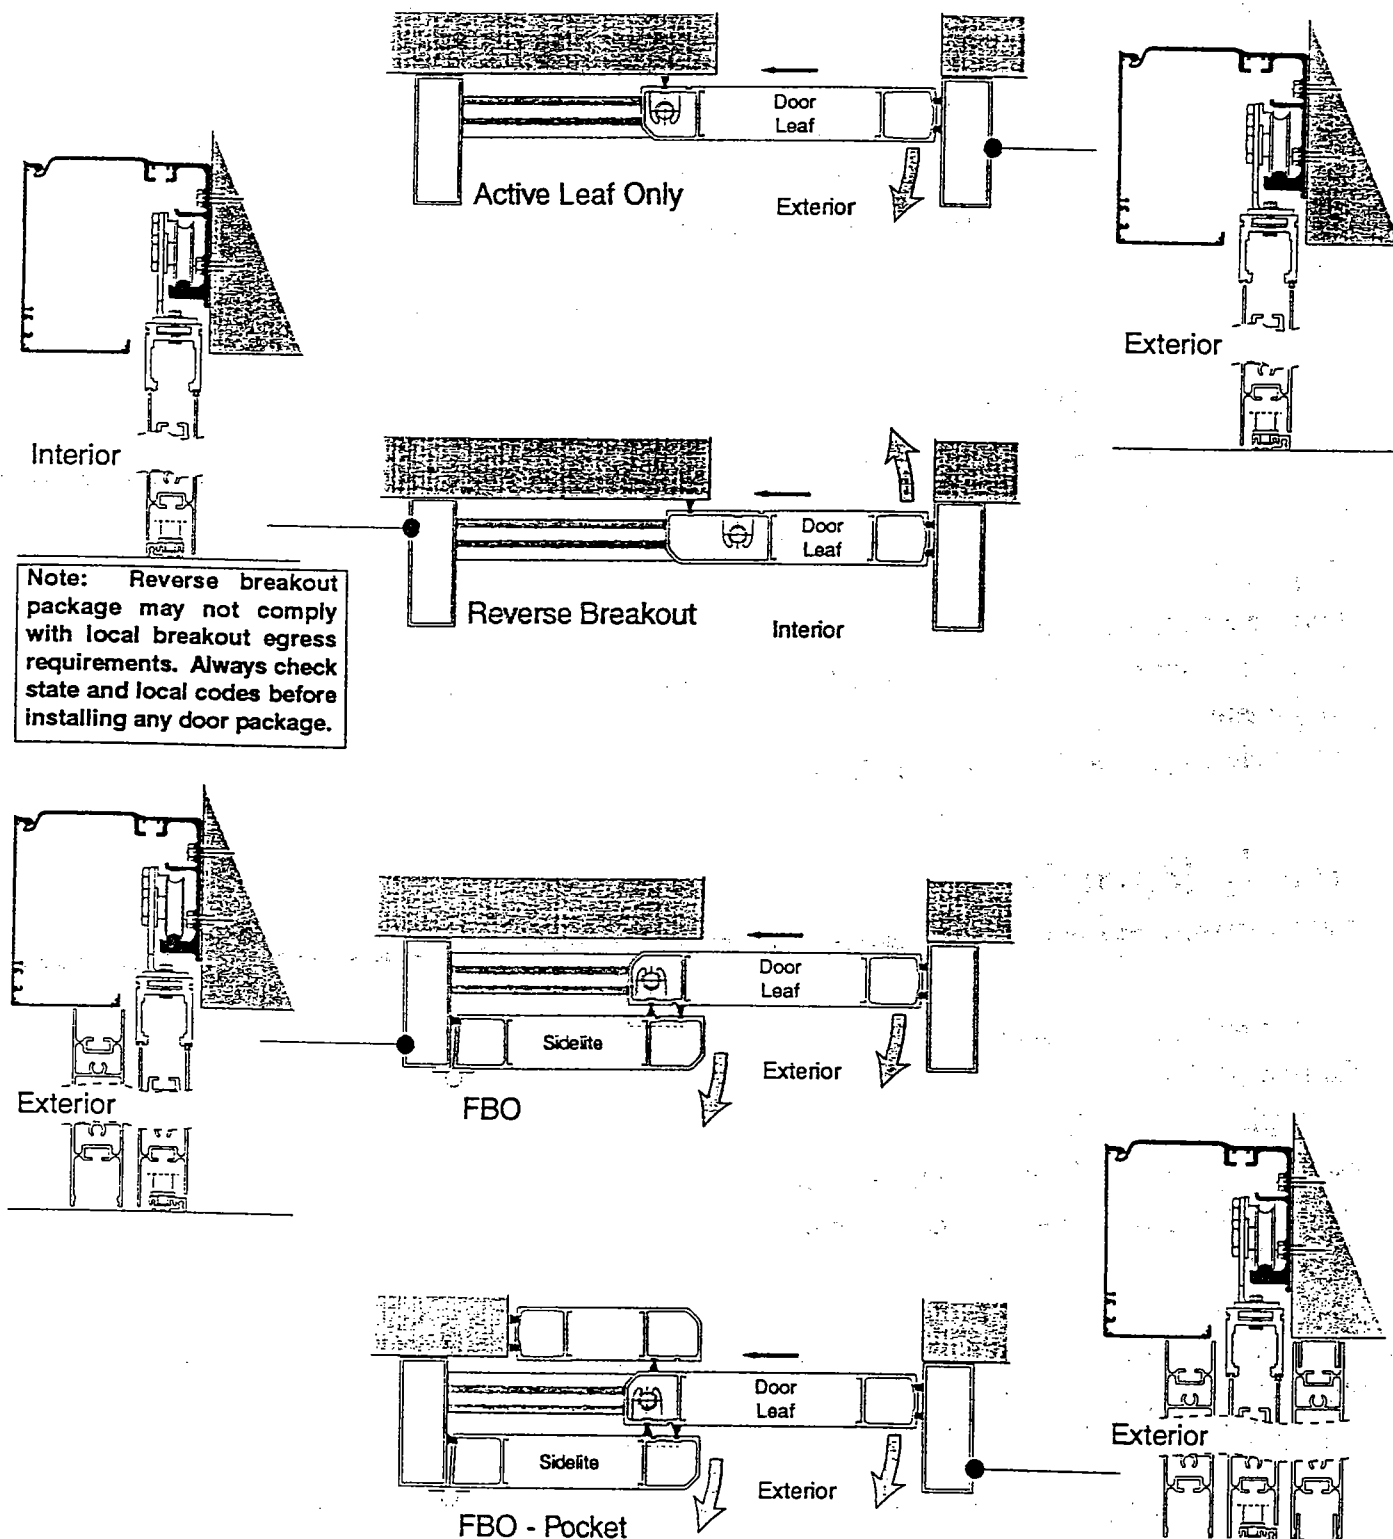

Left hand layouts shown. Opposite for right hand and mirrored for bi-part installations.

Fastening Requirements

Base door / wall material	Minimum anchor / bolt requirement *
Steel	3/16" **
Aluminum	1/4" **
Reinforced concrete	min. 2" from the underside
Wood	2"
Brick wall	Expansion-shell bolt, min. 1/4" x 3 1/2", min. 2" from the underside

* Besam minimum recommended requirements. Building Codes may give different specifications.

** Thin-wall profiles must be reinforced with rivnuts.

Test Equipment

Stopwatch

Force gauge (50 lb force range)

PMD Programming Module (for CUD-9 control; not used for CUJ-9)

Multimeter

Hand Held Eye-Cue Tester, if so equipped.

Tools Required

Set of metric box end wrenches

Carpenter's level

Tape rule

Power drill and set of drill bits, Hammer drill

Metric hex key set (6,5,4 mm and 2.5 mm)

Torx (T20)

Center punch

#2 Phillips screwdriver

Flatblade screwdriver (small/med./large)

Wire stripper

Pencil

Additional mounting hardware (not supplied – see Fastening Requirements above)

Silicone sealant

Plumb bob

Site Inspection



Inspect wall and floor; confirm that there are no fixtures that will interfere with the installation, such as light switches, time clocks or card readers. The wall should be as flat as possible where the jambs and header meet the wall, and the finished opening should be plumb and square. In cases where the wall is bowed or bricks are sticking out, the shallow areas should be filled in with shim material or the wall should be corrected.

The finished floor must not vary by more than $\frac{3}{8}$ " from the highest to the lowest point. If necessary, have the floor leveled before attempting to install the sliding door system. Jamb bottoms should be level with the highest point of the floor - shim if necessary.

It is important to check the floor level within the path of the doors in breakout mode. The doors must not encounter any obstruction when broken out. The grade of the floor in the direction of breakout should ideally be 90° or greater, measuring from the highest point of the floor (see below).

For standard installations, the finished opening height will be 84" and the overall frame height will be 90-11/16". The overall frame width is determined based on the actual finished opening width, depending on installation type.

If mounting surface is not plumb and square, shimming of header and/or jambs will be required for correct installation.

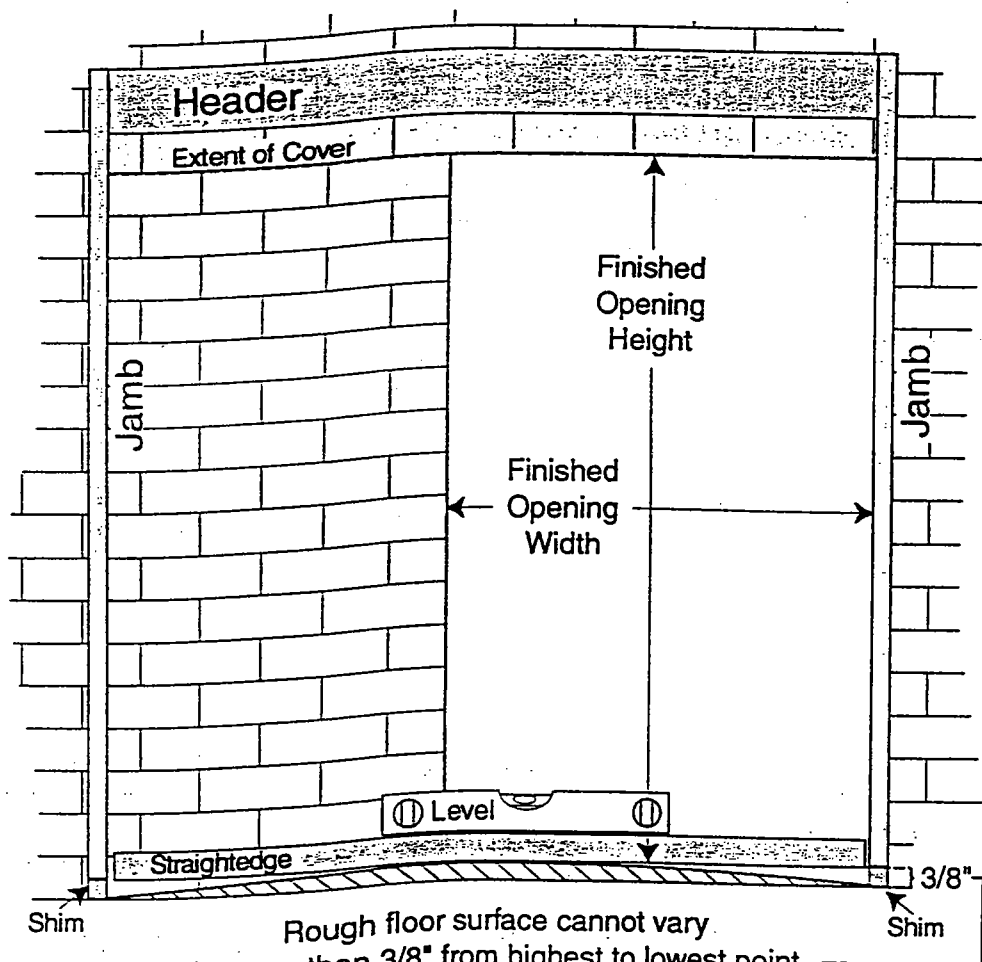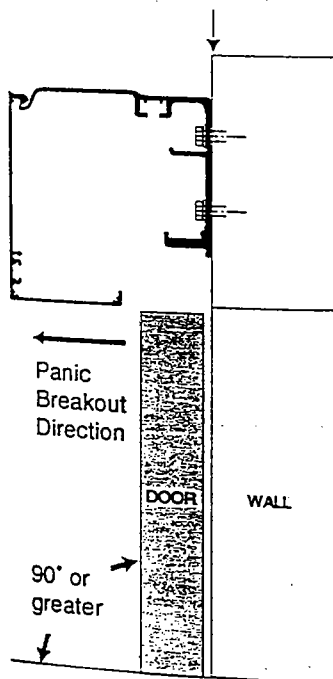


Rough floor surface cannot vary by more than $\frac{3}{8}$ " from highest to lowest point. Check with level and straightedge. (Typical single slide installation shown)

Site Preparation & Installation

Single Sliding Door Packages.

1. Determine where the latch jamb will go in the door opening. After all wall corrections or shimming have been completed (page 14), put the latch jamb only in place. Use a level on the narrow edge of the jamb and level it to the wall where it will be placed, then scribe the floor around the bottom of the jamb for ease of bracket placement. Use the overall frame width measurement and measure from the outside scribe mark across the opening to find the other jamb location. Level the other jamb and scribe around the bottom as described above.
2. Center the floor bracket inside of the scribe marks, leaving an equal $1/8"$ between the bracket and marks all the way around. On 6" jambs, center the bracket to the $1-3/4"$ outside face of the jamb, this time leaving the $1/8"$ clearance around three sides. Secure the brackets to the floor using at least two anchors.
3. Inspect the header and wall to determine the best mounting pattern of the fasteners. Transfer that pattern to the header and prep accordingly. Install the jambs to the header. Tilt the package in place, setting the jambs first on the floor-mounted bracket previously installed. Level and square the package, then fasten through the header into the wall.
4. Recheck the jambs, using a level on the outside and inside of each jamb, and the header. If the header and jambs are truly square, the top jamb to jamb and bottom jamb to jamb measurement should be identical. If necessary, strings can be taped from corner to corner on the outside of the jambs. The strings should cross in the center of the door opening, slightly touching each other. If there is a gap between the strings or the strings are pushing against each other, then the package is twisted and needs adjustment before proceeding.

Note: The header and jambs must be plumb and square to ensure a proper installation.

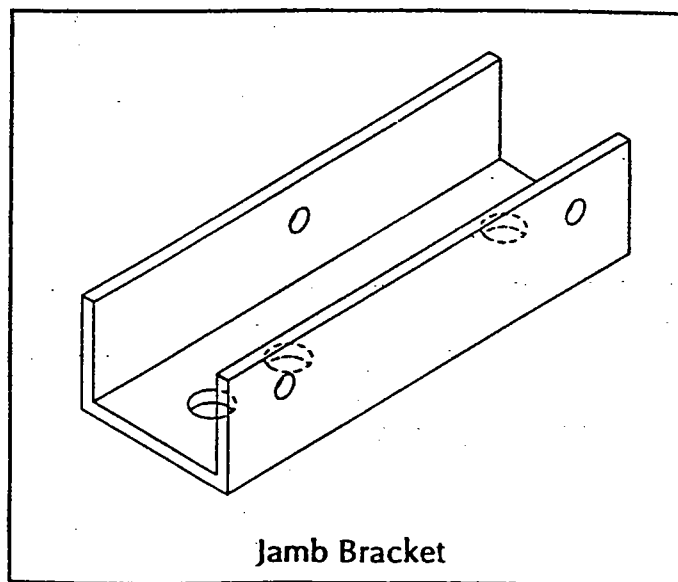


Site Preparation & Installation

Bi-Part Sliding Door Packages.

1. Determine where the center of the door opening will be. Divide the overall frame width measurement by half. Use that figure from the center of the opening to the right and left of where the package will be installed, and mark the floor where the jambs will be set. After all corrections or shimming has been completed to the wall put one jamb only to the inside of the mark. Use a level on the narrow edge of the jamb and level it to the wall where it will be placed, then scribe the floor around the bottom of the jamb for ease of bracket placement.
2. Center the floor bracket inside of the scribe marks, leaving an equal $1/8"$ between the bracket and marks all the way around. On 6" jambs, center the bracket to the $1-3/4"$ outside face of the jamb, this time leaving the $1/8"$ clearance around three sides. Secure the brackets to the floor using at least two anchors.
3. Inspect the header and wall to determine the best mounting pattern of the fasteners. Transfer that pattern to the header and prep accordingly. Install the jambs to the header. Tilt the package in place setting the jambs first on the floor-mounted bracket previously installed. Level and square the package then fasten through the header into the wall.
4. Recheck the jambs, using a level on the outside and inside of each jamb, and the header. If the header and jambs are truly square, the top jamb to jamb and bottom jamb to jamb measurement should be identical. If necessary, strings can be taped from corner to corner on the outside of the jambs. The strings should cross in the center of the door opening, slightly touching each other. If there is a gap between the strings or the strings are pushing against each other, than the package is twisted and needs adjustment before proceeding.

Note: The header and jambs must be plumb and square to ensure a proper installation

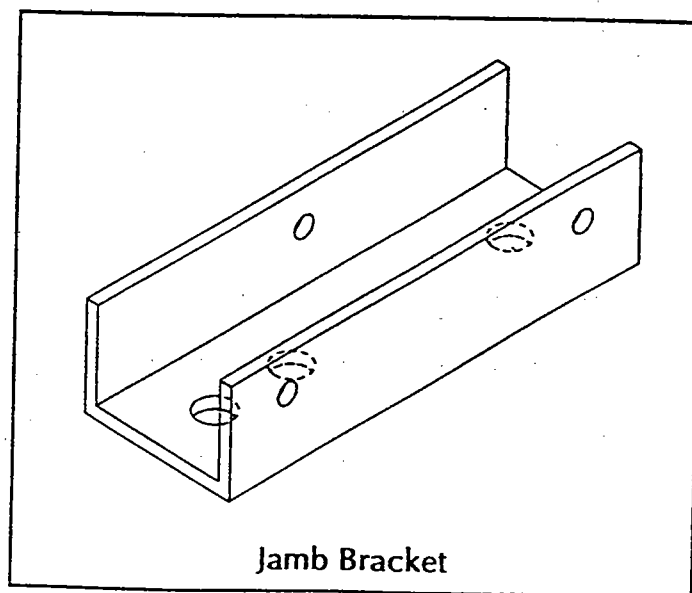

Jamb Bracket

EZ-Fit EMD II Installation


Fitting the floor guide track

Note! It is important that the floor guide track is fixed absolutely level to prevent derailment of the floor guide foot when the door is swung out.

Installation steps for floor mounted guide tracks, recess and surfaced mounted pin guide track:


- 1: Inspect the floor for conditions such as high and low spots that can cause the track to twist and rock. High spots (such as small rocks) should be removed; shim the track assembly at the low spots.
- 2: Establish a reference line by snapping a chalk line between the back edges of the two jambs. Note: Jambs must be plumb and square with the header.
- 3: Using the measurements provided (see page 18), lay the track in place. While standing on the track and keeping it in line with the chalk line, mark the holes to be drilled.
- 4: Secure the track to the floor with concrete anchors and screws, leveling it with shims from end to end. If possible, a sealant should be used under the track assembly. To check for proper leveling, measure from the top of the track to the bottom of the header, checking for the same result at each fastener.

Note: All screws must be countersunk and fully tightened to avoid interference with pivot travel.


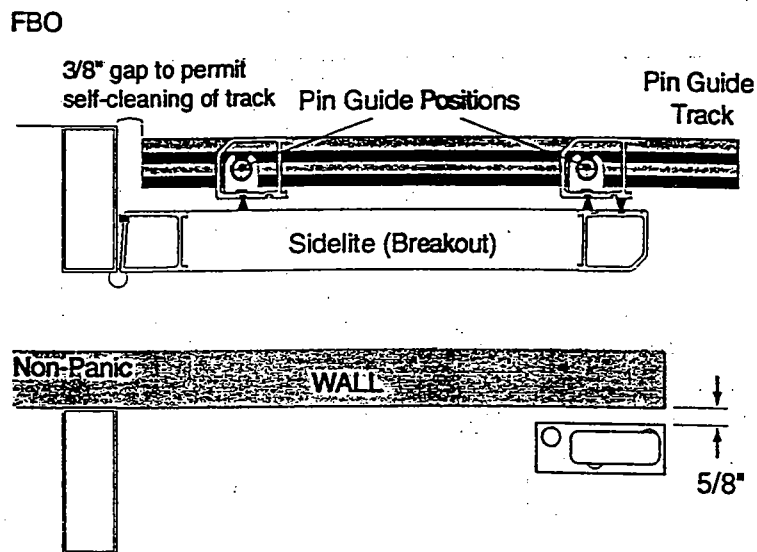


EZ-Fit EMD II Installation


Fitting the floor guide track (continued)

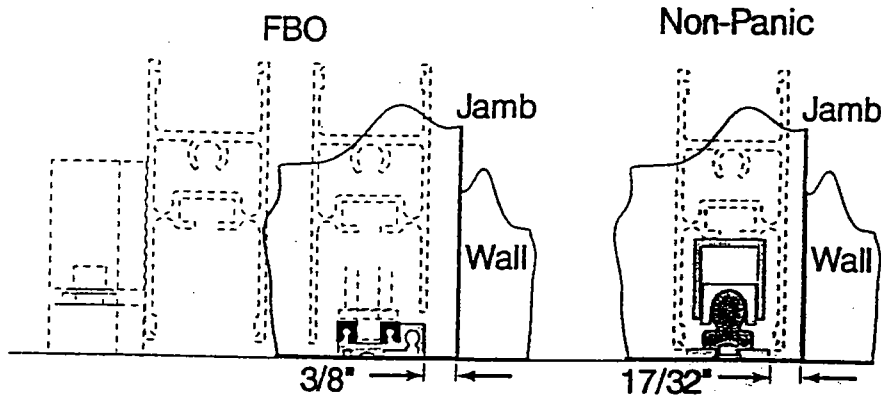

Note:
Wall/jambs are
only accurate
as reference
points when
wall/jambs are
plumb and
square.

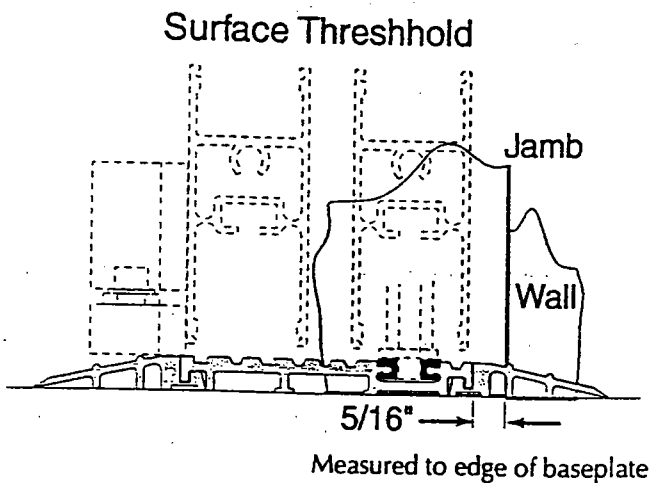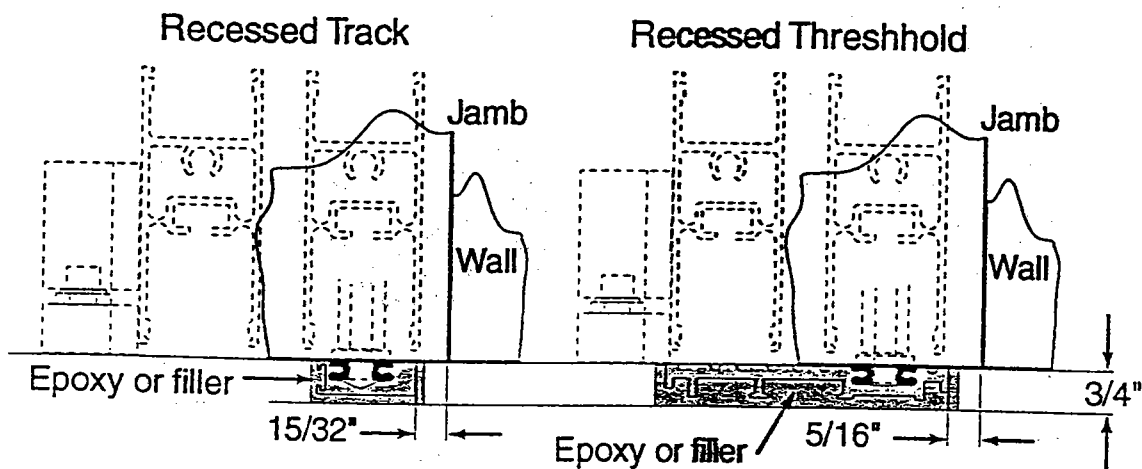


Measurements are based on Besam
4.5" width jambs.
All guides are level with jamb bottoms.

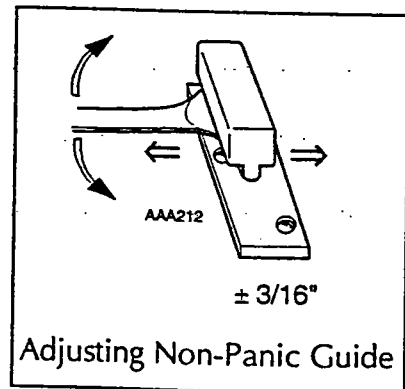

EZ-Fit EMD II Installation

Hanging the active door leaves

- 1: Loosen the stabilizing wheel lock nut and turn the wheel to its lowest position.
- 2: Loosen the carriage wheel lock nut and turn the wheel so that the punch mark is to the right of the shaft center in the middle of the semicircle marked on the fitting. Tighten the lock nut.
- 3: Ensure that the sliding track is clean. Hang the door leaf into the sliding track.
- 4: The carriage wheel shaft is eccentric and by rotating the shaft half way round the door leaf can be adjusted $3/4"$ ($\pm 3/8"$).

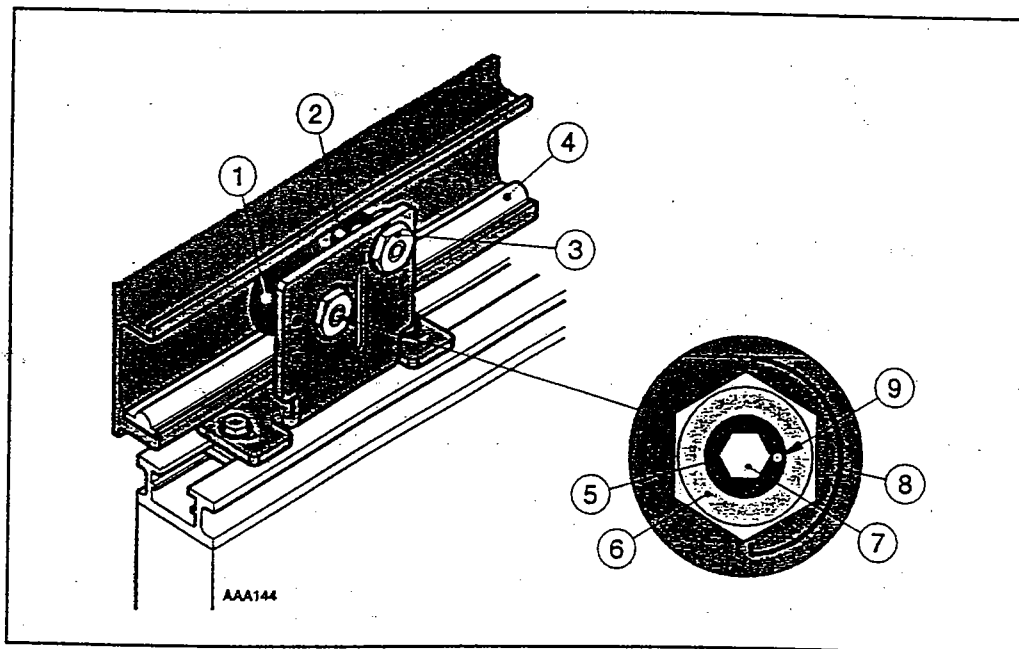


- | | |
|--------------------------------------|----------------------|
| ① Carriage wheel | ⑥ Lock nut |
| ② Stabilizing wheel | ⑦ Hole for Allen key |
| ③ Lock nut for the stabilizing wheel | ⑧ Semicircle |
| ④ Sliding track | ⑨ Punch mark |
| ⑤ Carriage wheel shaft | |

EZ-Fit EMD II Installation – Pin Guides

Setting the active leaf pin guide pivot.

With the door positioned so that the carriage wheels are riding on the plastic track in the header beam, cut and remove the elastic band holding the pin guide and washer. Push the pin guide up into the door and set the pin guide with washer into the floor track (if pin guide does not move vertically, loosen the set screw). Proceed to adjust the door as instructed on pages 22-24. Spring tension has been factory adjusted; it may be changed to ensure that pin stays engaged in track. Readjustment requires removing the pivot from the door and adjusting the threaded slug.

Note: For security, the pin guide must be locked at its highest point of travel along the floor track, using the set screw.

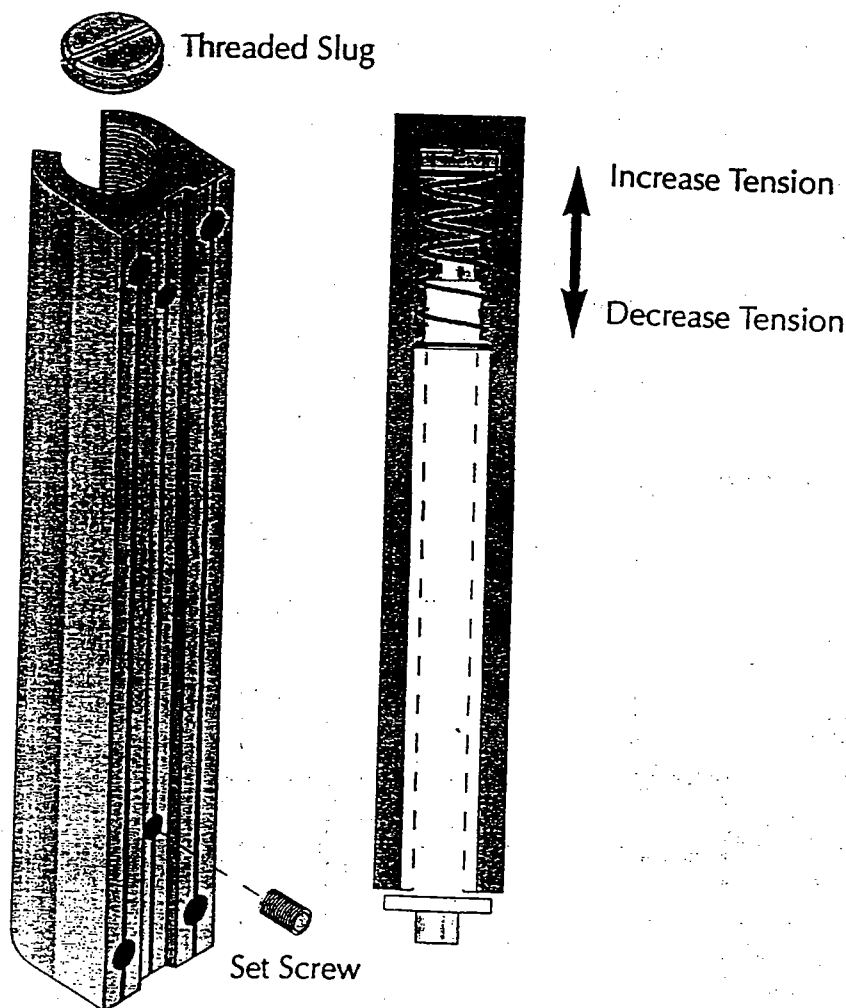


EZ-Fit EMD II Installation

Full breakout sidelite installation procedure, EMD II, EZ-Fit:

- 1: The active leaf doors and tracks must first be installed and adjusted (pages 17-20, 22-24).
- 2: Install and level any thresholds and tracks (surface or recessed) before installing door panels.
- 3: Mount the receiver section of the security hinges to the back face of the vertical styles, remembering that the hinges are handed. The 1/8th inch spacer will go between the hinge "shaft portion" and the jamb.
- 4: Set the door in place, keeping 1/16th of a gap between the back of the door and the jamb and between the top of the door and header. Use shims under the door and engage the ball catch to lift door in place.
- 5: With the door squared, line up the hinges and spacers against the jamb tube and mark the three holes on each hinge. Prep the jamb by drilling 11/32" holes and countersink to accept the supplied rivnuts.
- 6: Install rivnuts and fasten hinge and spacers in place with the security hardware provided. Apply trim plates to hinge surface to conceal screws.
- 7: Check all clearances and make adjustments to the breakout latch as per page 26.
- 8: After all sidelite panels are properly set, make final adjustments to properly align all four panels.

Stationary panel installation procedure, EMD II, EZ-Fit:

- 1: The active leaf doors and tracks must first be installed and adjusted (pages 17-20, 22-24).
- 2: Install and level any thresholds and tracks (surface or recessed) before installing door panels.
- 3: Check opening to confirm size and that it is square, then sit door panel in the opening and level.
- 4: Make marks along the bottom and top of the door panel for the "C" channel placement.
- 5: Place the channel along the line you marked leaving 1/8th inch gap between the line and the channel. Perform this procedure for the top and bottom channels.
- 6: Secure channels to opening and slide door panel into place.
- 7: Check all clearances and make adjustments to the panel as needed.
- 8: Secure the panel to the channel using pan head screws through the side of the door into the channel.

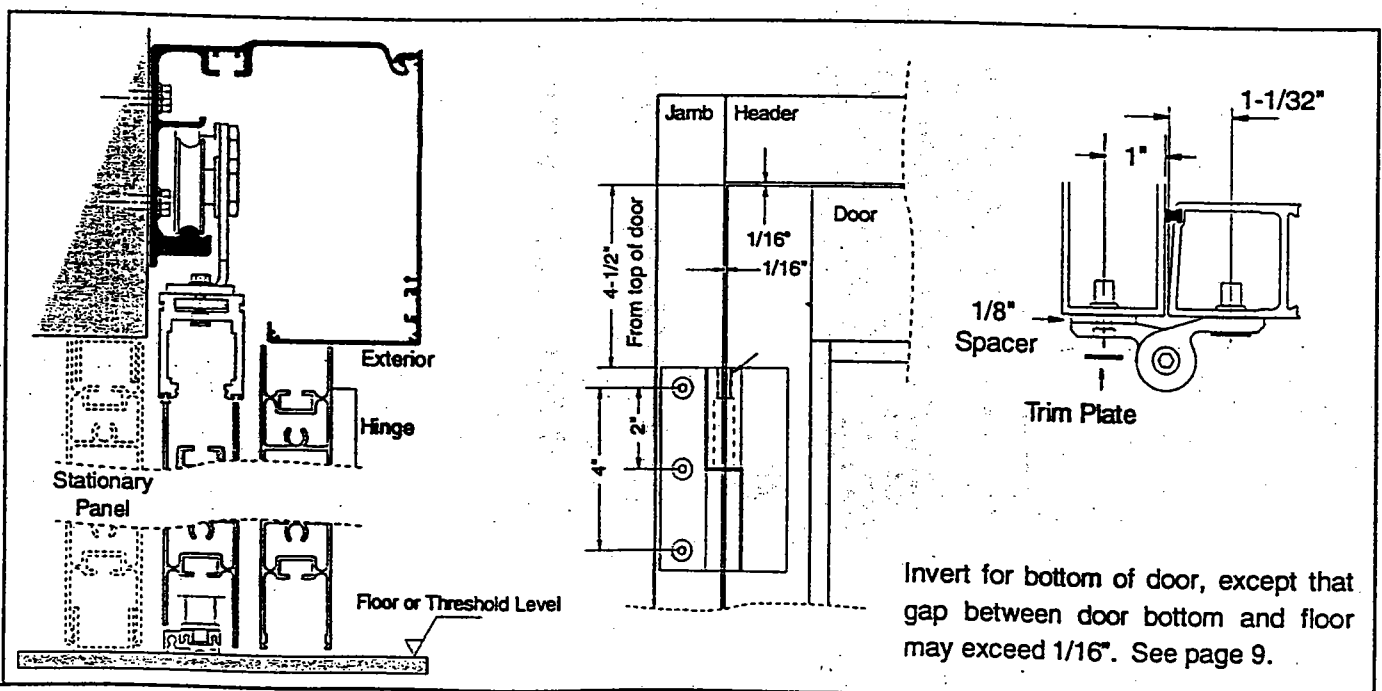


EZ-Fit EMD II Installation

Height adjustment

Insert a 5/16" Allen key in the hexagonal hole on the carriage wheel. Loosen the lock nut and turn the key until the door leaf is about 3/16" above the floor. Tighten the lock nut. Both carriage wheels should be adjusted in the same way. Make sure that the punch mark on the carriage wheel shaft is to the right of the shaft center within the semicircle; a condition necessary for self-locking of the wheels.

Note: It is very important that the door leaf hangs vertically after the adjustment and that bi-parting doors are parallel in the closed position.

If weather stripping is used on the lower edge of the door leaf, it should only lightly touch the floor. Check that the door leaf is parallel with the sidelite.

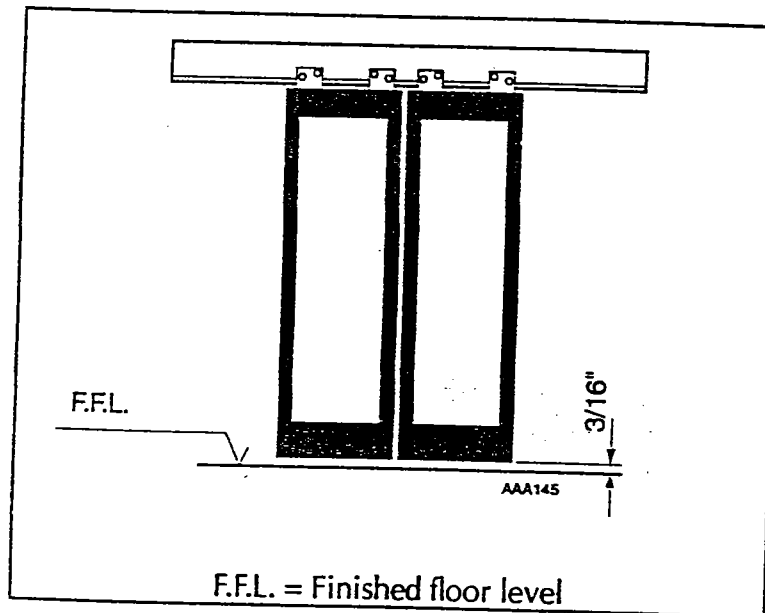


EZ-Fit EMD II Installation

Adjustment of the anti-riser wheel

- 1: Insert an 5/16" Allen key in the hexagonal hole and turn the key clockwise until the anti-riser wheel is in contact with the underside of the flange of the header.
- 2: Lower the wheel approx. 1/32" and tighten the lock nut (about the thickness of a matchbook cover). Make sure that the punch mark on the stabilizing wheel shaft is to the left of the shaft center within the semicircle marked on the fitting; a condition necessary for self-locking of the wheel after final adjustment. Both anti-riser wheels should be adjusted in the same way. The anti-riser wheels should spin freely without touching the header flange.


Note! Check that the clearance is consistent for the complete travel of each active door panel.

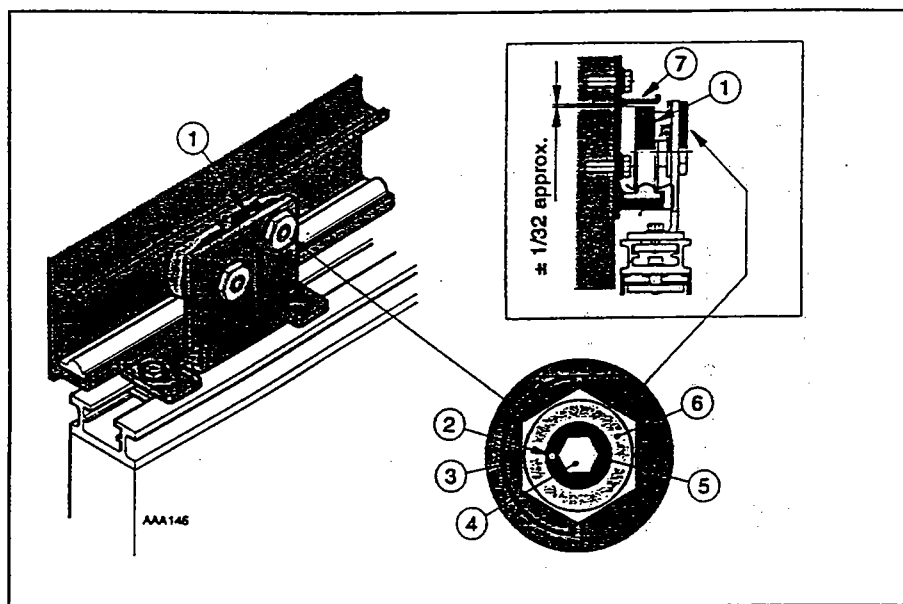

- ① Anti-Riser Wheel
- ② Punch Mark
- ③ Semicircle
- ④ Hole for Allen Key
- ⑤ Anti-Riser Wheel Shaft
- ⑥ Lock Nut
- ⑦ Header Flange

CAUTION: The trailing edge must be adjusted as follows to avoid finger traps:

Push the doors by hand to the desired opening. In the case of framed doors, the lead edge of the door leaf must not pass the vertical rail of the sidelite leaf, but must stop at least 1" before to avoid finger traps. Loosen the door stops, move them in against the carriage wheel fittings and tighten firmly. (If pocketed doors are used, this is not required.)

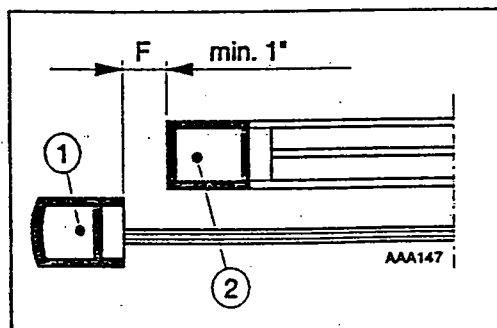

- F= Safety distance
- ① Door leaf
- ② Sidelite

EZ-Fit EMD II Installation

Depth adjustment


1. The distance A, between the top of the door leaf and the sidelite, is to be adjusted by loosening the two screws connecting the carriage wheel fitting to the door carrier. The holes in the carriage wheel fitting are slotted and the door leaf/carrier can be adjusted $\pm 3/16"$ (3 mm) left to right.

Note! Make sure that the carriage wheel fitting is completely parallel with the door carrier.

2. The distance B is to be adjusted when placing the pin guide track during installation, and should not require changes.

Note! For non-panic guides, distance B is adjusted via the eccentric nut on the floor guide (see page 18).


3. If weather stripping is used between the door leaf and the sidelite, it should seal equally for the total vertical height.

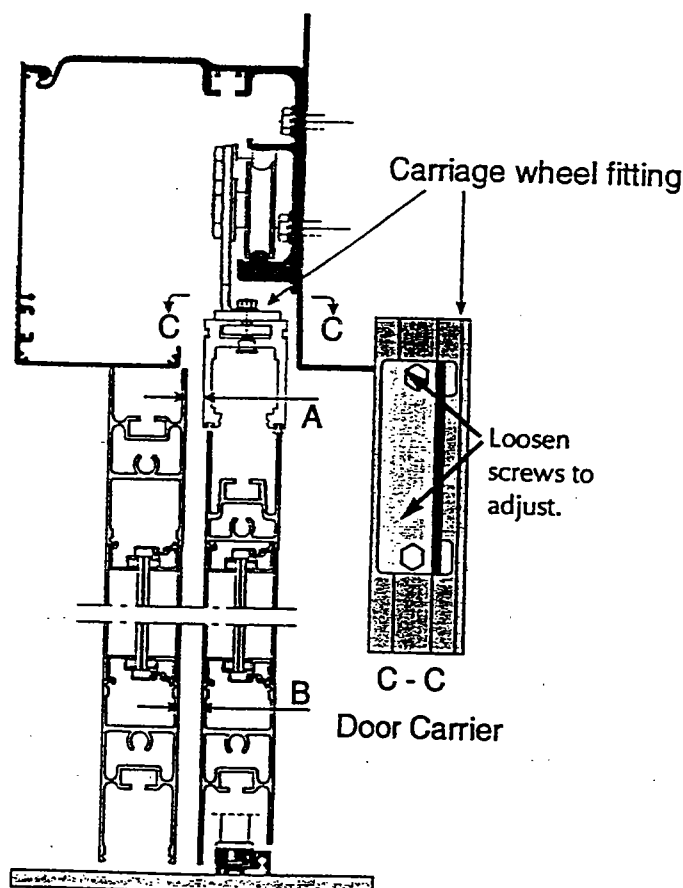

EZ-Fit EMD II Installation

Interlocks for FBO units

Slide the active leaf(s) into the closed position and check to see that the interlock hardware engages the sidelite cutouts. Adjust and shim if necessary for proper alignment.

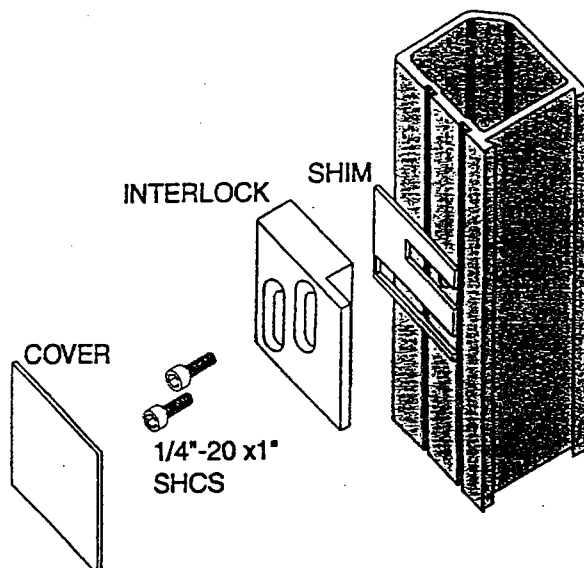


EZ-Fit EMD II Installation

Adjusting ball catches

Check that the sidelite door assembly engages properly with the sidelite header assembly. Both can be repositioned slightly if necessary. Adjust the tension on the ballcatch by turning the adjustment screw, as required by local egress codes. Secure ball detent with set screw after making adjustments. Tension is not to exceed 50 lbs. breakout force; see page 63 for ANSI/BHMA standards.

Active Leaf Ballcatch

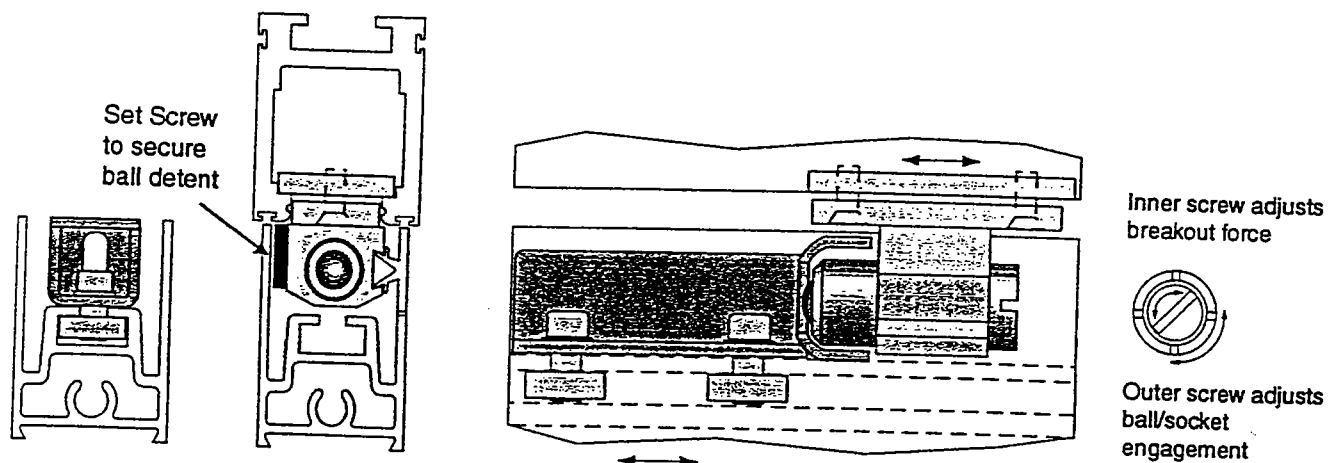

EZ-Fit EMD II Installation

Drive units


There are three types of drive module: DA, DAS, and DB. The DAS is a special short-stroke module. Module applications are shown in the table below. Part numbers under "Extra Wide" are to be used in addition to standard DA part numbers listed in the table.

Each controller (CUD-9, CUJ-9) has a special version (designated CUD-9S or CUJ-9S) for the DAS module. A standard controller can be altered to the special version by changing the processor - see page 72.

Besam	Max OFW	Max Door Leaf Travel	Drive module	/w/ CUD-9 (S)	/w/ CUJ-9 (S)
Bi-Part	9'	< 26-5/8" ²	DAS	P/N 500329	P/N 500331
	15'	39" ²	DA	P/N 500194	P/N 500063
	21'	59" ¹	DB	P/N 500195	P/N 500064
Single	7' 6"	39" ²	DA	P/N 500194	P/N 500063
Slide	10' 6"	59" ¹	DB	P/N 500195	P/N 500064
Extra	12' 9"	70" ²	DA + TED	TED P/N 549849	
Wide	20' 9"	118" ³	DA + TED-SPEC	TED-SPEC P/N 549850	

- 1) 10.5" transmission rod P/N 04-03-548468
- 2) 33.5" transmission rod P/N 04-03-548467
- 3) 44" transmission rod P/N 04-03-548694

(For Door Leaf Travel > 102, 44" transmission rod required)

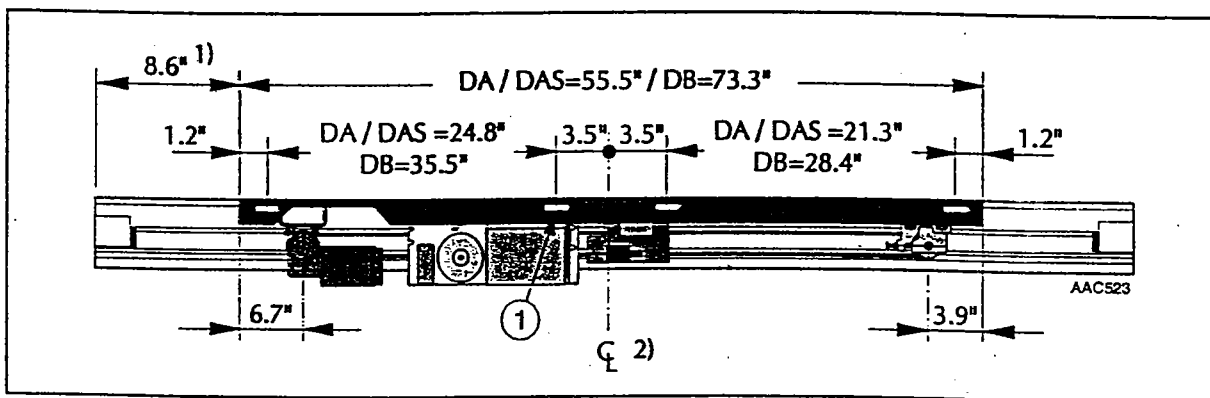



- ① Bracket (4 pcs)
- ⌒ header center line
- 1) To be used when positioning the brackets for single-sliding operators
- 2) To be used when positioning the brackets for bi-parting operators

EZ-Fit EMD II Installation

Installation of drive units

Hang the drive unit on the four brackets and fasten it with screws and washers with a metric Allen wrench.

If the accessory device TED/TED-SPEC is used, the tension wheel fitting has to be removed from the drive module and mounted in the TED/TED-SPEC bracket. The whole unit with a new longer tooth belt should then be fitted to the support beam.

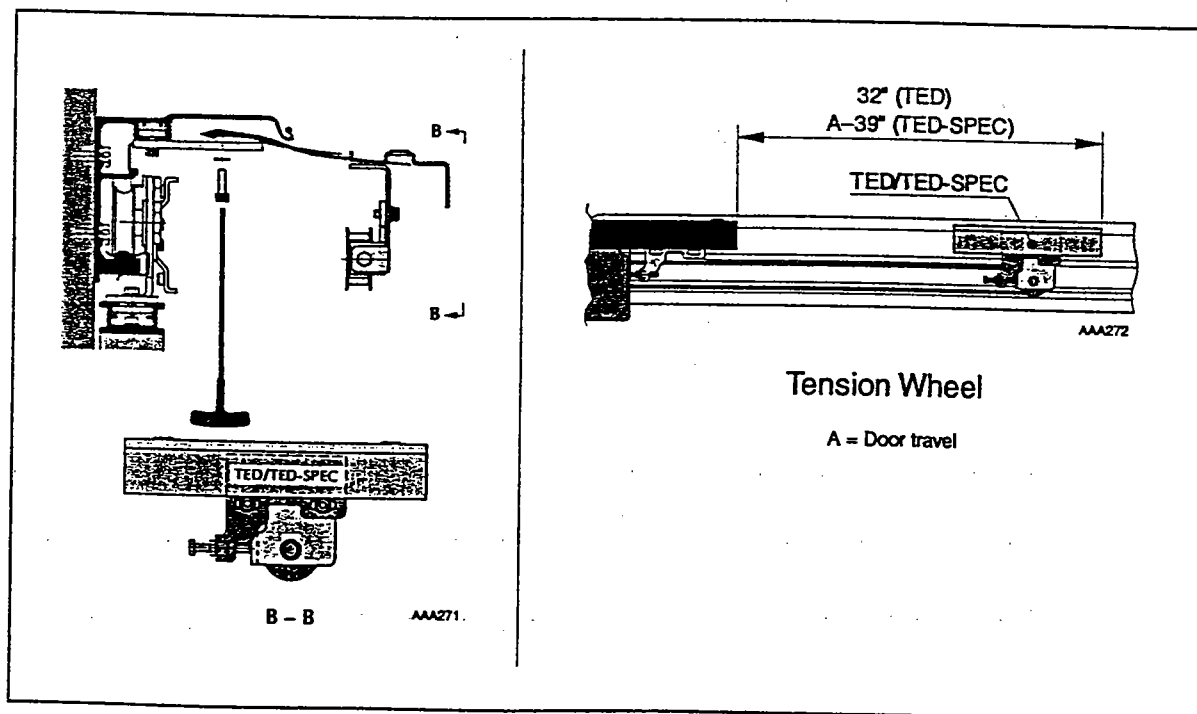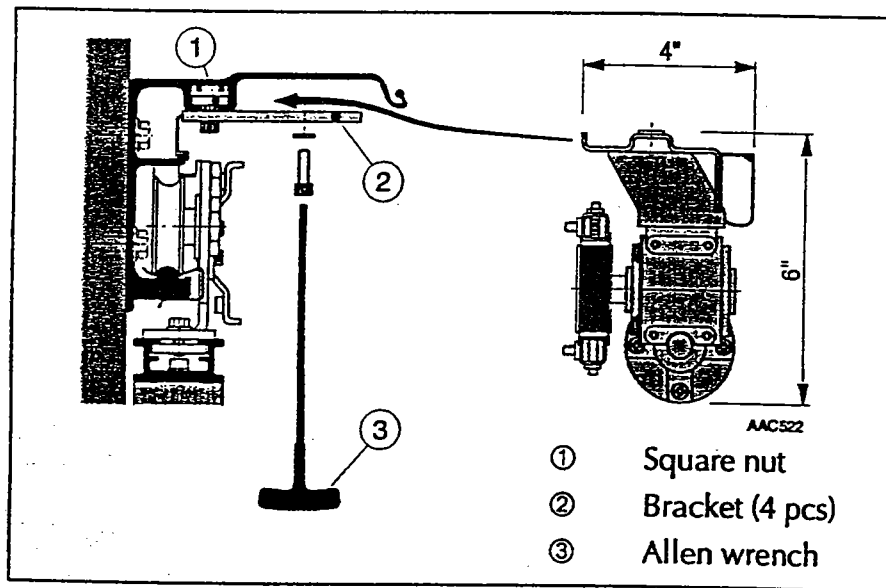


EZ-Fit EMD II Installation

Checking and adjusting the belt tension

Correct belt tension is checked in the following way:

- 1: Dismantle the lower transmission rod (applies only to Besam EMD-2).
- 2: Make a hook of a steel wire, or similar, to hang around the belt.
- 3: Hang, by means of the hook, the 28 mm combination wrench used for adjustment of the carriage and stabilizing wheels, exactly in the middle of the belt.
- 4: Measure the sag (S) and adjust the belt tension if necessary.

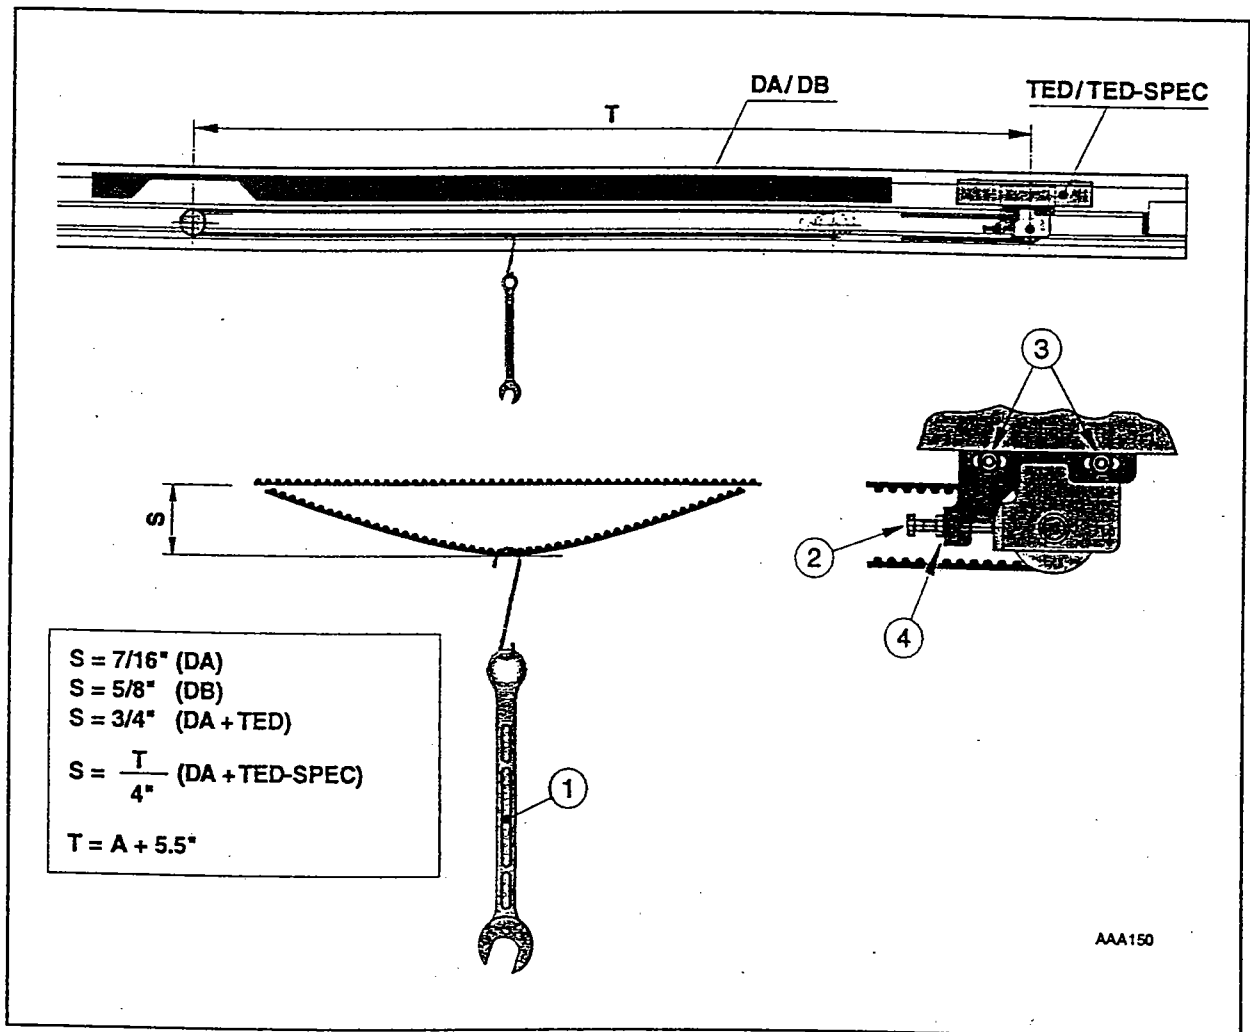

A= Door travel

- ① 28 mm combination wrench. Art. No. 738366 (Weight approx. 1.25 lb.)
- ② Belt adjustment screw
- ③ Fastening screws
- ④ Lock nut

EZ-Fit EMD II Installation



Attachment of tooth belt brackets and transmission rod(s)

When standard operator sizes are shipped, one end of the transmission rod is screwed and the other end strapped to the tooth belt.

- 1: Cut the shipping strap open and pull the tooth belt so that the transmission rod is accessible.
- 2: Attach the two rectangular washers to the tooth belt bracket, using two Allen screws.
- 3: Slide the unit into the transmission rod with one rectangular washer inside and the other one outside the rod.
- 4: Adjust the unit so that the screws are accessible through the slotted holes in the rod. Do not tighten the screws firmly, because of later adjustment.
- 5: **Bi-parting operators:** Push the doors together and slide them until their meeting point is aligned with the center of the daylight opening.


Single-sliding operators: Slide the door to the closed position.

- 6: Pull the tooth belt until the tooth belt bracket is just opposite the carrier bracket. Adjust the transmission rod if necessary and tighten the Allen screws through the slotted hole(s).
- 7: Fix the tooth belt bracket to the carrier bracket by using two screws and one rectangular nut. Adjust so that the upper and lower parts of the tooth belt are parallel and tighten the screws.
- 8: Check that the transmission rod, viewed from the side, is completely in line with the tooth belt. If necessary adjust the carrier bracket depthwise.

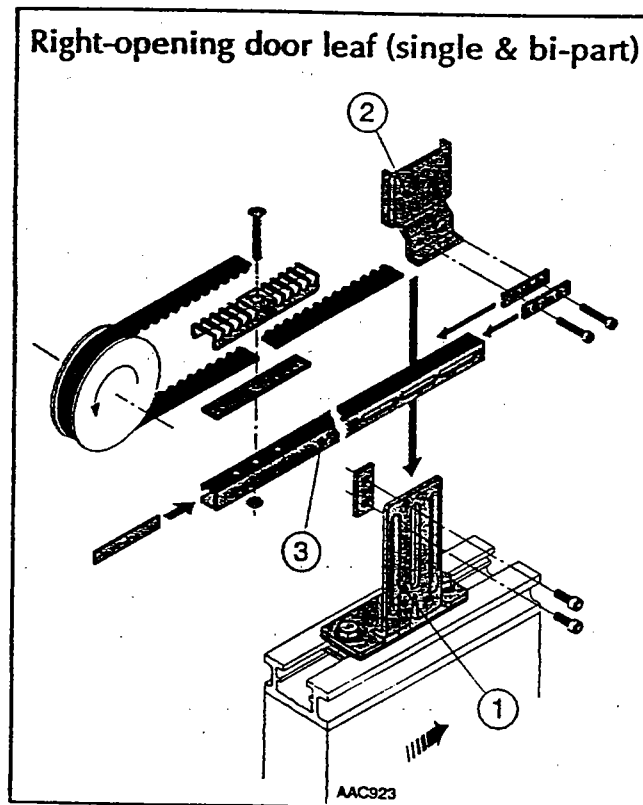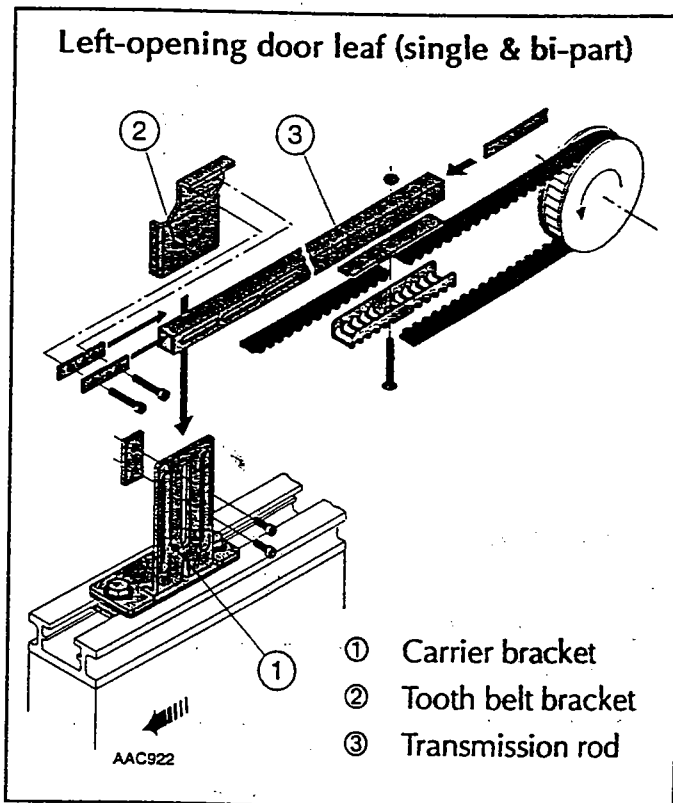


EZ-Fit EMD II Installation

Manual lock system adjustments and re-keying

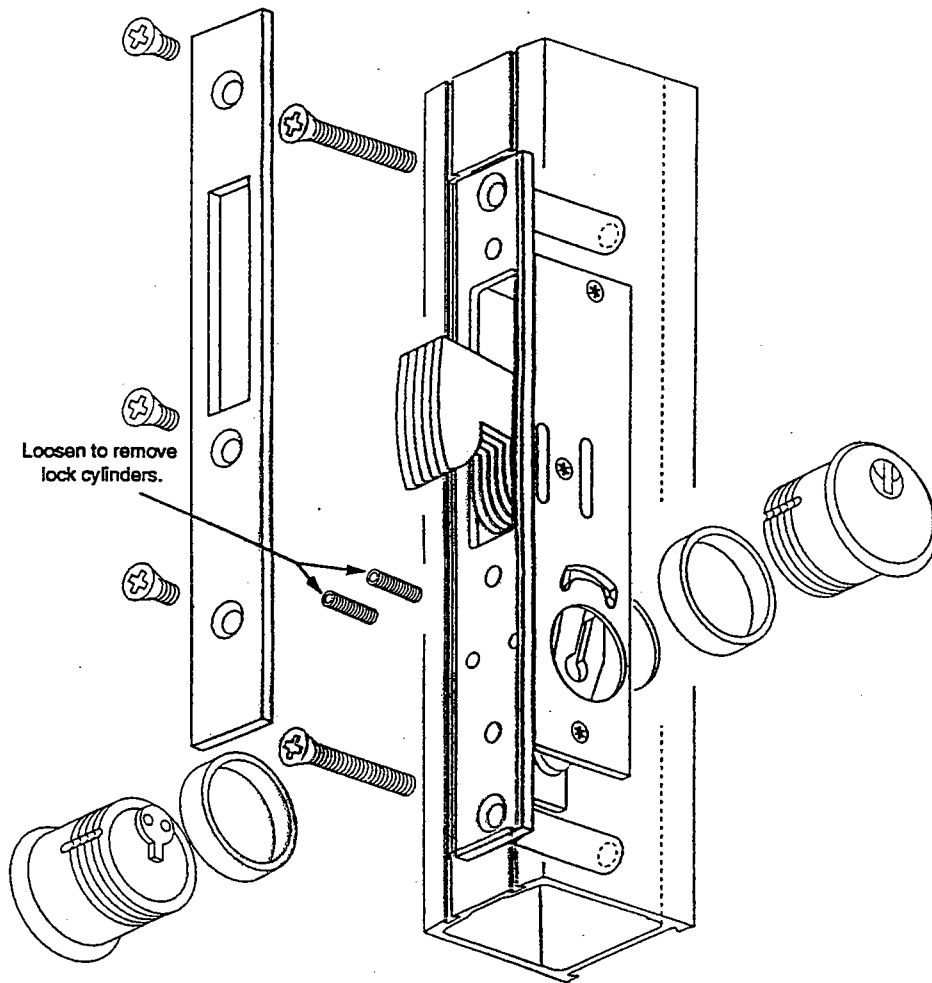

Single Slide (Key side shown).
One point locking.

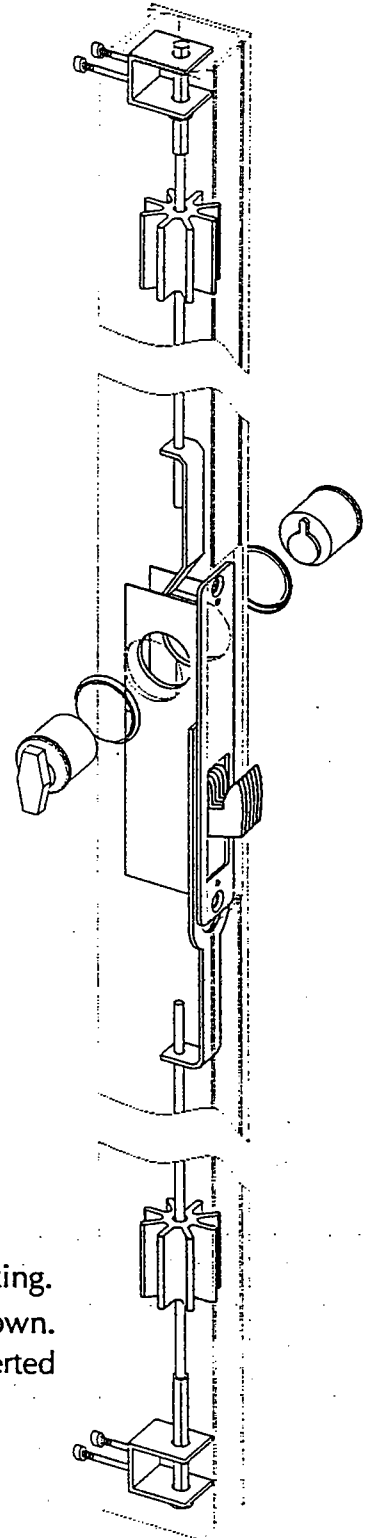


Bi-Part with Lock Rods.
Two or Three Point Locking.
(Thumb-turn side shown.
Lock mechanism is inverted
on Bi-Part doors.)

EZ-Fit EMD II Installation

Installing the cover

- 1: Two cover brackets are always mounted in the header. For bi-parting operators with door travel > 78-3/4", a third cover bracket is mounted in the drive unit in the middle of the door opening
- 2: The cover is fixed by means of pre-mounted spring-loaded cover locks. The cover locks are slid over a special flange in the lower part of the cover and positioned as indicated below.
- 3: Fit the upper part of the cover into the hinge and push it in against the cover brackets.
- 4: The cover locks will engage around the lower part of the brackets (see below).
- 5: Connect the ground cable to the cover and connect the program selector, if installed.

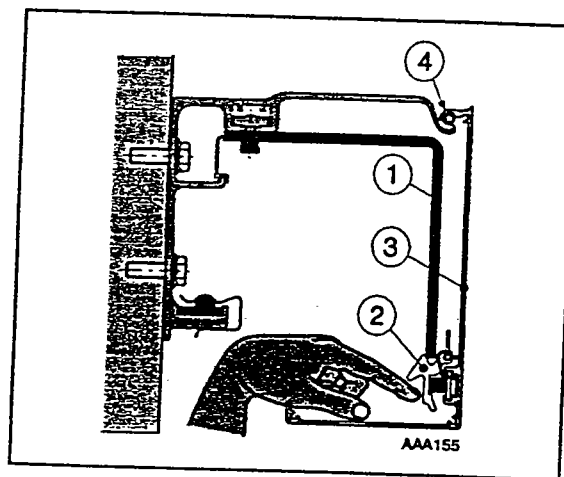


- ① Cover bracket
- ② Cover lock
- ③ Cover
- ④ Plastic tube


EZ-Fit EMD II Installation

Opening / Removing The Cover

- 1: Set the program selector (if fitted) to the "open" position and close the doors manually to half open position.
- 2: Reach into the bottom of the cover and push on the cover lock. At the same time pull the lower part of the cover outward until the cover is released from the cover lock. Repeat this procedure for all cover locks (two or three).
- 3: Disconnect the ground cable and the program selector, if necessary.
- 4: Pull the bottom of the cover out about 10°. The cover can now be lifted off at the hinge joint or swung fully out, with a support (such as a screwdriver) used to keep it open.

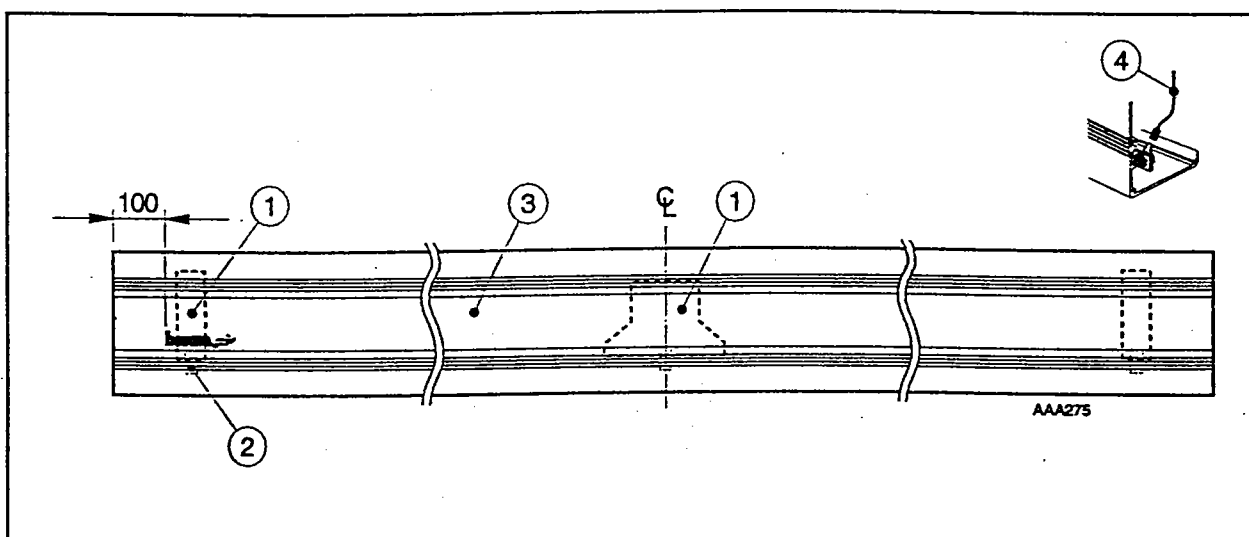


- ① Cover bracket (2 or 3 pcs)
- ② Cover lock (2 or 3 pcs)
- ③ Cover
- ④ Ground cable

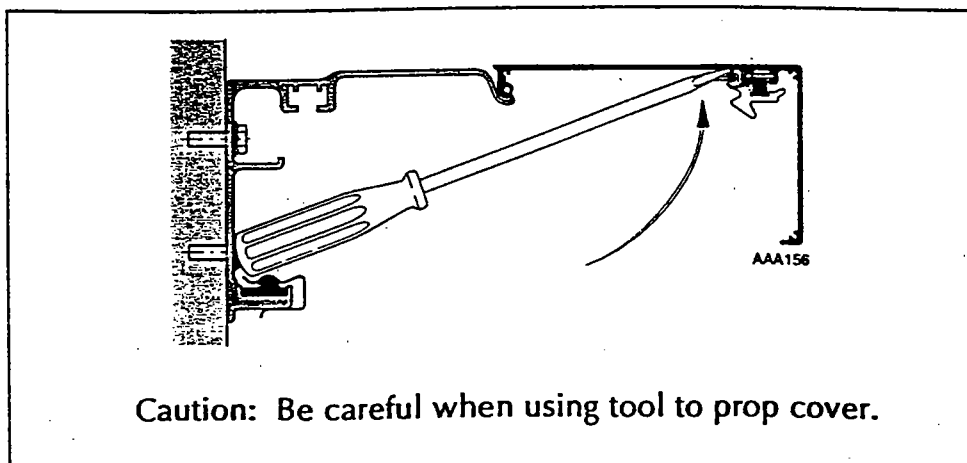

EZ-Fit EMD II Installation

Lock Configuration

During any power interruption the fail-secure lock is de-energized and locked, securing door(s) in closed position. The battery pack allows doors to close and lock after power has been cut to the package. The fail secure lock is standard; A fail safe lock may be ordered, or reconfigured from the fail secure lock as shown below.

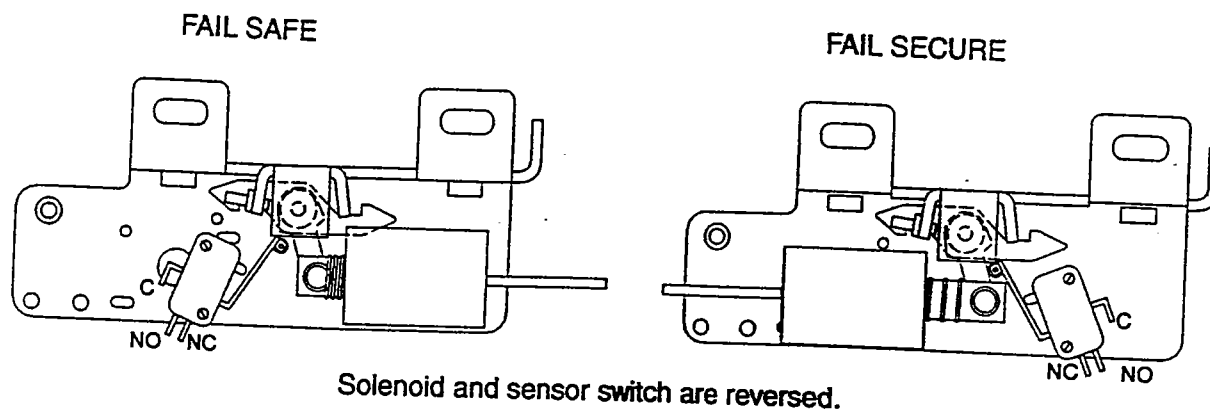

Electrical connections

CAUTION!


During any work with the electrical connections the

- mains power and the
- backup battery must be disconnected.

Note! The activation units and the backup battery are not to be connected until the adjustment of speeds, etc. has been carried out. (Tip: Make electrical connections to the control unit's terminal blocks, and unplug the terminal block sections until adjustments are made. To cycle the door while adjusting speeds, use the PMD button 'T' to generate an opening impulse.

Control Unit – CUD-9 (CUD-9S)


Connection of units and accessories - CUD-9, PMD programmable

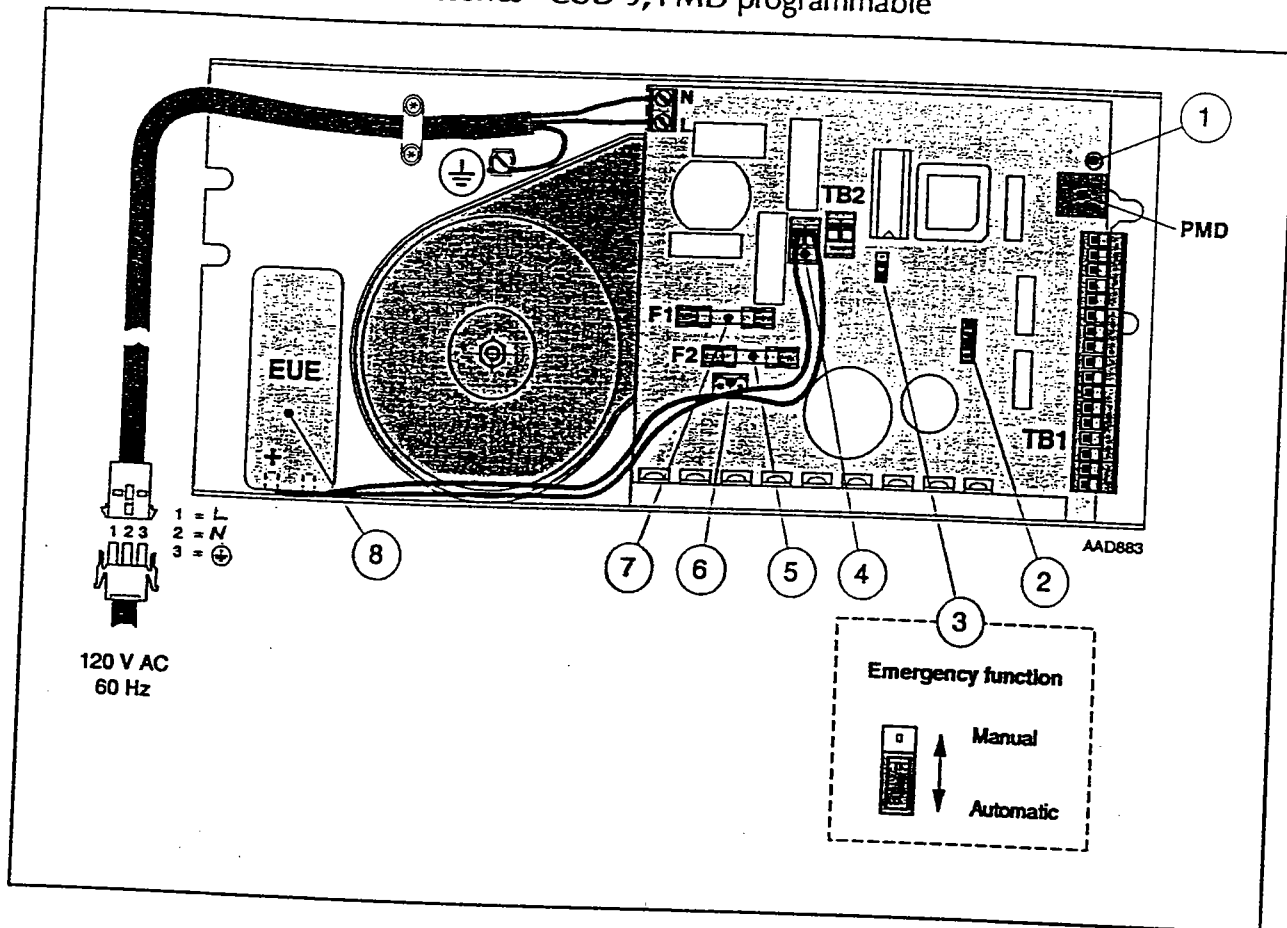

- ① LED; Power on = Fixed light
Error indication = Flashing light
 - ② Connector for revolution counter
 - ③ Selection of automatic or manual emergency function
 - ④ Connector for emergency battery pack
 - ⑤ Control fuse 2.0 Amp (F2)
 - ⑥ Connector for motor
 - ⑦ Motor fuse 5.0 Amp (F1)
 - ⑧ Emergency unit (Battery Pack - Optional)
- TB1/TB2 = Terminal blocks

Note: All instructions in this manual for the CUD-9 controller are valid for the short stroke version, CUD-9S.

Wiring The CUD-9 (CUD-9S)

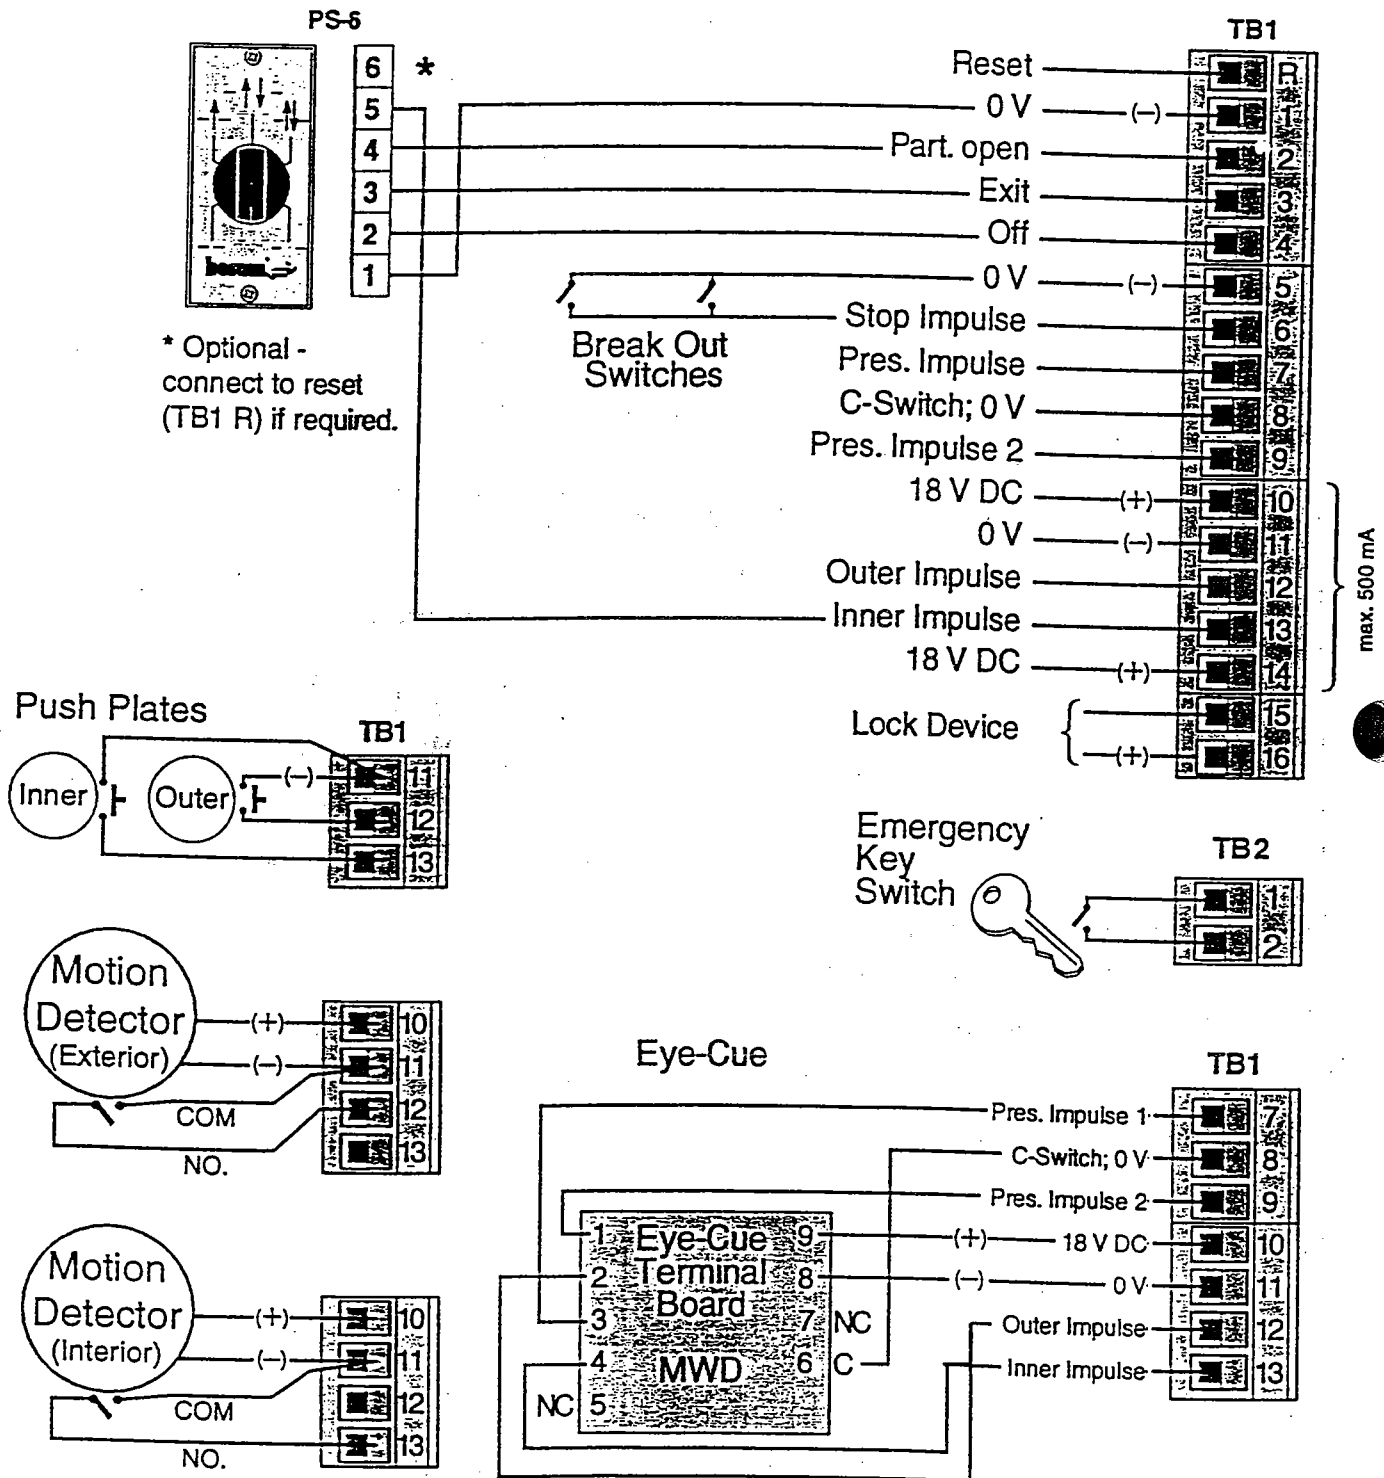

Adjusting The CUD-9 (CUD-9S)

CAUTION!


The EZ-Fit EMD II, when installed and set up correctly, is a safe automatic power door operator, but incorrect settings can defeat its purpose and create a safety hazard. For safety reasons, never set the opening or closing speed faster than necessary to handle the traffic situation through your door. Please refer to the ANSI/BHMA A156.10 - 1999 excerpt in this manual (page 63).

The start-up and adjustment must be carried out in the following order:

- 1: Connect the mains power.
- 2: Plug the PMD contact into the CUD 9 control unit and enter your PIN code, if required (see page 39).

Note! The PMD is not ready for use until a status or error code is displayed.

- 3: Press PMD button No. 5 (Auto).
- 4: Press the impulse button I. The operator carries out an open/ close cycle with the factory preset values. (If the motor closes instead of opens, the motor direction, function 27, has to be changed.)
- 5: If necessary, adjust the door functions to a satisfactory performance.
- 6: Install activation units and accessories, tune all sensors, and check breakout function.
- 7: Check that the installation complies with valid regulations and requirements of ANSI/BHMA A156.10-1999 (reference given on page 63 of this manual.)
- 8: Unplug the PMD.

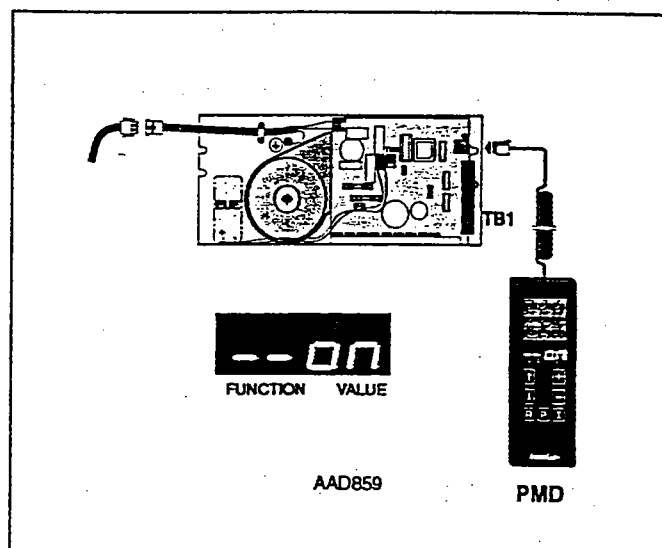

Introduction To PMD

The programming module PMD is used to program the operating values into the control units.

The PMD has a limited service life. A countdown is made at every connection and the remaining "value" is shown on the display. When the figures "-- 71" are shown, the PMD is unusable and must be updated.

PMD models:

PMDB Service life: 2000 connections.

PMDC Service life: 400 connections.

PMDE Customer version with restricted use. Service life: 400 connections.

PIN-code

Note: Some older PMDs are factory programmed with the PIN-code "1234". Follow the instructions below with an older unit. PMDs of version 19 or newer do not require a pin code.

1. Connect the PMD to the control unit.
2. "Pin_" with a flashing dash will be shown on the display.
3. If no personal PIN-code has been set, enter the factory default code "1234". Every entered digit will be indicated with a dash "_" on the display.

Note: After five unsuccessful attempts to enter the correct PIN-code the error code "71" will be displayed. This means that the PMD is unusable and must be returned to be updated.

4. Push the button "P".
5. The display will consecutively show:
 - a) Type of control unit; e.g. CUD or CUP.
 - b) Remaining "value" of the service life.
 - c) "00".
 - d) Actual status or error code; e.g. "on".

The factory pre-programmed PIN-code can be changed to a personal code as follows:

1. Carry out the instructions 1-5 under "PIN-code" above.
2. Select function "30", value "b".
3. Push the button "P".
4. The display will show four flashing dashes " _ _ _ _".
5. Enter your personal code (four digits). Every entered digit will be shown on the display.

Note: If a wrong digit is entered, disconnect and reconnect the PMD and start from the beginning with the factory pre-programmed PIN-code.

6. Push the button "P".
7. "Pin_" with a flashing dash will be shown on the display.
8. Enter your "personal code" and push "P" once more to confirm that the correct code was entered.

Note: It is not possible to revert to old codes if you have forgotten the new one. If a mistake was made during the programming the PMD will revert to step 4 (" _ _ _ _").

PMD – Push Button Set




Function buttons



These buttons are used to set or check* the functions (01-99) for speed, hold open time, monitoring, and so on. The up and down arrow buttons increase and decrease the number by one digit. If the button is held down for more than 1 second, the function number will be increased/decreased every 0.1 second. When the final function (99) has been reached, the digits will roll over to function 01 and start again.

* *Note! When selecting any of these functions, the last value programmed into the control unit will be displayed, except for function 99, where value 01 will always be displayed.*

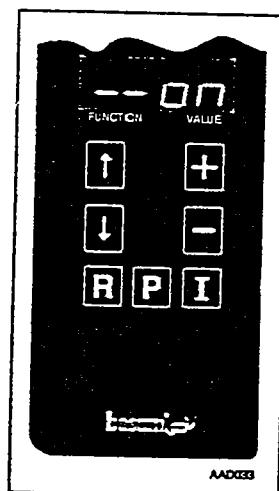

Value buttons



These buttons are used to set the value for the selected function. The plus and minus buttons increase and decrease the value by one digit. If the button is held down for more than 1 second, the value will be increased/decreased every 0.1 second. When the end value has been reached the digits will roll over and start again.



Program button

This button is used to program the control unit with the function and value selected on the PMD. To indicate that data have been transferred into the control unit, the display will blank (fractions of a second) and then show the selected digits.



Impulse button

This button is used to give an opening impulse to the operator. If the button is held down, an impulse is given every 0.2 seconds.



Reset button

This button is used to reset the control unit. Hold the button down for about 2 seconds to reset.

Function display

When a FUNCTION button is depressed, the latest function used will be presented on the function display. If no function has been selected previously, the function "01" will be shown. If the FUNCTION and VALUE buttons are not activated for 5 s, the display will show "--".

Value display

The VALUE display shows the value for the selected function. If the FUNCTION and VALUE buttons are not activated for 5 s, the VALUE display will show the present status or error code for the operator.

Back


 
 
 
 
 

 
 
The function description card on the back of the PMD is reversible. The green side is to be used when adjusting sliding doors and the blue side when adjusting swing doors.


PMD – Program Selection

Program selector (green push-button set to be used)

Buttons 1-4 control necessary functions of the operator. The PMD will override the settings of the program selector, if installed. The program selector will resume function about 30 seconds after the PMD is removed.

Settings

- | | | |
|---|----------------|--|
| 1.  | "Off" | The door is closed. |
| 2.  | "Exit partial" | Exit only, the door opens partially. |
| 3.  | "Exit" | Exit only, the door opens fully. |
| 4.  | "Auto partial" | The door opens partially with inner and outer activation units. |
| 5.  | "Auto" | The door opens fully with inner and outer activation units. |
| 6.  | "Auto width" | The door selects full or partial opening depending on the volume of traffic. |
| 7.  | "Open partial" | The door is permanently partially open. |
| 8.  | "Open" | The door is permanently fully open. |
| 9.  | "Pharmacy" * | The door opens to the fixed pharmacy opening and closes after the impulse is released. |
- * Does not apply to all operators.

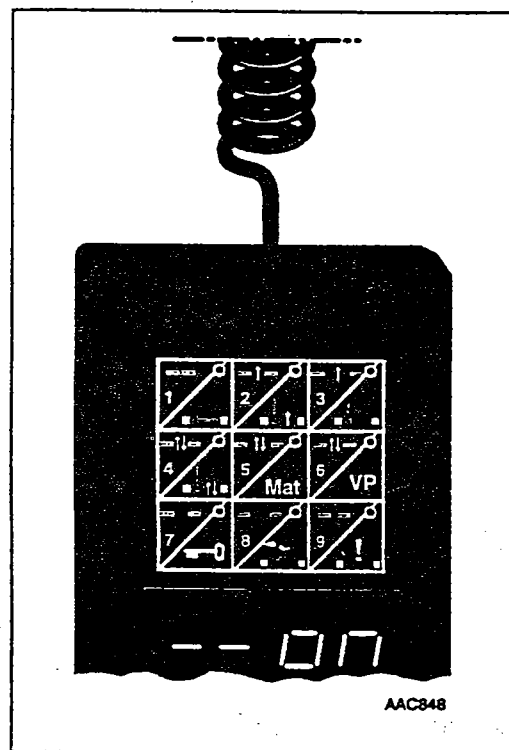

Pre-programmed run programs (Function 98)

Pre-programmed basic values for six different run programs (operating performance) can be selected with the function 98 and any of the values from 01 to 06. The value 98/03 is factory pre-programmed and selected to give a satisfactory function for most doors.

When selecting the values in the order from 01 to 06, the performance of the operator is gradually increased and can be adapted to the valid operating conditions. If the performance has to be increased depending on door size and/or door weight, never use a higher value than necessary. To comply with authority requirements, the value selected must give the operator a smooth and safe closing. **CAUTION!** See ANSI/BHMA A156.10.

Programming the run programs into the control unit

- 1: Plug the PMD into the control unit on the operator.
- 2: Select function 98 and any of the values from 01 to 06.
- 3: Press the program button P within 5 seconds. The selected run program will now be transferred from the PMD to the control unit.

Note! The only values transferred will be values that affect the operator performance.

PMD – Push Button Set

Copying and transferring of programmed values (Function 98)

This function is used to ease adjustment by copying and transferring the values from one smoothly running operator to another one with similar operating conditions. The values can be copied and transferred in two levels.

- Copying and transferring of user values only – Functions 01–27.
- Copying and transferring of all values.

Copying and transferring of user values only:

- Control Unit → PMD
1. Plug the PMD into the control unit on the operator having the values to be copied.
 2. Select function 98 and value 99.
 3. Press the program button P within 5 seconds. The user values only will now be transferred from the control unit to the PMD.

- PMD → Control Unit
1. Plug the PMD into the control unit on the operator receiving the copied values.
 2. Select function 98 and value 98
 3. Press the program button P within 5 seconds. The user values will now be transferred from the PMD to the control unit on the new operator.

Copying and transferring of all values:

- Control Unit → PMD
1. Plug the PMD into the control unit on the operator having the values to be copied.
 2. Select function 98 and value 97.
 3. Press the program button P within 5 seconds. All programmed values will now be transferred from the control unit to the PMD.

- PMD → Control Unit
1. Plug the PMD into the control unit on the operator receiving the copied values.
 2. Select function 98 and value 96.
 3. Press the program button P within 5 seconds. All values will now be transferred from the PMD to the control unit on the new operator.

PMD – Functions And Values

Function	Description	Eng. Value (approx.)	Metric Value (approx.)	*)
01	High speed opening	7.8 - 27.5 in/sec	20-70 cm/sec	60
02	Low speed opening	1.9 - 5.9 in/sec	05-15 cm/sec	07
03	Low speed distance opening	0 - 11.8 inches	00-30 cm	10
04	High speed closing	5.9 - 27.5 in/sec	15-70 cm/sec	20
05	Low speed closing	1.9 - 5.9 in/sec	05-15 cm/sec	07
06	Low speed distance closing	0 - 11.8 inches	00-30 cm	10
07	Hold open time		00-60 sec	02
08	Hold open time with key impulse		00-60 sec	06
09	Presence and stop impulse type, make/break ¹		A/b (make/break)	A
10	Not used		A/b	A
11	Emergency opening / Emergency closing (EUE) ²		A/b (opening/closing)	A
12	Electronic emergency unit / Elastic cord ²		A/b (elect/elastic cord)	A
13	Monitoring of the emergency unit ²		A/b (no/yes)	A
14	Emergency function with the PS... in "Off" ²		A/b (yes/no)	A
15	Partial opening width ³	11.8 - 78.7 inches	03-20 decimeters	08
16	Hold open time for partial opening ³		00-60 sec	02
17	"Auto width" hold open time ³		00-60 sec	02
18	Perm. partial opening/Time from "Auto width" to full opening ³		00-60 sec	15
19	Resume time for "Auto width" after closing, from full opening ³		00-60 sec	05
20	Add run program, opening ⁴		00-20	10
21	Opening delay for unlocking ⁵		00-60	00
22	Electro-mechanical lock, locked without/with power ⁶		A/b (without/with)	A
23	Hold force on closed door ⁷	0 - 44.5 pounds	00-10 Newtons	00
24	Not used		A/b	A
25	Interlocking ⁸		A/b (yes/no)	b
26	C-switch distance (always select a value)	0 - 31.5 inches	00-80 cm	45
27	Motor direction ⁹		A/b	b
28	Number of operator cycles performed x 10 000		00-99	00
29	Number of operator cycles performed x 100		00-99	00
30	Change of PIN code ¹⁰		A/b (no/yes)	A
98	Run program ¹¹		01-06	02
	Copying and transferring of values between operators ¹⁰		96-99	-
99	System tests ¹²		01-07	-

*) Values factory pre-programmed into the control unit.

1) See monitoring of activation units, pages 54-55.

2) See emergency unit, pages 50-51. If emergency unit is not installed, select value A.

3) See program selectors, page 53.

Note! Value 00 for function 18 gives permanent partial opening.

4) Value 00 = Function 98
Value 05 = Function 98 + 1
Value 10 = Function 98 + 2
Value 15 = Function 98 + 3
Value 20 = Function 98 + 4

Note! Max. performance can never exceed the performance valid for run program 98/06.

5) Value 00 = Used when lock is not installed.

Value 01 = Used for ELD/ELDP.

Value 02-60 = Opening delay (0,1-3 seconds).

6) Always press the reset button R after changing.

7) With this function a hold force can be selected that holds the door with a certain force in closed position.

8) See "Interlocking," page 52.

9) Always press the reset button R after changing the direction of rotation.

10) See PMD manual.

11) Pre-programmed basic values for 6 different run programs can be selected (see PMD manual).

12) See "Troubleshooting" or PMD manual.

Control unit – CUJ-9 (CUJ-9S)

CAUTION!

During any work with the electrical connections the

- mains power and the
- backup battery must be disconnected.

Note! The activation units and the backup battery are not to be connected until the adjustment of speeds, etc. has been carried out. (Tip: Make electrical connections to the control unit's terminal blocks, and unplug the terminal block sections until adjustments are made. To cycle the door while adjusting speeds, use a spare terminal block section to wire a jumper between TB1-11 and TB1-13)

The CUJ-9, a potentiometer based, non PMD control unit, is equipped with the following:

Function selector, FS – used to select special operating functions.

Light emitting diode, LED – indicating "power on" with a fixed light and "error" with a flashing light (see illustration on page 45 and Troubleshooting, page 57).

Potentiometers:


- HSC High speed closing $7\frac{7}{8} - 15\frac{3}{4}$ inches/second (1-leaf)
- HSO High speed opening $7\frac{7}{8} - 19\frac{11}{16}$ inches/second (1-leaf)
- TD Hold open time 0 – 30 s
- LSO Low speed opening $1\frac{31}{32} - 3\frac{15}{16}$ inches/second (1-leaf)
- LSC Low speed closing $1\frac{31}{32} - 3\frac{15}{16}$ inches/second (1-leaf)

The control unit is delivered with the potentiometers pre-set.


CAUTION! See ANSI/BHMA A156.10 for door safety limits.

Note: All instructions in this manual for the CUJ-9 controller are valid for the short stroke version, CUJ-9S.




Control Unit – CUJ-9 (CUJ-9S)

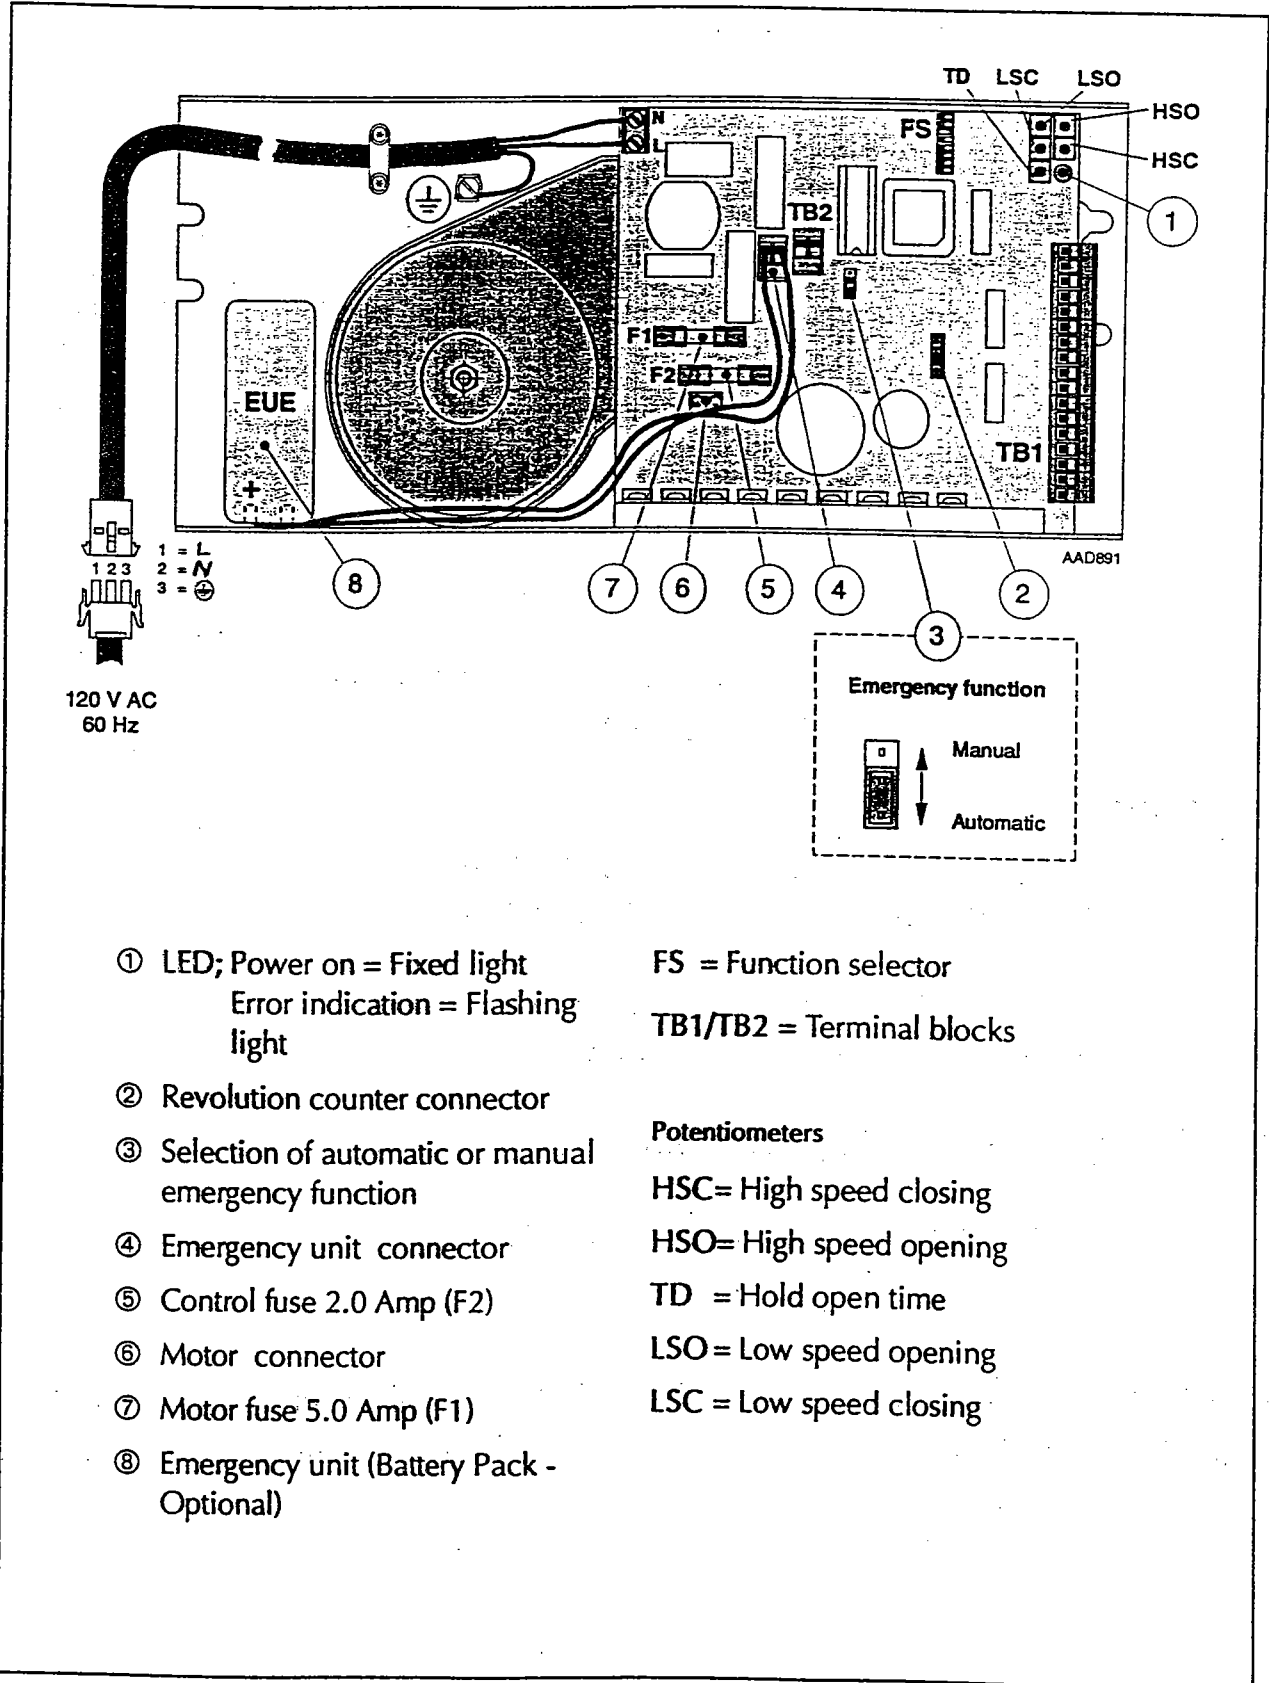


Wiring The CUJ-9 (CUJ-9S)

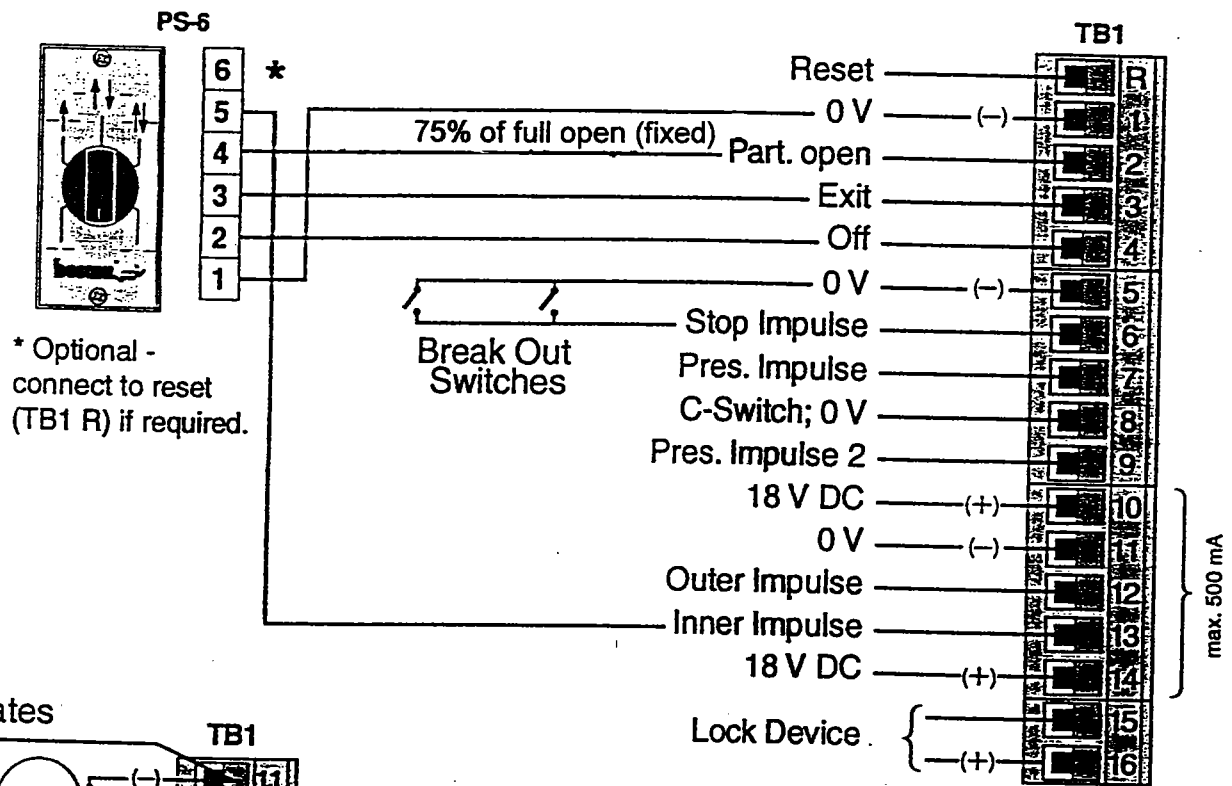


Push Plates

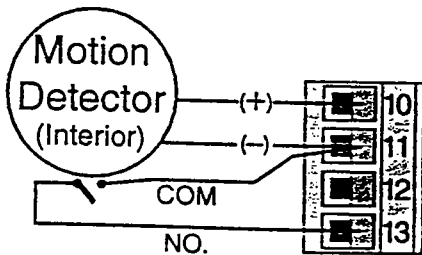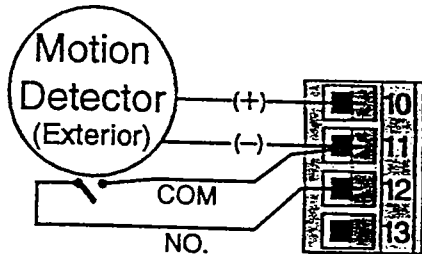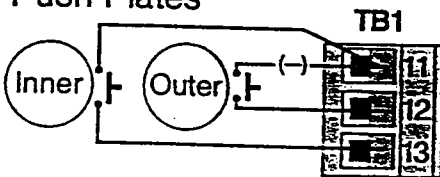

Emergency Key Switch

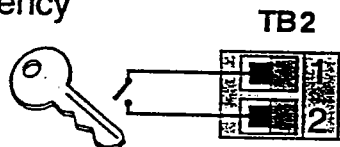

Eye-Cue

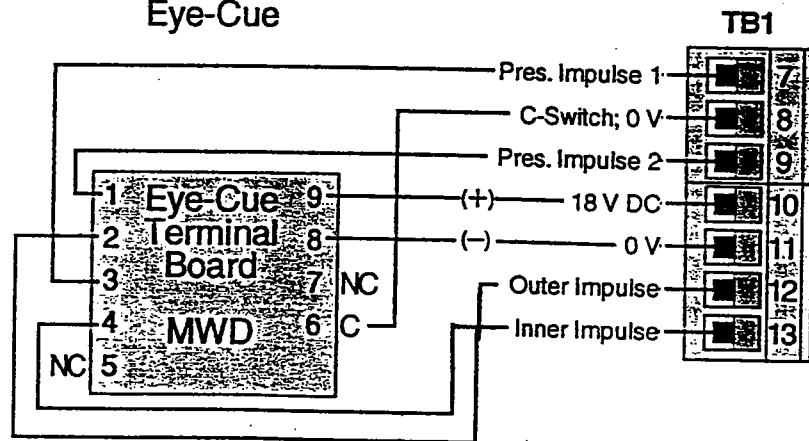

Adjusting the CUJ-9 (CUJ-9S) – Start-Up

CAUTION!

The EZ-Fit EMD II, when installed and set up correctly, is a safe automatic power door operator, but incorrect settings can defeat its purpose and create a safety hazard. For safety reasons never set the opening or closing speed faster than necessary to handle the traffic situation through your door. Please refer to the ANSI/BHMA A156.10 - 1999 excerpt in this manual (page 63).

- 1: Set the program selector to position "Auto".
- 2: Check the setting of the switches on the function selector "FS" so that they correspond to the required functions and accessories.

Note! If FS No. 1 to be set to ON (for automatic monitoring of the emergency unit), do not set it until you have reached step 8 below.

- 3: Switch on the mains power. The door shall now open/close automatically.
- 4: Give an opening impulse. The door now carries out a cycle open/close with the pre-set speeds for "HSO", "LSO", "HSC" and "LSC".
- 5: "Low speed distance, closing" (FS-4) and "low speed distance, opening" (FS-5) are selected with the function selector "FS".
- 6: "TD" is factory pre-set to the shortest hold open time possible (max. anticlockwise turning. Turning clockwise increases the hold open time (max. 30 s).
- 7: Give opening impulse and adjust the speeds to the values wanted. Clockwise turning increases the speed.
- 8: Additional operating functions can be selected with the function selector "FS".

CAUTION! Adjust to meet ANSI/BHMA A156.10 requirements!

Adjusting the CUJ-9 (CUJ-9S) – Function selector FS

This selector, placed on the control unit, has 8 switches, FS No. 1 – FS No. 8 with different functions. The illustration below shows the factory pre-set functions. If required the pre-set functions can be changed.

Note!

If the setting for one of the switches is changed, the computer has to be reset by switching off the voltage temporarily.

Control measures and functions

FS No. 1 – Automatic monitoring of the emergency unit

OFF = No automatic monitoring of the function of the emergency unit, or emergency unit is not installed

ON = Automatic monitoring of the function of the emergency unit except when the program selector is in setting "Off"

FS No. 2 – Hold force on closed door. With this switch a hold force can be selected that holds the door with a constant force in closed position.

OFF = No hold force

ON = Hold force

FS No. 3 – Not to be used

This switch shall always be set to position ON.

FS No. 4 – Low speed distance, closing. Two different "low speed distance, closing" can be selected with this switch.


OFF = 4"

ON = 2"

FS No. 5 – Low speed distance, opening. Two different "low speed distance, opening" can be selected with this switch.

OFF = 4"

ON = 2"

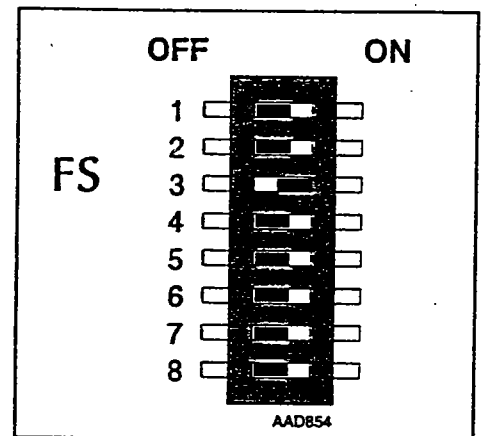

Adjusting the CUJ-9 (CUJ-9S) – Function selector FS

Control measures and functions continued:

FS No. 6 – Presence function. In certain cases it is required that the door operator should be equipped with PRESENCE and STOP functions.

PRESENCE function means that presence sensors are installed in the door opening. If a sensor is activated when the door is fully open or during the closing cycle, the door will stay open or reverse to the open position as long as the sensor is activated.

STOP function is used e.g. when the door is fitted with a break-out panic unit. The STOP function can be obtained by means of a photocell. If the beam of the photocell is broken the door will immediately stop. Mechanical stop switches can also be used.

The PRESENCE and STOP activation units are connected to the terminals 6, 7 and 9 on the terminal block TB1.

The impulse signal given is either closing (make) or opening (break), depending on the design of the activation unit. The control unit is designed to receive both types.

OFF = The terminals 6, 7 and 9 on TB1 only receive closing (make) impulse signals

ON = The terminals 6, 7 and 9 on TB1 only receive opening (break) impulse signals

If ON is selected all connected PRESENCE and STOP functions are monitored in all the program selector settings. This means that the control unit checks the function of the PRESENCE and STOP activation units before each closing. If any of the units is not working, the door remains open.

If value ON is selected and one or more of the PRESENCE and STOP activation unit terminals are not used, they have to be linked to terminal No. 8 on the terminal block TB1 as follows:

- If the STOP function is not used, terminal No. 6 is to be linked to terminal No. 8.
- If the PRESENCE (1) function is not used, terminal No. 7 is to be linked to terminal No. 8.
- If the PRESENCE (2) function is not used, terminal No. 9 is to be linked to terminal No. 8.

Note! If no terminals on TB1 are used, linking is not necessary and value OFF should be selected.

FS No. 7 – Locking function. With this switch the electro-mechanical locking device can be selected to lock with or without power.

OFF = Locked without power

ON = Locked with power

FS No. 8 – Mechanical emergency opening unit, ME (elastic cord). The ME can be monitored if FS No. 1 is set to ON. In the event of power failure, the ME opens the door by means of an elastic cord. (European use only.)

OFF = No mechanical emergency opening unit ME installed

ON = Mechanical emergency opening unit ME installed

Wiring Options

Emergency unit (EUE) - Automatic emergency opening or closing

The optional electronic emergency unit, EUE, automatically opens or closes the door once in case of a power failure by means of a rechargeable battery unit, constantly charged from the main. The door remains in this last position until the power is restored. The operator will then resume the function set by the program selector.

On CUD-9 controls, the following may be selected via PMD:


- a) whether the battery pack is monitored;
- b) whether the door will open or close on loss of main power.

On CUJ-9 controls, the following may be selected via function switches:

- a) whether the battery pack is monitored. (Emergency open only.)

Installation steps

- 1: Shut off main power.
- 2: Fasten EUE battery pack in the location shown below, with provided screws.
- 3: Plug prewired connector into location shown below.
- 4: Set emergency function jumper to automatic. (See text on page 51 for options.)
- 5: Set monitoring on or off as required by application.
- 6: Turn on power.
- 7: CUD-9 only: set direction (open or close on loss of power) via the PMD. [The CUJ-9 will only open on loss of power.]

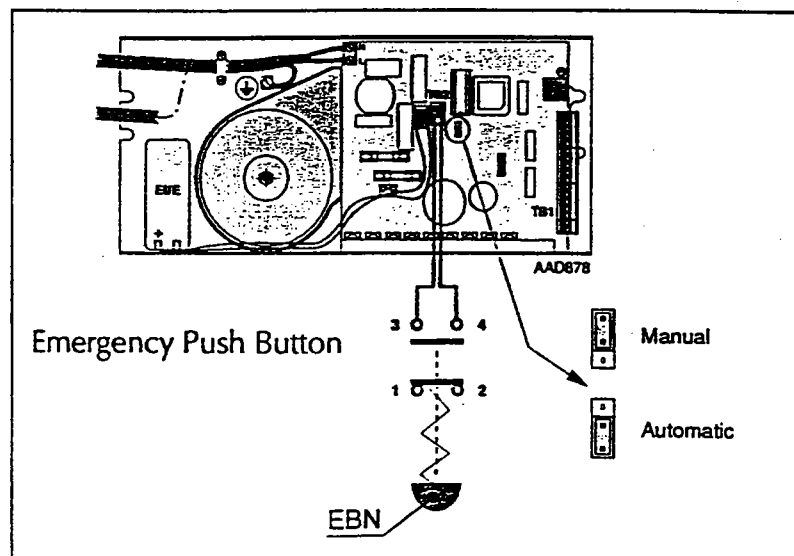

Wiring Options

Manual emergency opening (CUD-9 only)

If the emergency opening should not be performed automatically in case of a power failure, a non-locking emergency push-button (EBN) for manual control of the door can be connected. When the EBN is pressed the door will open by means of the emergency unit EUE. The door remains open until the power is restored. In order to obtain this function, the jumper on the CUD9 is set to manual position. The push-button is connected in accordance with the illustration on page 50.

Combination of automatic and manual emergency opening or closing:

Automatic – with program selector setting not "Off"

Manual – with program selector setting "Off" (only opening)

If the emergency opening or closing, in case of a power failure, should be carried out automatically when the program selector is not set to "Off" – and with an emergency push-button (only opening), when the program selector is set to "Off" – a non-locking emergency push-button (EBN) for manual control of the door can be connected. When the EBN is pressed the door will open by means of the emergency unit. The door remains in this position until the power is restored. The push-button is to be connected in accordance with the illustration and the programming module PMD is to be set to function 14 value b.

Monitoring of EUE unit (CUD-9/CUJ-9)

When the programming module PMD is set to function 13, value 'b', the function of the emergency unit is monitored and tested by the control unit.

Note! If the program selector (PS...) is set to position "Off" or "Open", the monitoring and testing is not carried out.

The function is tested with normal opening impulses every three and a half hours. If impulses are not given, the test is automatically carried out every fourth hour. The function test is carried out in the following way:

The door opens automatically by means of the emergency unit and closes by means of the mains power if the test has been accepted. If the test fails, i.e. a proper emergency opening cannot be achieved, the door will open with the mains power and remain open until the fault has been taken care of. When the test has discovered a defective emergency unit and the door stands open, the operator does not react to any impulses. The door can be closed by setting the program selector to "Off".

Wiring Options


Connecting the Radio Frequency (RF) remote control unit.

Place the receiver unit in the open space in the header.

Note! The single black wire at the bottom of the receiver unit is the antenna, and must not be confused with the power input black wire in the group of five wires at the top of the receiver unit.

Connect the power input (red and top black wires) of the receiver unit, red to terminal 10 on TB1 and black to terminal 11 on TB1. Connect the switch output (orange and brown wires), orange to terminal 13 on TB1 and brown to terminal 11 on TB1.

Arrange the antenna wire just inside the cover, or, for improved range, drill a small hole in the cover and run the antenna outside the case. Fasten the wire with silicone sealant and seal the end cover hole as well.

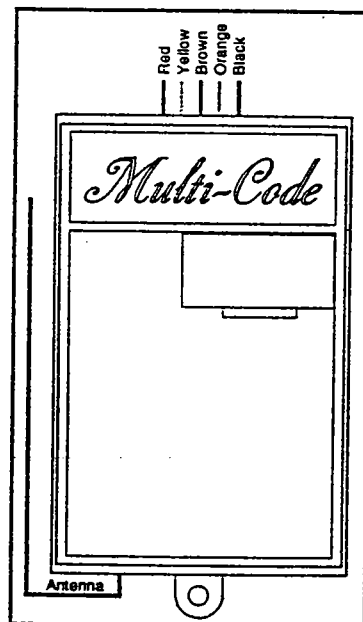

Using two pushplates, with different timing for each (e.g., normal and handicapped) (only valid with CUD-9)

Wire a pushplate with a normally open switch to the key switch inputs (TB2 - 1 and 2), then use the PMD to program Function 08, "Key Operation", to a value other than 00 (e.g., 05 = 5 seconds of hold open time). See page 37 or 46 for standard pushplate connection.


Interlocking (only valid with CUD-9)

Interlocking joins two operators so that one must close before the other one can open, in the manner of an airlock. Connect between the operators as shown below, and set PMD function 25 to 'A'.

Note! a) With interlocking, other connections to terminals No. 2 and 8 must be removed.

b) The functions "Partial opening" and "Auto width" cannot be used with interlocking.

c) Also see question 2 (page 64) for retaining Eye-Cue functionality with interlocking.

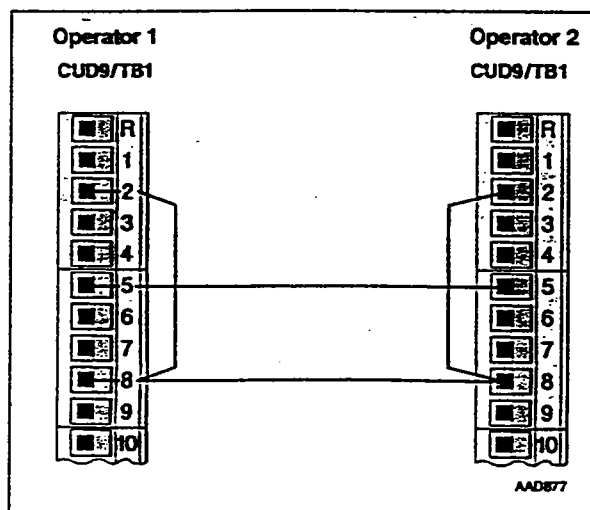

Wiring Options

PSK-6, PSW-6, PSK-6F and PSW-6F

Some door functions can be set with a program selector, which is factory installed in the cover unless order specifies loose pack.

PS...-6 This program selector is used for the following functions:

- Off The inner and outer activation units are disconnected. The door is locked if an electro-mechanical locking device has been fitted. The door can be opened with an emergency push-button/key switch.
- ↑- Exit Passage through doorway from inside only. The door is locked if an electro-mechanical locking device has been fitted. The door can only be opened with the inner activation unit and with an emergency push-button/key switch.
- ↔ Auto Two-way traffic, normal operation of the door. The door can be opened with the inner and outer activation units and with an emergency push-button/key switch.
- ↔ Auto P/W In this setting "Auto partial" or "Auto width" are selectable with the PMD.

Auto partial

The door can be opened partially with the inner and outer activation units and with an emergency push-button/key switch.

Auto width

The operator is programmed to select full or partial opening depending on the volume of traffic.

If the door is closed from full opening for more than the time set by the PMD, the next opening will be partial. If the door remains partly open, or is prevented from closing, more than the time set by the PMD, full opening is automatically selected.

The width of the partial opening and the "Auto width" hold open time are set by the PMD.



- - Open The door is permanently open.

Reset

This setting has no marking, but if the knob/key is turned clockwise to the position "six o'clock" and back to the required setting, the operator will be reset. The door then carries out an open/close cycle with low speed. When this cycle is terminated the operator is ready for normal operation. NOTE: This function is optional and may or may not be wired.

Note: With CUJ9, 9S partial opening fixed @ 75% of full opening.

The illustration PSW-6 shows a program selector with knob which is intended for surface or flush mounting, but the selector is also available with key (PSK-6). The illustration PSK-6F shows a program selector with key which is intended for flush mounting in the cover. This selector is also available with knob (PSW-6F).

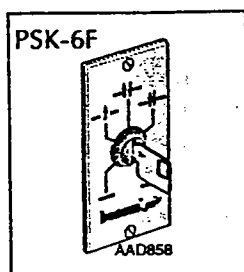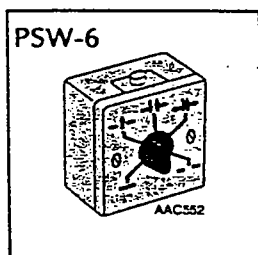

Wiring Options

Monitoring of activation units (CUD-9 only)

PRESENCE function means that presence sensors are installed in the door opening. If a sensor is activated when the door is fully open or during the closing cycle, the door will stay open or reverse to the open position as long as the sensor is activated.

STOP function is used e.g. when the door is fitted with a break-out panic unit. The **STOP** function can be obtained by means of a photocell. If the beam of the photocell is broken the door will immediately stop. Mechanical stop switches can also be used.

The **PRESENCE** and **STOP** activation units are connected to the terminals 6, 7 and 9 on the terminal block TB1.

The impulse signal given is either closing (make) or opening (break), depending on the design of the activation unit. The control unit is designed to receive both types.

Function 09

- Value A = The terminals 6, 7 and 9 on TB1 only receive closing (make) impulse signals
b = The terminals 6, 7 and 9 on TB1 only receive opening (break) impulse signals

If value b is selected all connected **PRESENCE** and **STOP** functions are monitored in all the program selector settings. This means that the control unit checks the function of the **PRESENCE** and **STOP** activation units before each closing. If any of the units is **not** working, the door remains open.

If value b is selected and one or more of the **PRESENCE** and **STOP** activation unit terminals are not used, they have to be linked to terminal No. 8 on the terminal block TB1 as follows:

- If the **STOP** function is not used, terminal No. 6 is to be linked to terminal No. 8.
- If the **PRESENCE** (1) function is not used, terminal No. 7 is to be linked to terminal No. 8.
- If the **PRESENCE** (2) function is not used, terminal No. 9 is to be linked to terminal No. 8.


Note! If no terminals on TB1 are used, linking is **not** necessary, and value A should be selected.

Wiring Options


BEA Microcell 1

Used as a break out beam system (TMD and CGL only)



DIP Switch

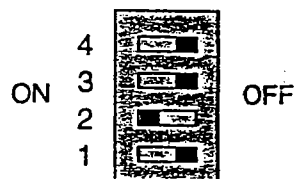

Beam "A"

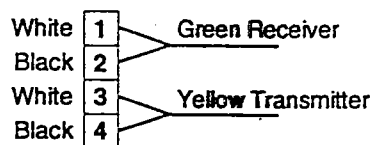

Beam "B"

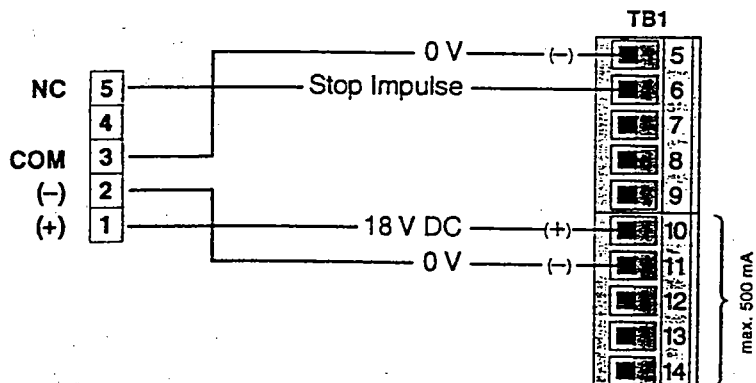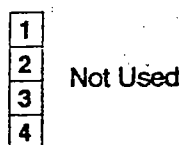


P/N: US15-0136-01


BEA Microcell 1

Used as a two channel hold open beam system (Fail Open)



DIP Switch

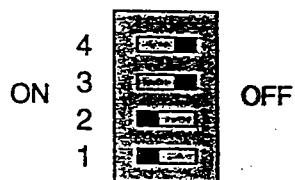

Beam "A"

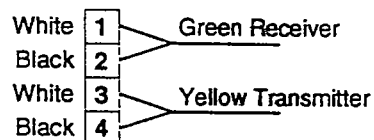

Beam "B"

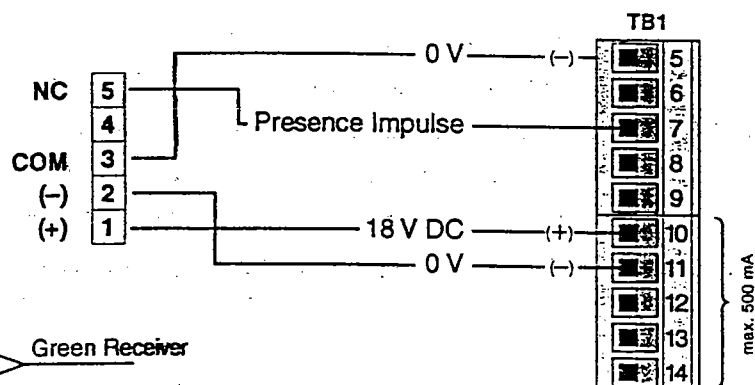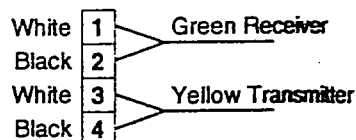

P/N: US15-0136-01


NOTE: Beams to be installed in accordance with current ANSI/BHMA 156.10

Sign Placement

ANSI/BHMA standard 156.10-1999 and Besam standards specify that caution signs must be affixed to both sides of any power operated pedestrian door. With double doors, signs should be applied to each door.

Sliding doors with swinging (breakout leaves) shall be provided with signs reading "IN EMERGENCY PUSH TO OPEN." The signs shall have red backgrounds with contrasting letters one inch high minimum. The signs shall read horizontally and be located adjacent to the lockstile on a center line 36 inches minimum and 60 inches maximum from the floor, applied to the side appropriate for egress. ANSI/BHMA A156.10. In addition, the sign "AUTOMATIC DOOR" with letters 1/2" high minimum will be applied to the door, visible from both sides. If switch activated, use "AUTOMATIC DOOR - ACTIVATE SWITCH TO OPERATE"

Note – the kit decals are double-sided and normally will only need to be applied to one side of a clear glass door. If the decals are not clearly visible on the other side due to the condition of the glass (e.g., tinted or textured glass), the decals should be placed on both sides.

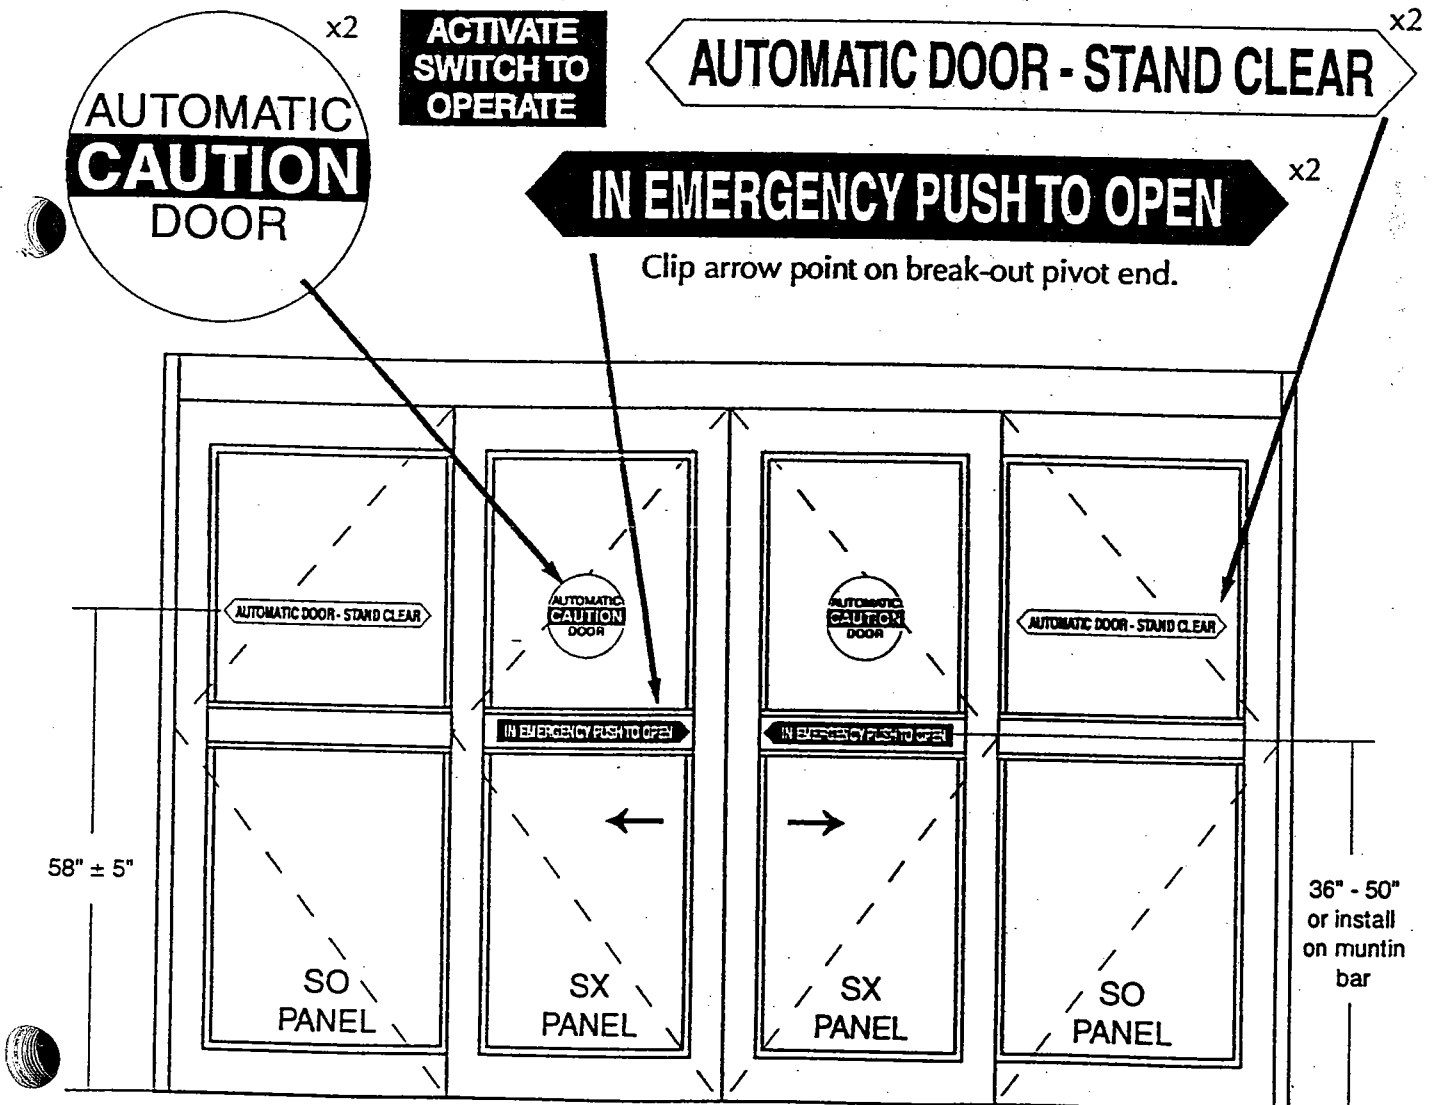

Troubleshooting

Overview of Structured Troubleshooting

When troubleshooting a complex system where the source of the problem is not readily apparent, break the problem down into component subsystems, such as the door panels, pivot guides, tooth belt assembly, and so on.

1. Mechanical checking and remedies

Disconnect the main power and the transmission rods. Pull the door leaf manually and check that the door can be easily moved over the complete sliding track/floor guide. If the door leaf stops or is hard to move, the reason may be sand, stones, rubbish etc. in the floor guide. The door leaf may also be jamming on the floor or on the weather stripping. Clean the floor guide, adjust the door leaf height/depth or take other necessary measures until the door leaf is running smoothly when manually operated.

Motion and presence sensors are in reality switches and are either on or off. Check each sensor for proper voltage and check output at the control box for a switch change when tested*. Likewise, test any door panel breakout switches and the six-position program switch, if used.

* Test motion sensors by walking. Test presence sensors with a trash can or similar object in the sensor zone.

2. Error indication on CUD-9 or CUJ-9 control

During normal operation the light emitting diode (LED) on the control unit is illuminated. A flashing light on the LED or an extinguished LED indicates that the operator is out of function.

Flash frequency	Reason	Remedy
2 flashes/sec.	EUE defective.	1. Replace EUE.
1 flash/sec.	Overspeed detected during closing.	1. Reset the operator with the program selector PS-6 or 2. Switch off the power, wait 60 s, switch on the power. 3. Make sure "C" switch distance (Func. 26) has been selected.
1 flash every two sec.	The operator is powered by the EUE (main power failure). The LED will normally extinguish after 60 sec.	1. Restore the main power. 2. If the LED keeps on flashing, check the motor fuse (F1).
The LED is extinguished.	1. Program selector is set to the "Reset" position. 2. Main power failure. 3. Control fuse (F2) defective.	1. Set the program selector to correct position. 2. Restore the main power. 3. Check the control fuse (F2).

Troubleshooting

3. PMD as a troubleshooting tool

Connect the main power.

Symptom

Remedies

No lights on the PMD-display.

Check the mains power and fuses (F1, F2).

4. Check if any error code is flashing on the PMD display

If the operator does not function properly depending on any of the reasons below, an error code will be flashing on the PMD display. If more than one reason for the malfunction is found, the highest code will be displayed. After remedy the second highest code will be displayed, etc.

Note! Before replacement disconnect the mains power and all necessary plugs.

Reason	Error code (value)	Remedies
Door opened without impulse	-- 50 flashing	Check why the door moved (e.g., door opened manually)
Presence/Stop detection unit defective	-- 51 flashing	Check safety systems and breakout switches
Electronic emergency unit EUE defective	-- 53 flashing	Replace EUE
Mechanical emergency unit ME defective	-- 54 flashing	Check the emergency unit ME / Set emergency function switch to auto
Motor direction error	-- 55 flashing	Replace the control unit or motor / Check motor leads
Control unit defective	-- 56 flashing	Replace the control unit
Overspeed detection	-- 57 flashing	Reset the operator (check function 26 for value other than 00)
Programming module PMD defective	-- 69 flashing	Replace the PMD
Communication error PMD ↔ CUD9	-- 70 flashing	Check the connections
PMD access denied	-- 71 flashing	Return the PMD to be updated; try another PMD

Troubleshooting

5. Check the status code on the PMD display

The PMD display continuously shows the following status codes during the operation. These status codes are not error codes but show the present active impulse. If any of the status codes is constantly displayed the corresponding unit has to be checked and if necessary remedied or replaced. Always press the reset button **R** after remedy/ replacement.

Status code (value)	Status	Remedies
-- on	Operation OK	—
-- 10	Search cycle running (open/close)	Let the door finish its cycle
-- 11	Inner impulse is active	Check the impulse input
-- 12	Outer impulse is active	Check the impulse input
-- 14	Key impulse is active	Check the impulse input
-- 16	Interlocking impulse is active	Check the connections
-- 17	Presence impulse -1 is active	1. Check that correct photocell type is selected on the PMD, function 09 2. Check the photocells or Eye-Cues
-- 18	Presence impulse -2 is active	Same as 17 above
-- 21	Stop impulse is active	1. Check that correct photocell type is selected on the PMD, function 09 2. Check breakout switch function
-- 24	EUE active	Check the mains power, fuses and CUD9
-- 27	Door blocked	Check for obstacles or increase run program

6. After remedy or replacement the operator has to be checked as follows:
 1. Study the door movement and adjust the functions to the values required for a smooth door operation.
 2. Check that correct functions and values have been selected for the accessories to be installed and that the installation complies with valid regulations and requirements from the authorities.
 3. A direct selection system test (function 99) can be carried out on some of the units stated in the table below.
7. PMD/System test codes (function 99)
Make sure that correct parameters are selected for the unit to be tested. See Function/Value in the table.

Select function 99 and any of the values 01-07 on the PMD. Press the program button P and the test corresponding to the selected value will be performed. If the test is unsuccessful an error code will be flashing on the PMD-display.

Value	Test of	Error code	Function/Value
01	Presence/Stop detection units	51 flashing	09/b
02	Not used	—	—
03	Electronic emergency unit EUE	53 flashing	12/A, 13/b
04	Mechanical emergency unit ME	54 flashing	12/b, 13/b
05	Not used	—	—
06	Motor, visual test ¹⁾	—	—
07	Revolution counter ¹⁾	57 flashing	—

¹⁾ Close and unlock the door(s) before commencing the test. The motor runs approx. 1 second in the opening direction and then closes the door(s) again.

If problem still cannot be diagnosed and fixed, please refer to the detailed step guide on the following page.

Troubleshooting

FAULT	CHECK	FIX / REMEDIES
1. The door does not open-motor does not start.	<ul style="list-style-type: none"> • Is there 120 VAC power at control box? 	<ul style="list-style-type: none"> • Check /replace/reset main panel fuse or breaker. <p>Note: if it repeatedly trips, there is a short. Check wiring from panel to control for an open circuit.</p> <p>Note: there may be an in-line on/off wall switch.</p>
2. Control has power but still no operation.	<ul style="list-style-type: none"> • Is the six position switch set to off? • Is push plate working (if used)? • Is motor power absent? • Are the two fuses on the control blown? • Is door panel broken out? • Is breakout switch or wiring faulty? 	<ul style="list-style-type: none"> • Change switch position to on. • Check push plate connections to control. Check for proper operation of push plate by using a multimeter to check for 0 ohms (when the switch is pressed) as measured at the control inputs. • Check the motor cable plug on the control unit. • Check with a multimeter for 0 ohms, and replace with a fuse of the same rating. Continued blowing of fuses suggests either a short, miswiring or lastly a bad control unit. • Reset door panel. • Test and replace switch or wiring.
3. The motor starts but door does not open, or does not open properly.	<ul style="list-style-type: none"> • Is the transmission rod disconnected? Is the belt broken or loose? • Is the door binding anywhere? • Is there a door lock? • Is motor rotation correct for door handing? • Have the settings been checked and do they conform to the recommended settings in the instructions? • Is revolution counter plugged in? • Is belt travel less than 21.66"? 	<ul style="list-style-type: none"> • Remove power, close door fully and tighten transmission rod or replace/tension belt. • Correct the binding condition. • Check wiring and adjust lock. • Check the instructions and correct if necessary. • Connect the PMD and change settings to conform to recommended settings. • Check revolution counter and cable. • Check control unit for special short-stroke processor. See page 27 for more information.
4. The door does not open to the required width.	<ul style="list-style-type: none"> • Is the encoder plugged into the control? • Is the encoder, its wiring or the plug damaged? • Is the operator or the mechanical door stop adjusted? • Is the six position switch on 'Reduced Opening'? • Is function 18 set to value 00, and the six position switch set to 'Partial Opening'? 	<ul style="list-style-type: none"> • Plug it in to the proper socket. • Repair or replace as necessary. • Readjust. • Set switch to 'Auto.' • Set function 18 to value other than 00, and/or select 'Partial Opening?'

FAULT

CHECK

5. The door does not open fully when impulsed during closing.
 - Is there binding in the door swing or arm system?
 - Are speeds and power levels set correctly?
6. The door opens more than to the adjusted width.
 - Is the revolution counter disc defective or loose?
 - Are mechanical stops in place?
7. The door does not close.
 - Is there a shorted input signal?
 - Is the 6 position switch in 'Hold Open' position?
 - Is the operate mat or the presence sensor active?
8. The door does not close fully.
 - Is the door binding?
 - Is there excessive draft or wind conditions?
9. No lights on the PMD.
 - Is power present?
10. PMD will not communicate.
 - Can you do anything with the PMD?
11. PMD flashes an error code.
 - What is the code?

FIX / REMEDIES

- Repair/replace of re-align as necessary.
- Retune control.
- If loose try tightening, otherwise replace drive unit.
- Install stops and adjust.
- Correct the short.
- Switch to 'On' position.
- Repair the operate mat or the presence sensor.
- If the door still does not close, replace the control unit.
- Fix binding condition.
- Increase run program, close speed, close check speed.
- Check mains.
- Check fuses
- PMD properly connected.
- Try second PMD.
- Enter PIN code.
- Turn power off, wait 1 minute then on again.
- If you still cannot adjust, first try 2nd PMD, then a new control.

See chart on page 58 for explanation and correction.

From American National Standard for power-operated pedestrian doors. Please refer to full standard if necessary, obtainable through BHMA at (212) 661-4261. All figures referred to below can be found in the full standard. Excerpts reprinted with BHMA permission.

Sliding Doors

Automatic Sliding Doors are flat panels that slide horizontally or linearly. These systems have a variety of configurations. No matter what the configuration or system, automatic sliding doors shall include sensors, or control mats and signage for the safety and convenience of the user.

For control mats, joining of control mats and performance requirements of control mats, refer to the full ANSI/BHMA standard.

Motion sensors shall detect a 28 inch (710 mm) minimum high person or equivalent and moving at a rate of 6 inches (150 mm) per second towards the center of the door within the detection areas described.

Presence sensors shall detect a 28 inch (710 mm) minimum high person or equivalent within the detection areas described.

8.2 Sliding Doors

8.2.1 Activating detection areas shall have a minimum width equal to the width of the clear opening measured at 15 inches (380 mm) and 30 inches (760 mm) perpendicular from the face of the closed door(s). The length from the face of the door shall be 43 inches (1090 mm) minimum measured at the center of the clear opening. Detection shall be effective to within 5 inches (125 mm) from the face of the door measured at the center of the clear opening. (See Figures A-13 & 18A, B & C.)

8.2.2 A presence sensor shall be used to prevent a fully open door(s)

from closing when a person is in the space between two non-overlapping activation detection areas. (See Figure 18A, B & C.)

8.2.2.1 If photoelectric beams are used (See Figure A-18A):

- 1) A minimum of two photo electric beams shall be installed with the lower beams installed 6"-28" (150-710 mm) and top beam 45"-55" (1145-1400 mm) from the floor; and
- 2) They shall be installed within 3" (76 mm) from the center of the slide door if both are installed on the same side or within 5" (125 mm) of the centerline of the slide door if more than two photo electric beams are installed on each side of the sliding door; and
- 3) The beams shall remain active from fully open to within 6 inches (150 mm) of closed.

8.2.2.2 If an area presence sensor is used through the door opening it (See Figure A-18B):

- 1) Shall detect a 28 inch (710 mm) minimum high person or equivalent and extend out a minimum of 5 inches (125 mm) from the face of the door on each side; and
- 2) The detection zone shall remain active from fully open to within 6 inches (150 mm) of close or shall have a photo electric beam at 6"-28" (150-710 mm) from the floor or a time delay of 4 seconds minimum after the activation signal ceases. (See Figure 18B.)

8.2.2.3 If presence sensors are installed on each side of the sliding door opening (See Figure A-18C):

- 1) They shall not have an inactive area more than 5 inches (125 mm) extending out from the face of the door. If the inactive area exceeds 3 inches, (76 mm) from the face of the door, one beam is required at 6"-28" (150 - 710 mm) from the floor; and
- 2) The detection zone shall remain active from fully open to within 6 inches (150 mm) of closed or shall have a photo electric beam at 6"-28" (150-710 mm) from the floor or a time

delay of 4 seconds minimum after the activation signal ceases.

For Knowing Acts, see full standard.

10. Entrapment Protection

10.1 Entrapment Protection measures shall be taken under neutral air conditions.

10.6 Swing, sliding and folding doors utilizing sensors or control mats shall remain open a minimum of 1.5 seconds after loss of detection.

10.9 A stopped sliding or folding door shall not require more than a 30 lbf (133 N), measured at the leading edge, to prevent it from closing at any point in the closing cycle.

10.10 A sliding door shall be adjusted so that the closing speed is one foot per second maximum for doors weighing up to and including 160 lbs (71 kg) per leaf.

For doors weighing more than 160 lbs (71 kg):

$V = \sqrt{161 / W}$ where:

V = Velocity in ft/sec

W = weight of door in pounds

11. Signage

For Signage, see full standard and/or page 56 of this manual.

12.4 Break Away Device for Sliding Doors. Sliding doors provided with a break away device shall require no more than a 50 lbf (222 N) applied 1 inch (25 mm) from the leading edge of the lock stile for the break out panel to open. Break away devices (swinging panels) for doors that slide on the egress side of an opening shall be equipped with a self-closing device or interrupt action of the operator when used in the break out mode. Break away devices incorporating swing out side lites shall interrupt actuation of the operator when used in the break out mode. (See Appendix D1.3)

Frequently Asked Questions

- 1: Q. Can interlocking and functional auto-width (partial opening) be used in the same installation?
A. No. The functional auto width input is redefined to be Interlock In when you use the PMD to select the interlock. Note: There exists third party interlock electronics which may allow this function.
- 2: Q. Can interlocking and Eye-Cue be used in the same installation?
A. Yes, but not directly. The following things must be done:
1: Do not connect auto width from the 6 position switch; see question 1 above.
2: When interlocking is selected, the C-switch output is redefined to be interlocking, and is therefore no longer available for sending the C-switch signal to the Eye-Cue. Instead, place a reed switch (as was done with the Powerglide 4000) with the tape magnet placed in the carrier to replicate this signal.
- 3: Q. Can I synchronize two operators?
A. Yes. Wire impulses in parallel, then tune the operators to the same speeds, delays and other operational parameters. See page 42 to copy parameters for the CUD-9 controller via PMD.

Maintenance

Maintenance/Service

Automatic door installations must be subjected to regular maintenance, the frequency of which is governed by the environmental conditions and density of traffic.

- 1: Remove dust and dirt from the operator. Dirt on the sliding track should be removed with methylated spirits. If necessary replace the sliding track.
- 2: None of the parts need lubrication. The tooth belt must be kept dry and clean. Check the belt tension.
- 3: Check that all nuts and bolts are tightened well.
- 4: Adjust, if necessary, the door leaf speed, the hold open time and the door leaf position.
- 5: Check bottom guide/track and clear all debris.
- 6: Carriage wheels should be checked/replaced as needed.
- 7: Bottom guide pin or roller should be checked/replaced as needed.

Planned Maintenance Checklist

- ☐ Measure / Adjust Speeds – Measure to ANSI/BHMA A156.10 and local codes; adjust if necessary.
- ☐ Measure / Adjust Forces – Measure to ANSI/BHMA A156.10 and local codes; adjust if necessary.
- ☐ Measure / Adjust Time Delays – Measure to ANSI/BHMA A156.10 and adjust if necessary.
- ☐ Check Functioning – Mats, Sensors, Operator/Control, and Push Plates per device checklist and AAADM.
- ☐ Check Signage – Are all signs in place, readable, and in good condition?
- ☐ Check Door Hinging / Mechanical Soundness – all attachments, covers, arms, crash bars, etc.
- ☐ Check Finger Guards, Glass and Glass Stops, Trip Hazards, Rails, Sharp Edges
- ☐ Check Emergency Egress (if so equipped).
- ☐ Check all wiring for good connections, proper insulation and clearance from moving parts.
- ☐ Check Battery Backup if equipped.
- ☐ Go through Daily Safety Checklist with facility manager.


Door Handing and Layout

Door Handing (Automatic door industry)


Sliding door handing is referenced from the exterior side of the door opening. Bi-parting sliders are not handed.

For sample reverse breakout layout, see page 12.


EMD II - 2 with fixed sidelites

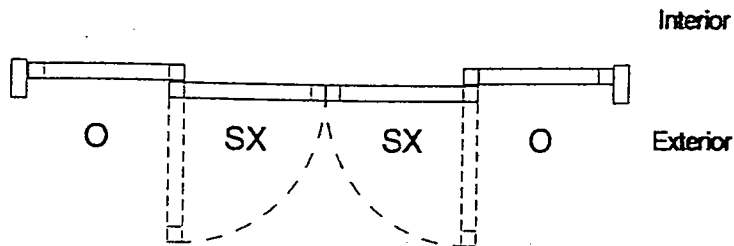

EMD II - 2 with breakout sidelites

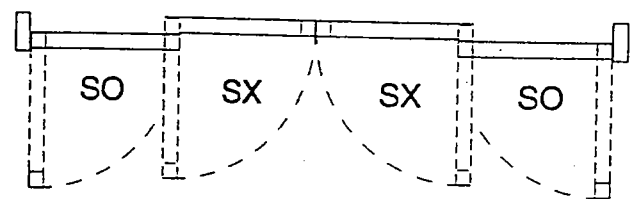


EMD II - 1, left hand

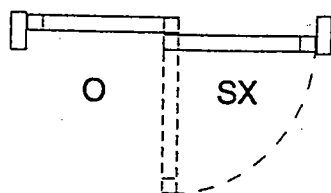


Interior

Exterior

EMD II - 1, left hand

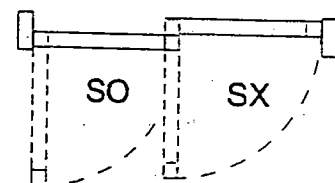


EMD II - 1, right hand

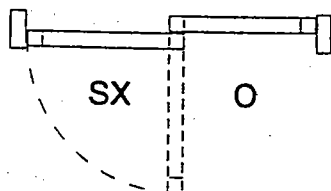

Interior

Exterior

EMD II - 1, right hand

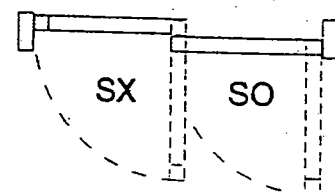

O = Fixed Sidelite

SO = Swing Out Sidelite


SX = Swing Out / Slide Panel

Appendix

Besam Frame Doors - Installing the door carrier on top of the door leaf

Note: Door carriers are normally pre-installed at the factory. See Step 4 for weather stripping adjustments.


1. Make sure that the upper part of the door leaf is sufficiently reinforced.
2. Establish the distance between the door leaf and the fixed sidelight, considering door design and weather stripping.
3. Place the door carrier on top of the door leaf. The distance between the door leaf and sidelite serves to ensure the correct depth installation. Take into account weather stripping where used.
4. The door carrier can be roughly adjusted for depth, $\pm 3/16"$, (5 mm), in relation to the door leaf. This rough adjustment is to be carried out when the door carrier is fitted on the door leaf.

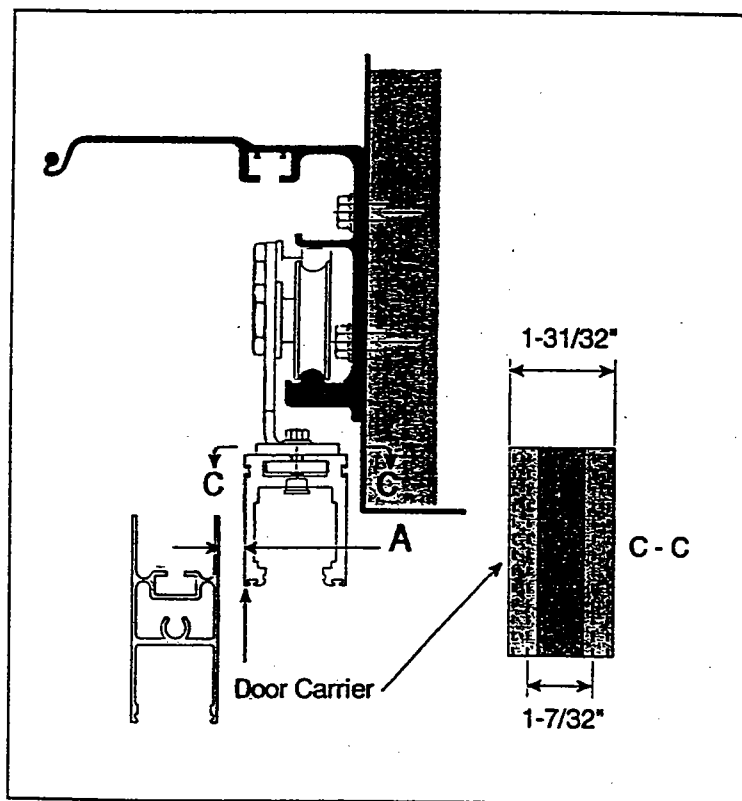

Appendix

Non-Besam Frame Doors - Installing the door carrier on top of the door leaf

1. If necessary, cut the door carrier to correspond with the door leaf width.
 2. Make sure that the upper part of the door leaf is sufficiently reinforced to receive the carrier.
 3. Establish "Y"; the distance between the door leaf and the fixed sidelight, considering door design and weather stripping.
 4. Place the door carrier on top of the door leaf. The distance "Y" serves to ensure the correct depth of installation. Take into account weather stripping where used.
 5. Mark the door leaf through the pre-drilled slotted holes. One slotted hole in each group of three must be used as the attachment carries the whole weight of the door leaf. If carrier is undrilled, use diagram below for layout, and drill holes accordingly.
 6. Drill and thread the door leaf appropriately.
 7. The door carrier can be roughly adjusted laterally $\pm 3/16"$ in relation to the door leaf. This rough adjustment is to be carried out when the door carrier is fitted on the door leaf.
 8. Fasten the door carrier with Allen screws and washers.
- Note: If panic break-out fittings are required, a panic carrier must be factory ordered and sized to the door.

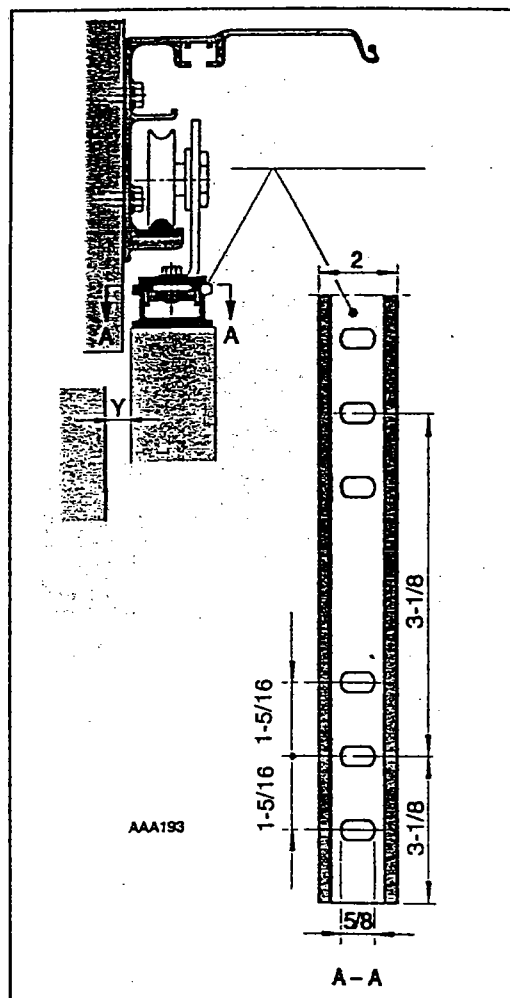

Appendix


Installing the door fittings on the door carrier

Note: Door fittings are normally pre-installed at the factory on Besam frame doors.


Install the door fittings on the door carrier in accordance with the figures and tables below.

Note! Make sure that the carriage wheel brackets are correctly installed, i.e. turned so that the position of the three small holes corresponds to the illustrations. It is also important that the fittings are completely in line with the door carrier.


Besam EZ-Fit EMD II-2 (bi-parting)

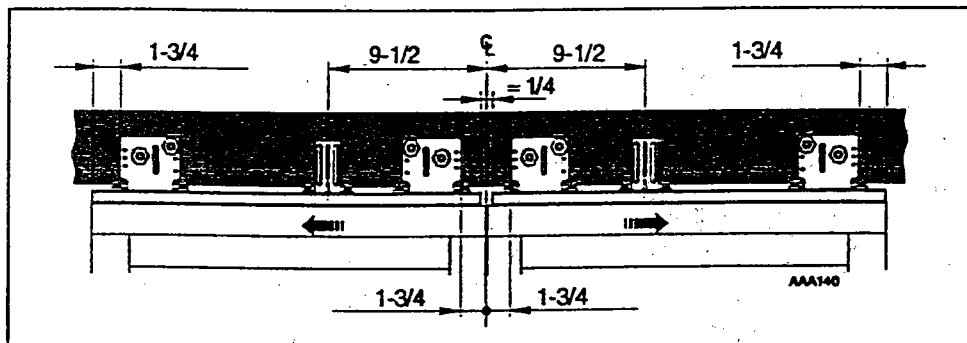


Besam EMD II-1 (single-sliding, right-opening)

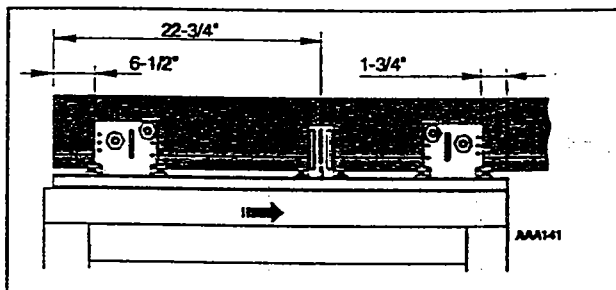

Besam EMD II-1 (single-sliding, left-opening)

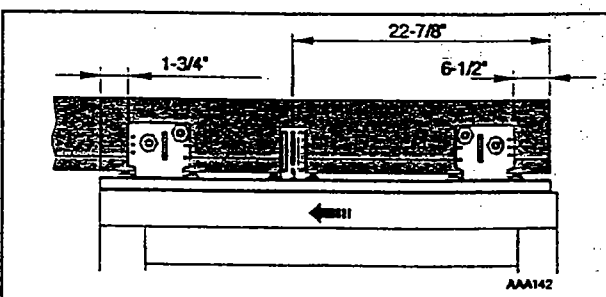


Fastening the door fittings

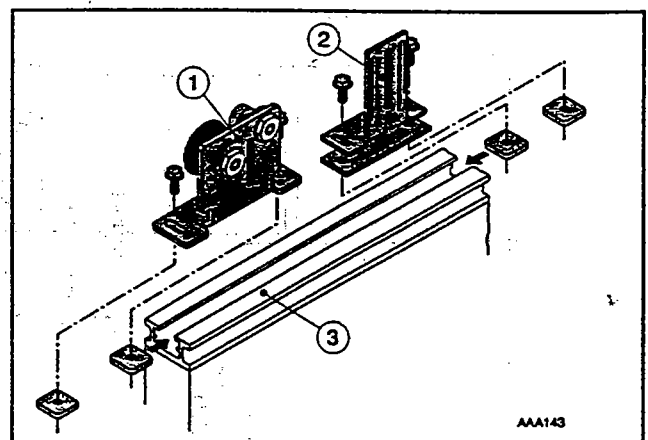

- ① Carriage wheel fitting
- ② Carrier fitting
- ③ Door carrier

Installing optional door sweeps

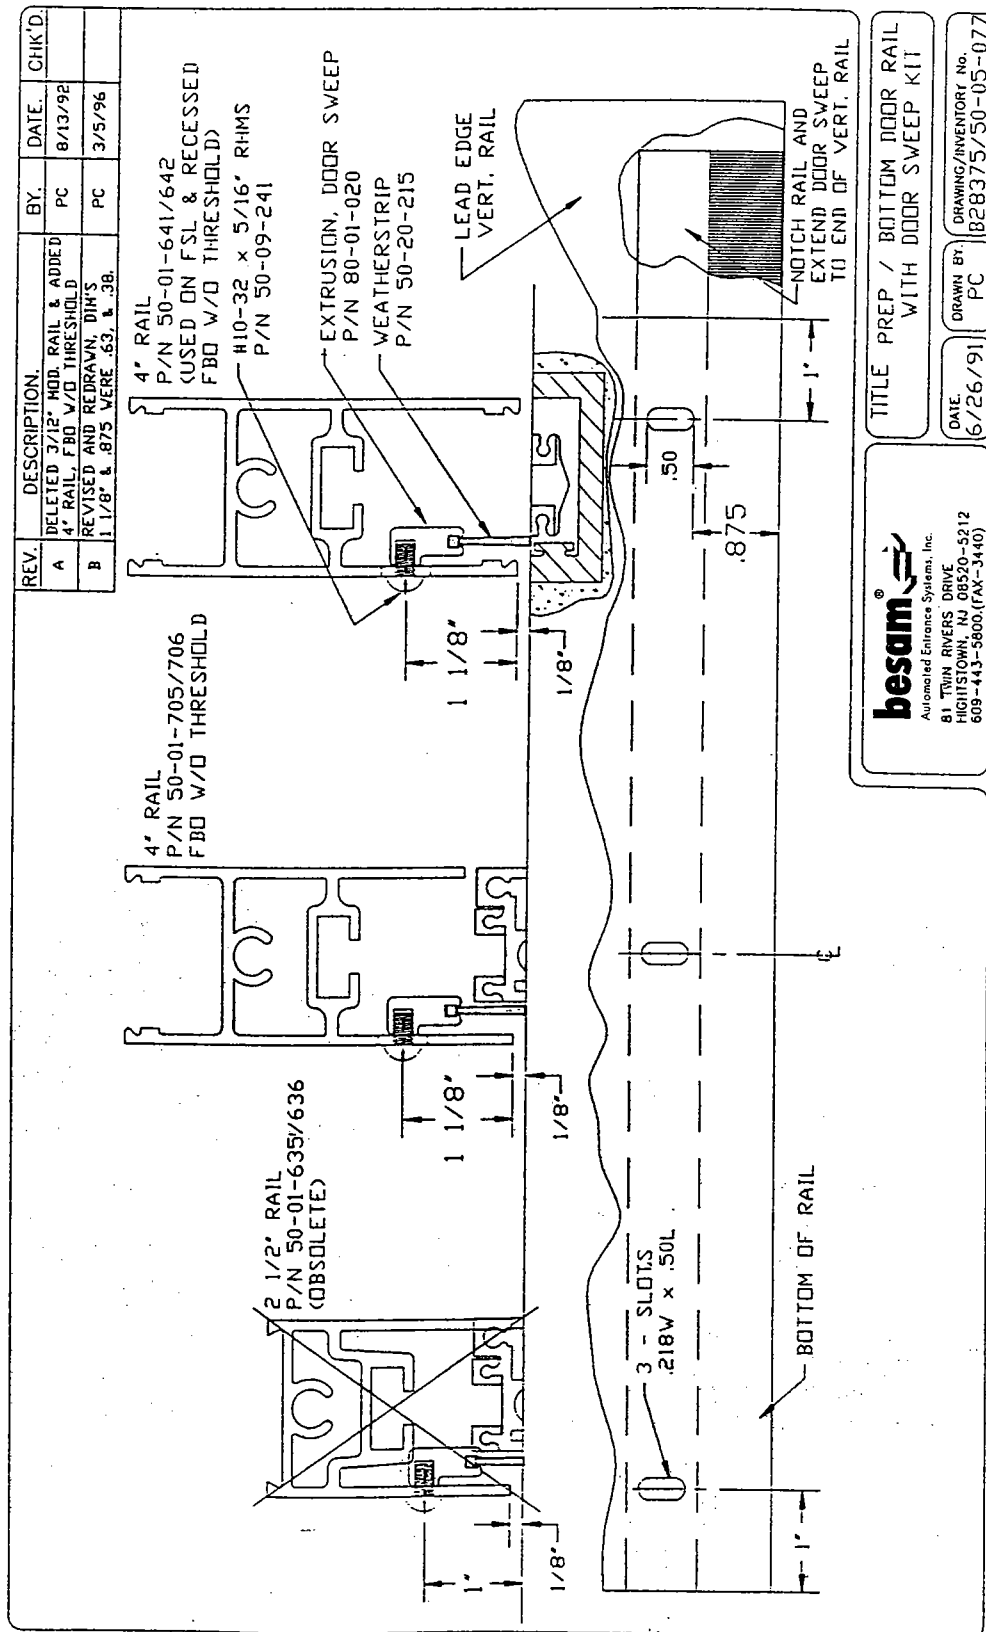


Appendix


Changing the processor on CUD-9 and CUJ-9 control units

- 1: Before starting, connect the PMD and save the current settings by selecting function 98, value 97, and pushing P. Wait until display reads ON. Remove the PMD.
- 2: Disconnect power from the unit, and remove the control unit from the drive module.
- 3: Open the cover on the control unit and locate the square chip socket containing the microprocessor chip.
- 4: **Note:** The microprocessor chips are extremely sensitive to static electricity. Discharge static from your body by touching a ground before handling the chips.
- 5: Check the orientation of the chip in the socket, as the new processor must be inserted in the same orientation. (Note: the dot on the flat edge of the chip aligns with a notch or arrow on the socket - see below.)
- 6: Remove the old chip from the socket with an extractor tool (P/N 04-02-010). Squeeze the tool gently and firmly, and the chip will pop out. Do not yank on the tool to remove the chip.
- 7: Carefully set the new chip squarely on the socket and firmly push in with both thumbs.
- 8: Reattach cover and reinstall control in drive module.
- 9: Apply power and reconnect the PMD.
- 10: Load the program in the PMD into the control unit by selecting function 98, value 96, and pushing P. Wait until display reads ON. The chip is now programmed to the original settings.
- 11: Check "C" switch location and function for proper operation.
- 12: Check that all adjustments are in accordance with the current applicable ANSI standards.

Note: Special chip for short stroke processors (see page 27) is P/N 655750

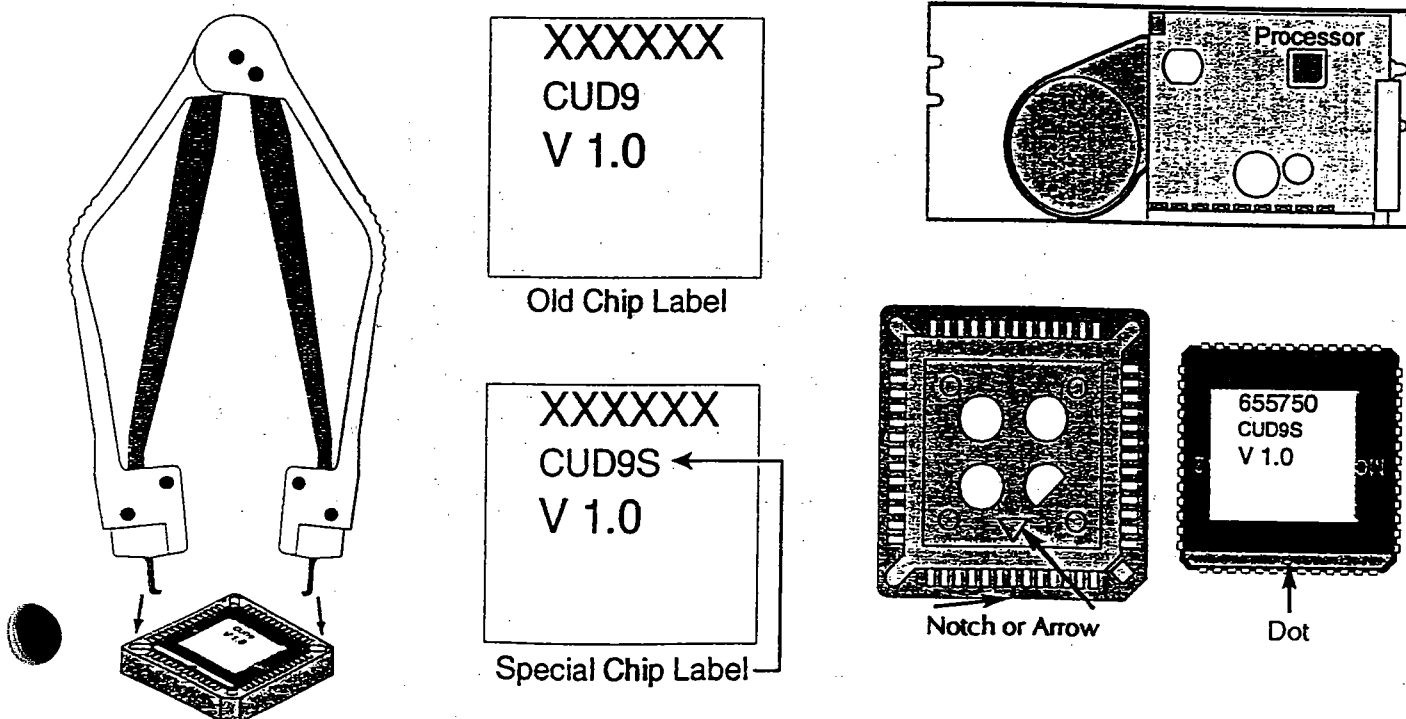

POWER-GLIDE AMD II / EZ-FIT EMD II SPARE PARTS

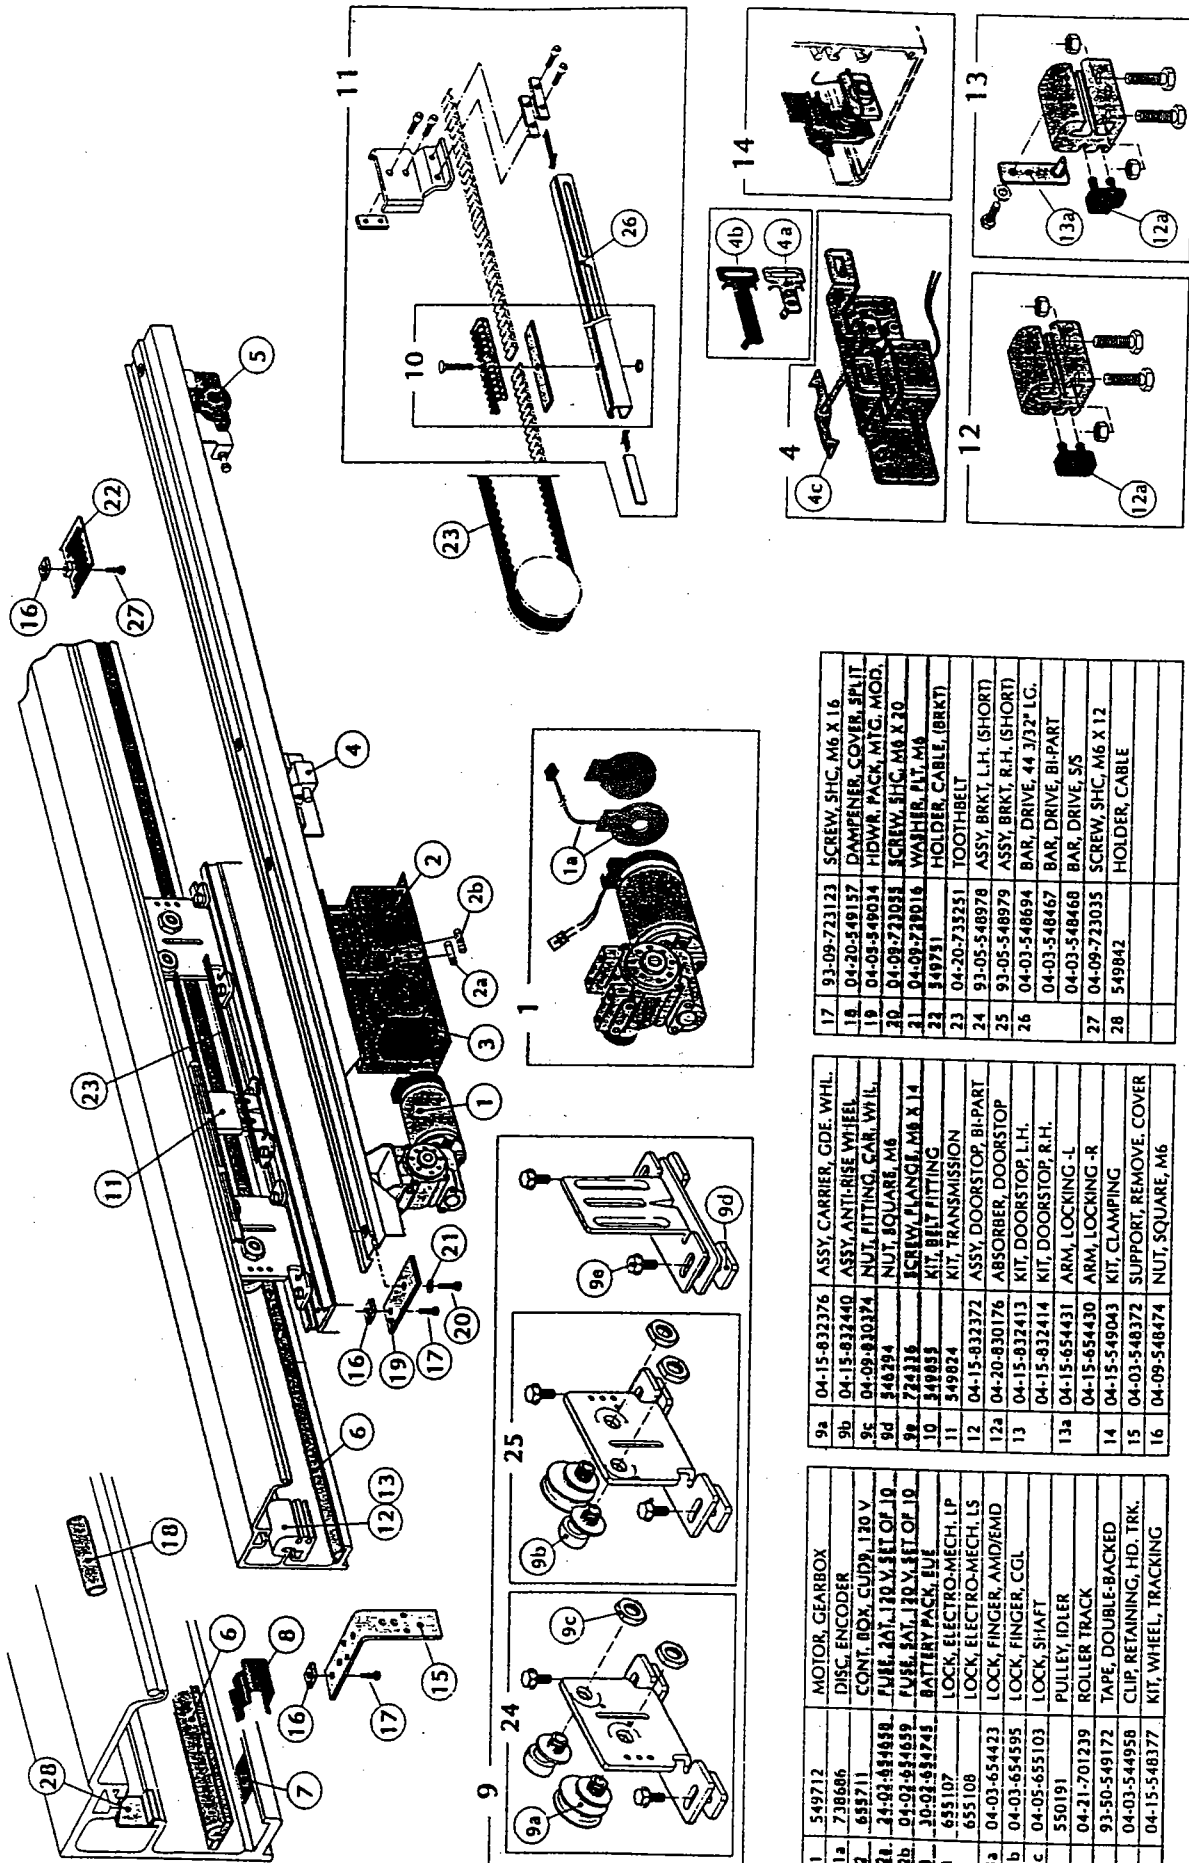

1	549712	MOTOR, GEARBOX	9a	04-15-832376	ASSY, CARRIER, GDE. WHL.	17	93-09-723123	SCREW, SHC, M6 X 16
1a	738686	DISC, ENCODER	9b	04-15-832440	ASSY, ANTI-RISE WHEEL	18	04-20-549157	DAMPENER, COVER, SPLIT
2	659711	CONT. BOX, CU/D9, 120 V	9c	04-09-830374	NUT, FITTING, CAR, WHIL	19	04-05-549034	HDWR, PACK, MTC, MOD.
2a	04-02-934658	FUSE, 2A, 120 V, SET OF 10	9d	04-09-830374	NUT, SQUARE, M6	20	04-09-723251	SCREW, SHC, M6 X 10
2b	04-02-934659	FUSE, 5A, 120 V, SET OF 10	9e	724218	SCREW, FLANGE, M6 X 14	21	04-09-723251	WASHER, PLT, M6
3	04-02-934745	BATTERY PACK, EUE	10	349893	KIT, BELT FITTING	22	349751	HOLDER, CABLE, (BRKT)
4	655107	LOCK, ELECTRO-MECH, LP	11	349824	KIT, TRANSMISSION	23	04-20-735251	TOOTHBELT
4a	04-03-654423	LOCK, FINGER, AMD/EMD	12	04-15-832372	ASSY, DOORSTOP, BI-PART	24	93-05-548978	ASSY, BRKT, L.H. (SHORT)
4b	04-03-654595	LOCK, FINGER, CGL	12a	04-20-830176	ABSORBER, DOORSTOP	25	93-05-548979	ASSY, BRKT, R.H. (SHORT)
4c	04-05-655103	LOCK, SHAFT	13	04-15-832413	KIT, DOORSTOP, L.H.	26	04-03-548694	BAR, DRIVE, 44 3/32" LG.
5	550191	PULLEY, IDLER	13a	04-15-832414	KIT, DOORSTOP, R.H.		04-03-548467	BAR, DRIVE, BI-PART
6	04-21-701239	ROLLER TRACK	13a	04-15-654431	ARM, LOCKING -L		04-03-548468	BAR, DRIVE, S/S
7	93-50-549172	TAPE, DOUBLE-BACKED	14	04-15-854430	ARM, LOCKING -R		04-09-723035	SCREW, SHC, M6 X 12
8	04-03-544958	CLIP, RETAINING, HD. TRK.	15	04-03-548372	KIT, CLAMPING	27		
9	04-15-548377	KIT, WHEEL, TRACKING	16	04-09-548474	NUT, SQUARE, M6	28	549842	HOLDER, CABLE

Parts List

P/N: 549712	Motor/Gearbox and Encoder (complete)
P/N: 738686	Encoder Disc
P/N: 655711	CUD-9 Control Unit
P/N: 655753	CUD-9 Control Unit with Special Processor for Short Stroke Doors
P/N: 655724	CUJ-9 Control Unit
P/N: 655755	CUJ-9 Control Unit with Special Processor for Short Short Stroke Doors
P/N: 655750	Special Processor for Short Stroke Doors
P/N: 24-02-654658s	Fuses 2Amp. Set of 10
P/N: 04-02-654659s	Fuses 5Amp. Set of 10
P/N: 550191	Idler Pulley
P/N: 04-20-735251	ToothBelt (specify length)
P/N: 04-20-548722	Toothbelt for DA Drive Unit (8'-15' Bi-Part)
P/N: 04-20-548723	Toothbelt for DB Drive Unit (8'-8'6" Single Slide)
P/N: 04-21-701239	Carrier Roller Guide Track
P/N: 04-03-544958	Track Retaining Clip
P/N: 04-15-832376	Carrier Guide Wheel Assembly
P/N: 04-15-832440	Anti-Rise Wheel Assembly
P/N: 04-09-830374	Carrier Wheel Nut
P/N 04-03-548694	44" transmission rod
P/N 04-03-548467	33.5" transmission rod
P/N 04-03-548468	10.5" transmission rod
P/N: 50-15-390	Pin Guide
P/N: 50-15-147	Roller Guide
P/N: 50-15-015	Non-Panic Floor Guide
P/N: 04-02-654509B	PMD, 2000 Use Service Life
P/N: 04-02-654509C	PMD, 400 Use Service Life
P/N: 04-02-654509E	PMD, Restricted Customer Version, 400 Use Service Life

For Drive Module assemblies, see page 27.

Kits:

P/N: 549855	Belt Clamping Kit
P/N: 75-15-310	3 Position Switch - Clear
P/N: 75-15-311	3 Position Switch - Black
P/N: 75-15-100	4 Position Switch - Knob - Clear
P/N: 75-15-101	4 Position Switch - Knob - Black
P/N: 75-15-105	4 Position Switch - Key - Clear
P/N: 75-15-106	4 Position Switch - Key - Black
P/N: 655743	6 Position Switch - Knob - Clear
P/N: 655763	6 Position Switch - Knob - Black
P/N: 655740	6 Position Switch - Key - Clear
P/N: 655765	6 Position Switch - Key - Black
P/N: 04-15-548377	Carrier Mounting Kit
P/N: 04-15-548731	Drive Bar Kit, Bi-Part
P/N: 04-15-548732	Drive Bar Kit, Single Slide
P/N: 04-03-548694	Drive Bar (44-3/32")
04-20-654461	Transmission Absorber

Parts List

P/N: 04-05-832372 Door Stop
P/N: 04-20-830176 Door Stop Absorber
P/N: 04-15-832413 Door Stop Kit, Left Hand
P/N: 04-15-832414 Door Stop Kit, Right Hand
P/N: 04-15-645431 Door Stop Kit, Left Hand
P/N: 04-15-654430 Door Stop Kit, Right Hand

Labels:

P/N: 75-20-100 Dual Side "Automatic Door / Do Not Enter" – (Out)
P/N: 75-20-101 Dual Side "Automatic Door / Do Not Enter" – (In)
P/N: 75-20-102 Dual Side "Caution Automatic Door"
P/N: ??? Dual Side "In Emergency, Push To Open"
P/N: ??? Dual Side "Automatic Door - Stand Clear"

Push Plates:

P/N: US02-0153-02 Square: "Push To Open"
P/N: US02-0153-04 Square: Blank
P/N: 75-02-100 Round: "Push To Open"
P/N: 75-02-104 Round: Blank
P/N: 75-02-281 Narrow: "Push To Open"
P/N: 75-21-002 Installation Box for Narrow plates

Remote Push Plates (RF):

P/N: 75-02-269 Narrow: "Push To Open"
P/N: 75-02-273 Round: "Push To Open"
P/N: 75-02-271 Remote Receiver

Locks:

P/N: 04-02-692064 Lock, Fail-secure, Bi-Part
P/N: 04-02-692065 Lock, Failsafe, Bi-Part
P/N: 04-02-692066 Lock, Fail-secure, Right Hand
P/N: 04-02-692067 Lock, Fail-secure, Left Hand
P/N: 04-02-692068 Lock, Failsafe, Right Hand
P/N: 04-02-692069 Lock, Failsafe, Left Hand
P/N: 04-02-654423 Lock Fitting

Emergency Unit:

P/N: 30-02-654745 EUE Battery Pack

Miscellaneous:

P/N: 04-02-010 Chip Extractor Tool

Notes



Automated Entrance Systems, Inc.

84 Twin Rivers Drive
Hightstown, New Jersey
08520-5213
USA

Tel: 609-443-5800
Fax: 609-443-5596
www.besam.com/na/



Automated Entrance Systems, Inc.

84 Twin Rivers Drive
Hightstown, New Jersey
08520-5213
USA

Tel: 800-872-9290
609-443-5800

Fax: 609-443-6167

Web: <http://www.besam.com/na/>

E-mail: marketing@besam-usa.com

Besam Support Services

For 24 hour-a-day service, contact 1-800-95BESAM

Besam follows a policy of advancements in development.
For this reason, specifications may be changed without notice.

© Copyright 2000 Besam Automated Entrance Systems, Inc.
Printed in USA