

STATUS LIGHT CODE - SUMMARY

NUMBER OF GREEN FLASHES

INDICATES

1	Test (Factory use only)
2	Learning
3	Latch Stop
4	Latch Stop - Push & go on
5	Opening
6	Back Stop
7	Balance
8	Closing
9	Abort

NUMBER OF RED FLASHES

INDICATES

2	Overcurrent
4	Short Connecting Arm (too much preload), or for Push
5	Long Connecting Arm (too little preload), or P for Pull
7	Encoder Cable
10	Open Motor Lead or Disconnected Encoder, \n Brushes, Damaged Control Module.

NO LIGHT

No power to unit, or unit is overheated and in
down state (should continue to run after it has
cooled). **Caution: Motor may be hot!**

load), or Pull set

ad), or Push set

ncoder, Worn

d and in a cool
fter it has
rt!