

Need to conduct this while the display is blinking.

Single or only activation synced. If activation is synced you must take it out they WILL cross talk.

**TTX II TEACH IN
SINGLE OPERATOR**

FACTORY RESET

BLUE, YELLOW
YELLOW TO 9 THEN BLUE
YELLOW TO 1 THEN BLUE

LEARN CONTROL

BLUE, YELLOW
YELLOW TO 0 THEN BLUE
0 BLINKING MANUALY OPEN AND CLOSE DOOR
PUSH DOOR SO PUSH GO KICKS IN LET CLOSE

0 blinking is for motion of door.
use the chart to learn different parameters.

This is only used if the phone jack sync cable is installed.

**TTX II TEACH IN
DUAL OPERATORS**

FACTORY RESET

DO THIS ON BOTH CONTROLS
BLUE, YELLOW
YELLOW TO 9 THEN BLUE
YELLOW TO 1 THEN BLUE

MASTER CONTROL

BLUE, YELLOW
YELLOW TO 9 THEN BLUE
YELLOW TO 2 THEN BLUE
0 BLINKING MANUALY OPEN LET CLOSE
PUSH DOOR SO PUSH GO KICKS IN LET CLOSE

SLAVE CONTROL

BLUE, YELLOW
YELLOW TO 0 THEN BLUE
0 BLINKING MANUALY OPEN LET CLOSE
PUSH DOOR SO PUSH GO KICKS IN LET CLOSE

SYNC UP CONTROLS
DO THIS ON BOTH CONTROLS

BLUE, YELLOW
YELLOW TO 9 THEN BLUE
YELLOW TO 7 THEN BLUE


yellow to 0 then blue