

Series 2000T Linear Drive Telescoping Door Operator Installation Instructions



1.126d

CONTENTS

1. Instructions to installer.....	G202.1
2. General requirements.....	G202.1
3. Installing frame.....	G202.2
4. Installing floor guides.....	G202.3
5. Installing SX panels (SX-SX-SO).....	G202.4
6. Installing SO panel (SX-SX-SO).....	G202.5
7. Installing panels (SX-X-O).....	G202.6
8. Installing panels (X-X-O).....	G202.7
9. Typical glazing and squaring.....	G202.8
10. Standard locking.....	G202.8
11. Automatic locking (optional).....	G202.9
12. Activating devices.....	G202.9
13. Motion Sensor Prep.....	G202.9
14. Mechanical parts - series 2000T.....	G202.10
15. Safety considerations.....	G202.11
16. Decal application.....	G202.11

SERIES 2000 ELECTRIC SLIDING TELESCOPING DOOR INSTALLATION INSTRUCTIONS

1. INSTRUCTIONS TO INSTALLER

- This door is to be installed by a trained and experienced installer with knowledge of local codes and ANSI A156.10 standards for power operated doors.
- To ensure safe and proper operation, the door must be installed and adjusted to conform to Horton Automatics recommendations, all code requirements and ANSI A156.10.
- If there are any questions about these instructions, call Horton Automatics Technical Assistance.


INFORMATION TO BE PROVIDED BY THE DISTRIBUTOR TO THE OWNER

- After installation instruct the owner on the safe operation of the door.
- Present the Owners Manual M300 and explain how to perform the daily safety check.
- Show the location of power on / off switch.
- Necessary warnings not covered in these general instructions.
- Date equipment shipped from Horton Automatics.
- Date equipment placed in service.
- Horton Automatics' invoice number for warranty reference.
- Equipment type.
- Accessories included.
- Phone number to call regarding problems or request for service.
- Give caution** to owner: if a potentially hazardous situation is suspected, the door should be taken out of automatic service until a professional inspection is made and the problem is corrected.

2. GENERAL REQUIREMENTS


- Power: 120 VAC, 60Hz, 15 Amp service (in conduit) to the "J" box inside the header of each unit.
- Non North American voltages can be 240 VAC, if so be sure the operator has a 240VAC power supply.
- Power may be brought in through the top of the jamb on perimeter mount units or in through the back of surface mount units.
- For remote switch locations, routing of low voltage class II wiring (in conduit) to the operator controls will be required.
- Remote switch locations should be predetermined and wired before installation begins.
- Opening size should be 1/4" taller and 1/2" wider than the unit / frame.
- The opening must be plumb and level, including the threshold area.
- Door panels may be glazed before or after installation.

POWER INPUT LOCATIONS

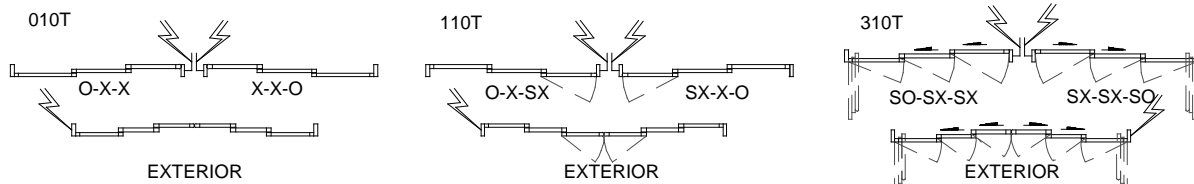


3. INSTALLING FRAME

If a recessed threshold is required, this should be done prior to frame installation. Take care that the frame is not racked. Wood shingles will be needed to shim the unit. All the fasteners shown below are provided with each unit. If these are inappropriate, alternate fasteners are shown in the fastener chart. Route power supply wiring and low voltage wiring.

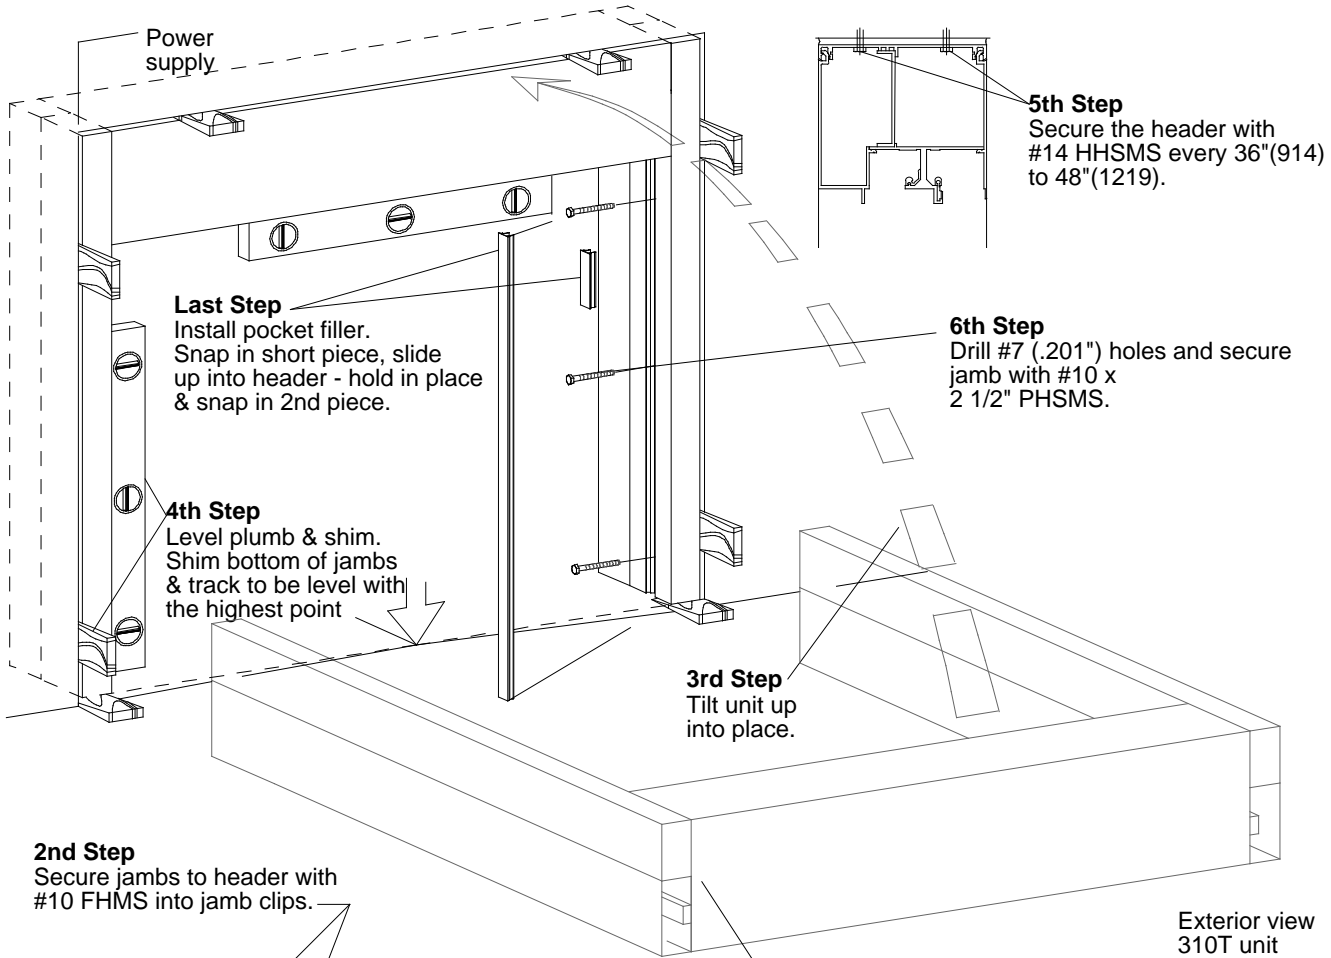


2nd Step
Secure jambs to header with #10 FHMS into jamb clips.

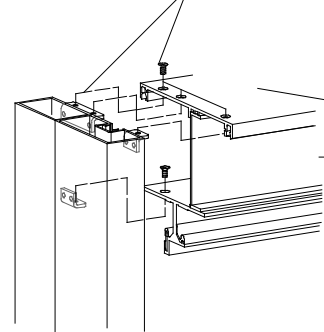

310T (SO-SX-SX) or 010T (O-X-X)
EXTERIOR VIEW

3rd Step
Tilt unit up into place.

1st Step
Remove the face plates and Place the header and jambs on floor to assemble.
NOTE: Protect finish from damage by placing unit on saw horses or protective surface.

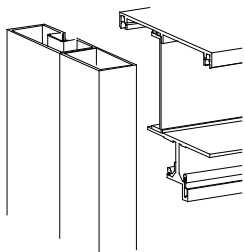

110 (O-X-SX) EXTERIOR VIEW




NOTE:
Be sure header and jambs are correctly oriented for the type unit being installed (see sect 5, 7 & 8).

FASTENER CHART

FASTENER SIZE / TYPE	CLEAR DRILL / C'SINK	SHEET METAL DRILL HOLE	TAP DRILL	TAP SIZE	MASONRY
#6 SMS & #6-32 MS	#25(.149) & #6 c'sink	#31(.120)	#36(.106)	#6-32	
#10 SMS & #10-24 MS	#7(.201) & #10 c'sink	#21(.159)	#25(.149)	#10-24	Drill 1/4"(.25) & use C1423 green anchor
#14 SMS & #1/4-20 MS	#F(.257) & #14 c'sink	3/16(.187)	#7(.149)	1/4-20	Drill 5/16"(.312) & use C1424 blue anchor

4. INSTALLING FLOOR GUIDES

Bottom guides will vary with the unit type. The 3 basic types are shown below. The C315 / C386-1 filler is used with threshold only.

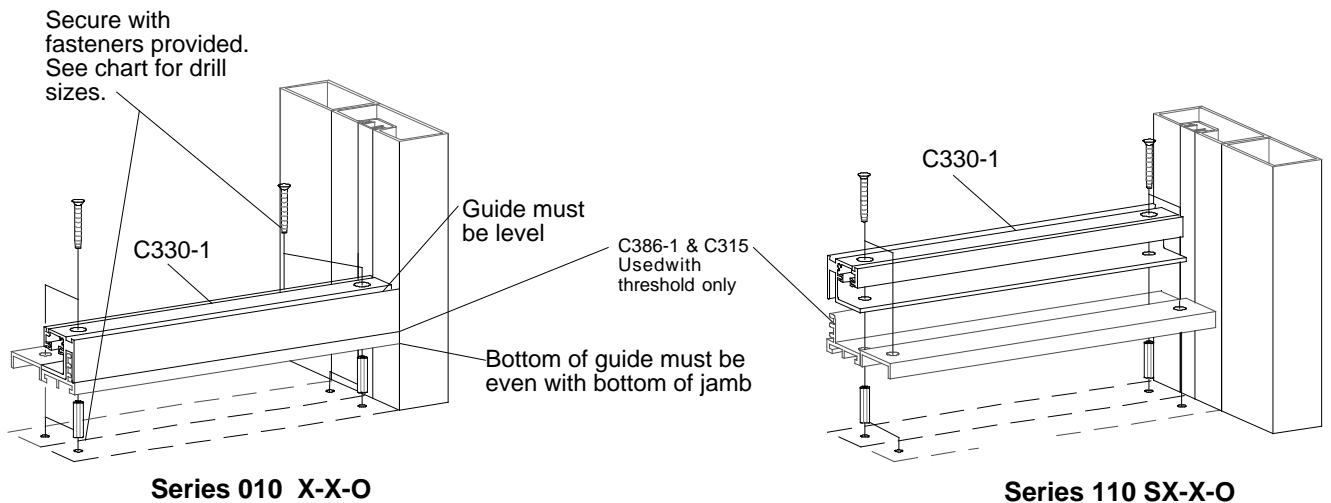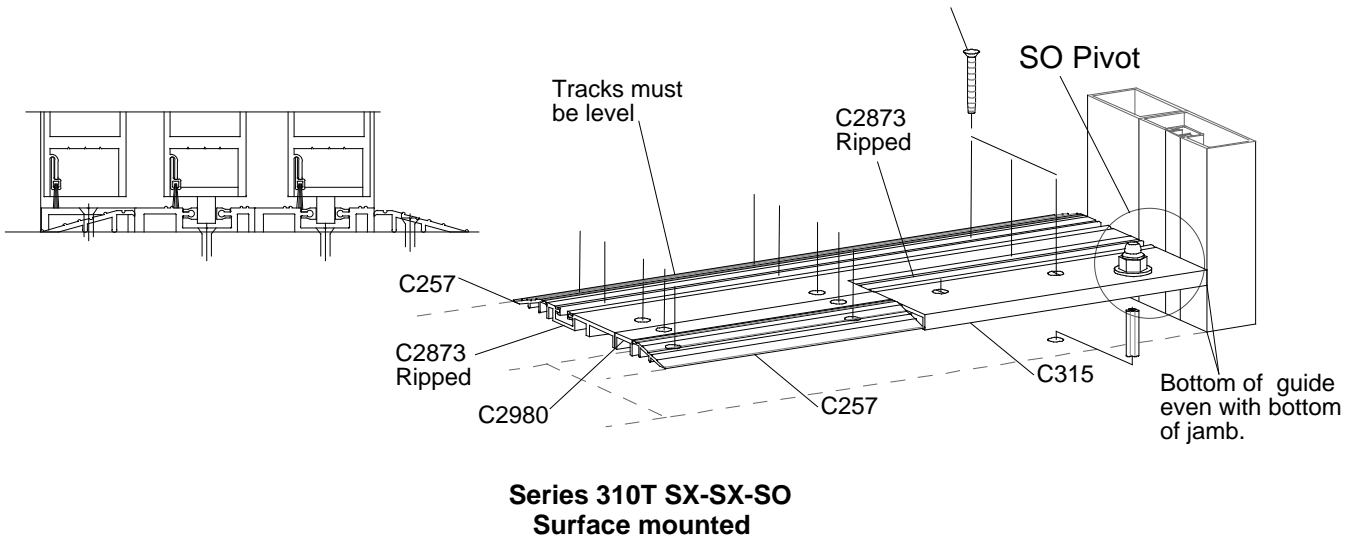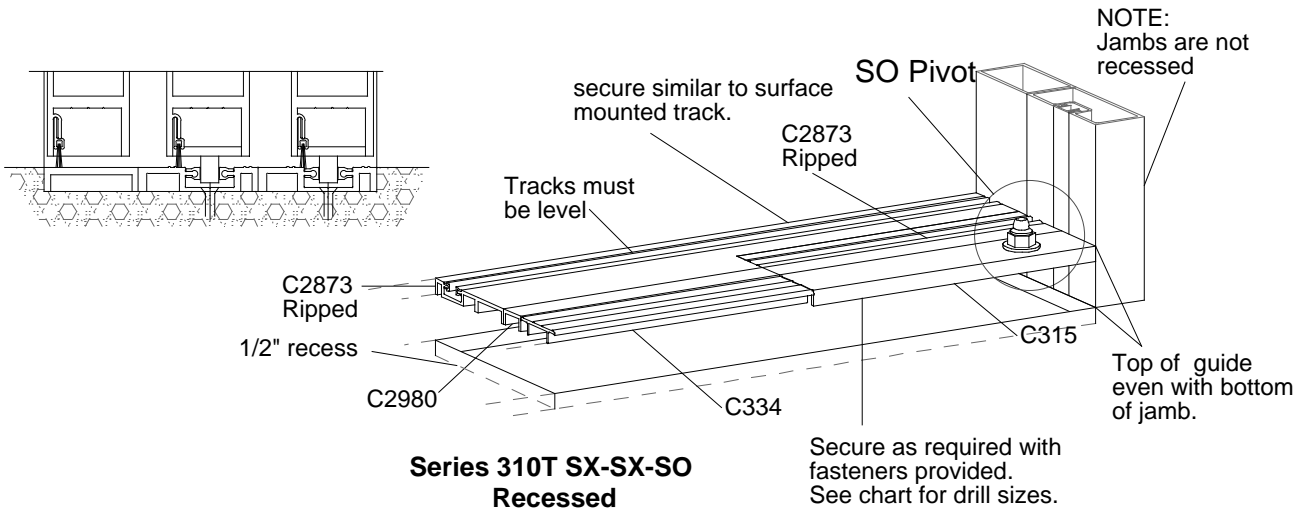

NOTE:
ALL VIEWED FROM EXTERIOR SIDE.

5. INSTALLING SX PANELS (SX-SX-SO)

Note orientation of header and jambs

1st Step

Remove face plates

4th Step

Secure the door panels to the carriages with bolts provided.

2nd Step

Place wheel carriages on the track. (These may already be in place)

6th Step

Adjust if required. Loosen mounting bolts and adjust height screws. Doors should move freely with binding or dragging.

Fast door

Slow door

5th Step

Position the panels as shown in section 6. Connect the power arm if it is not already attached.

NOTE:
Slow door may be broken out to allow the interlocks to engage.


3rd Step

Tilt the panels in at the bottom and place guide pins in the floor track.


EXTERIOR VIEW

Use the same procedure to assemble a bipart unit.

6. INSTALLING SO PANEL (SX-SX-SO)

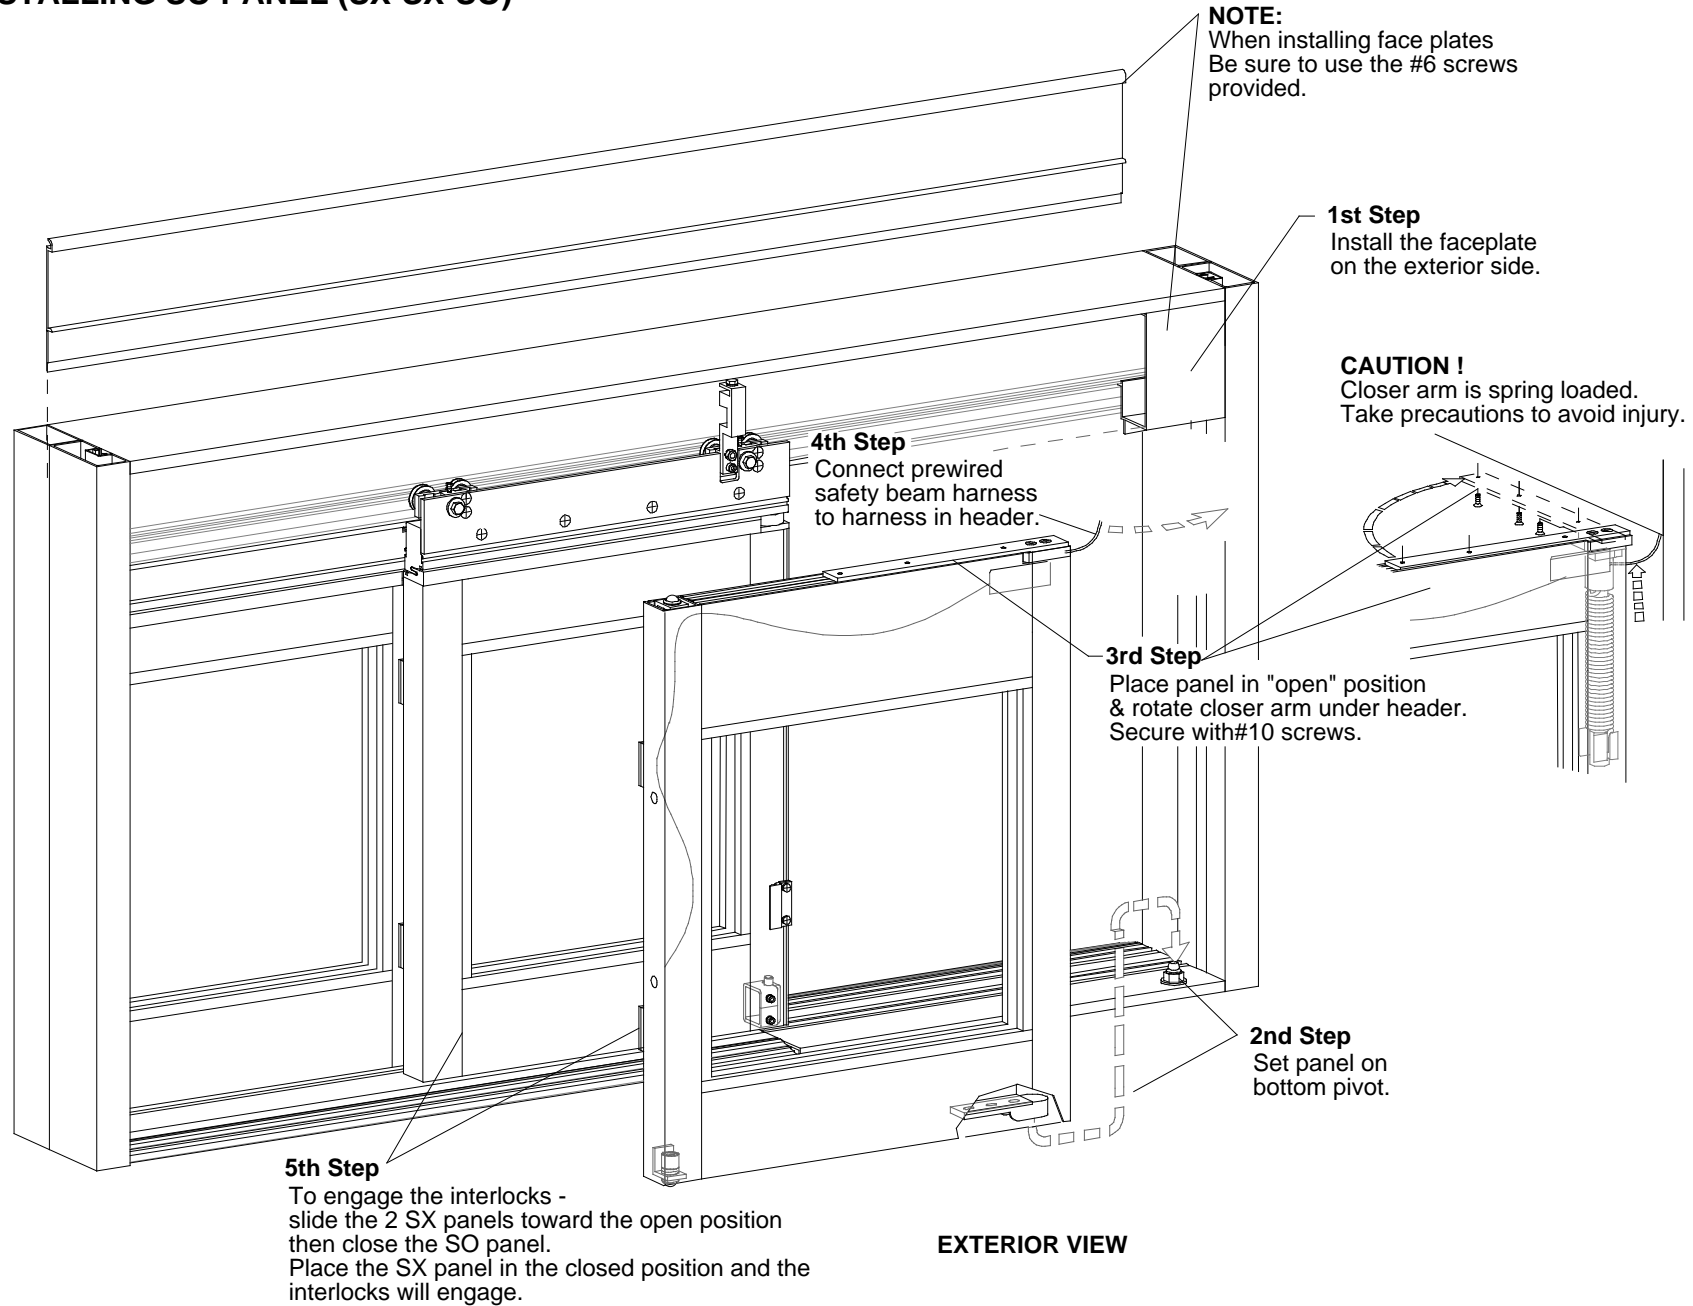


7. INSTALLING PANELS (SX-X-O)

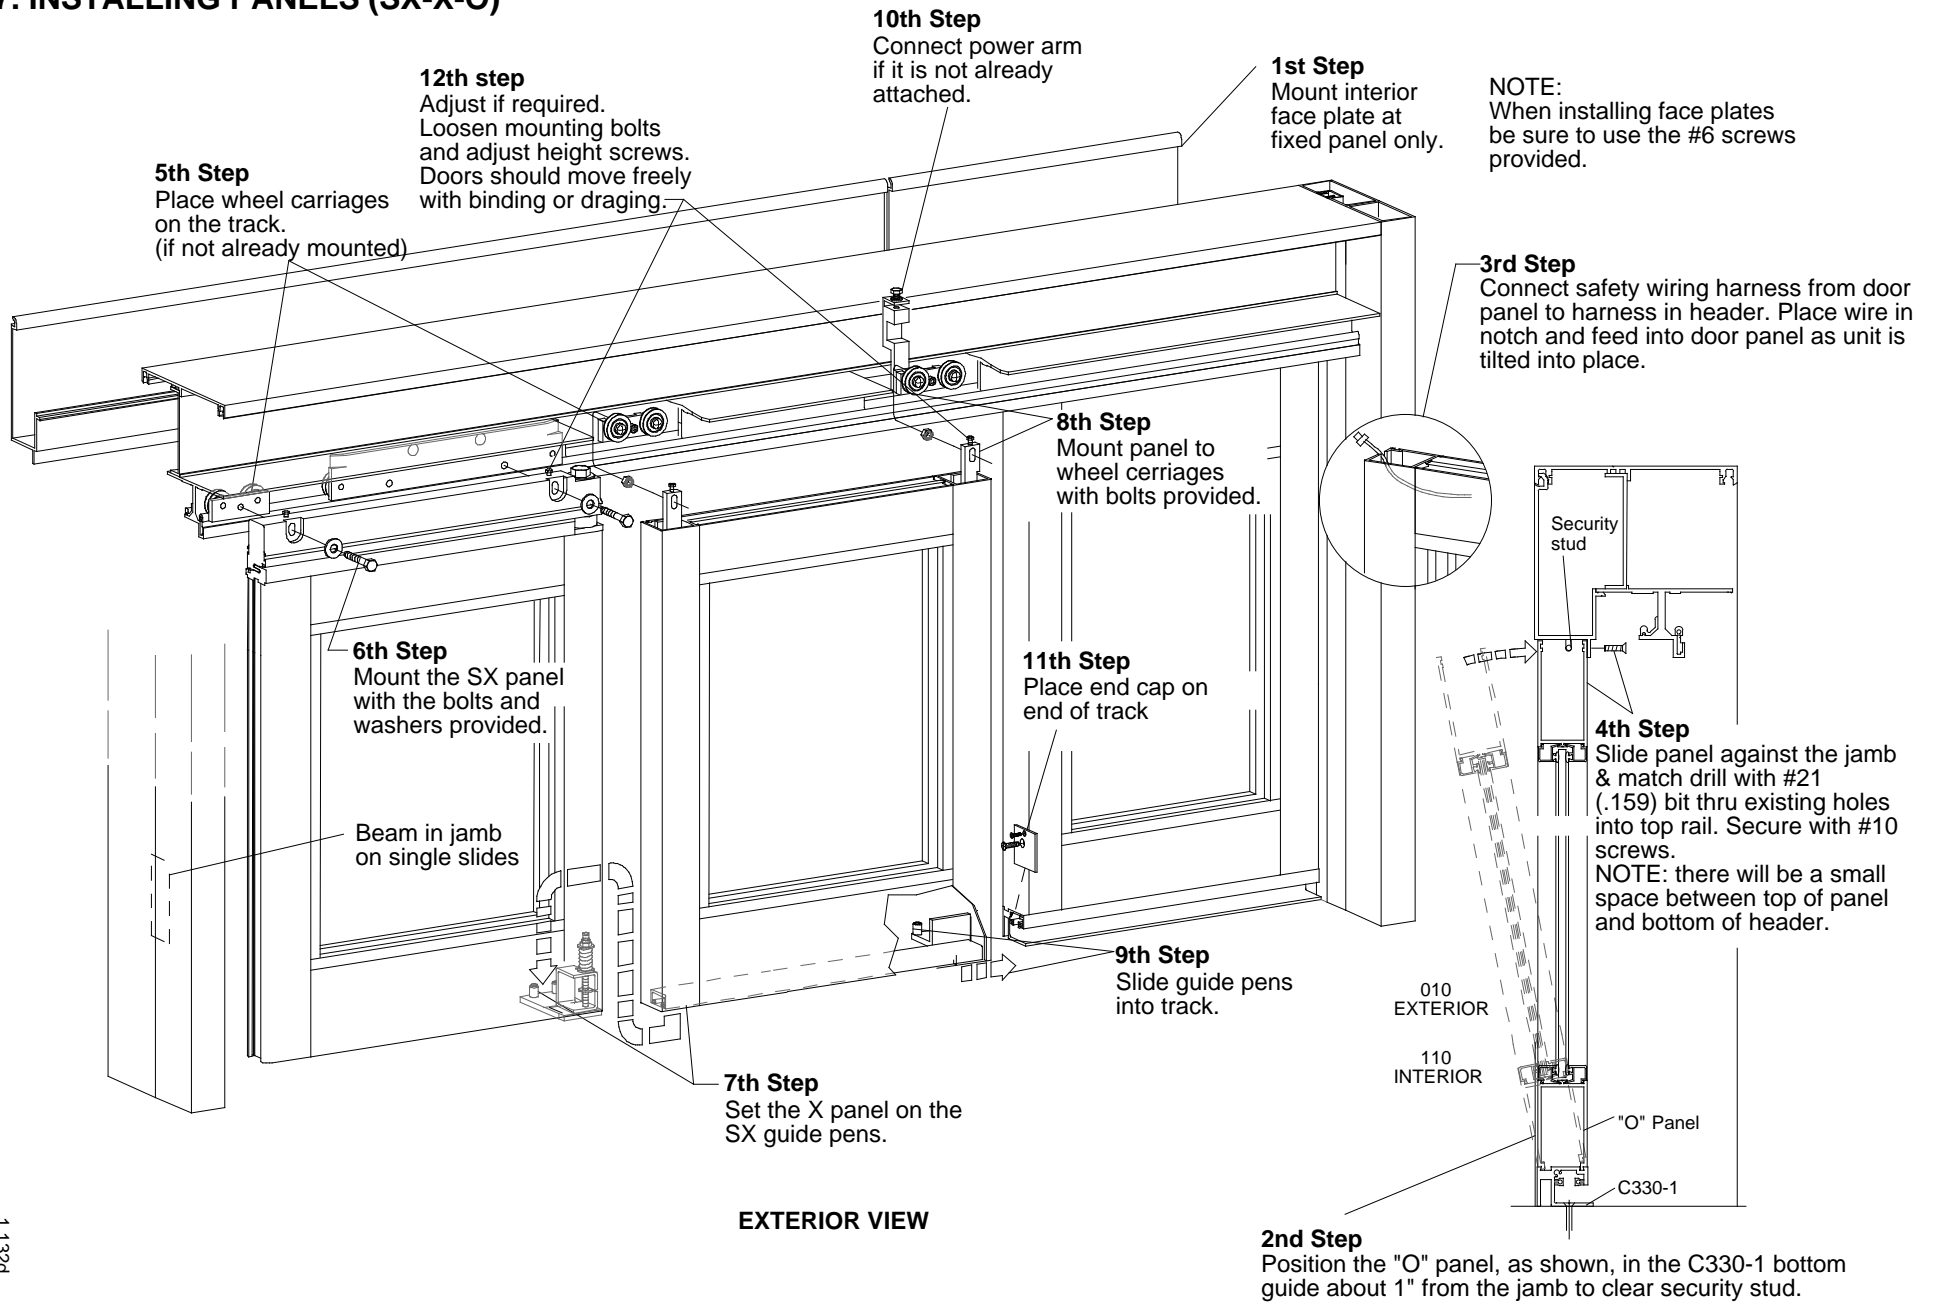


EXTERIOR VIEW

8. INSTALLING PANELS (X-X-O)

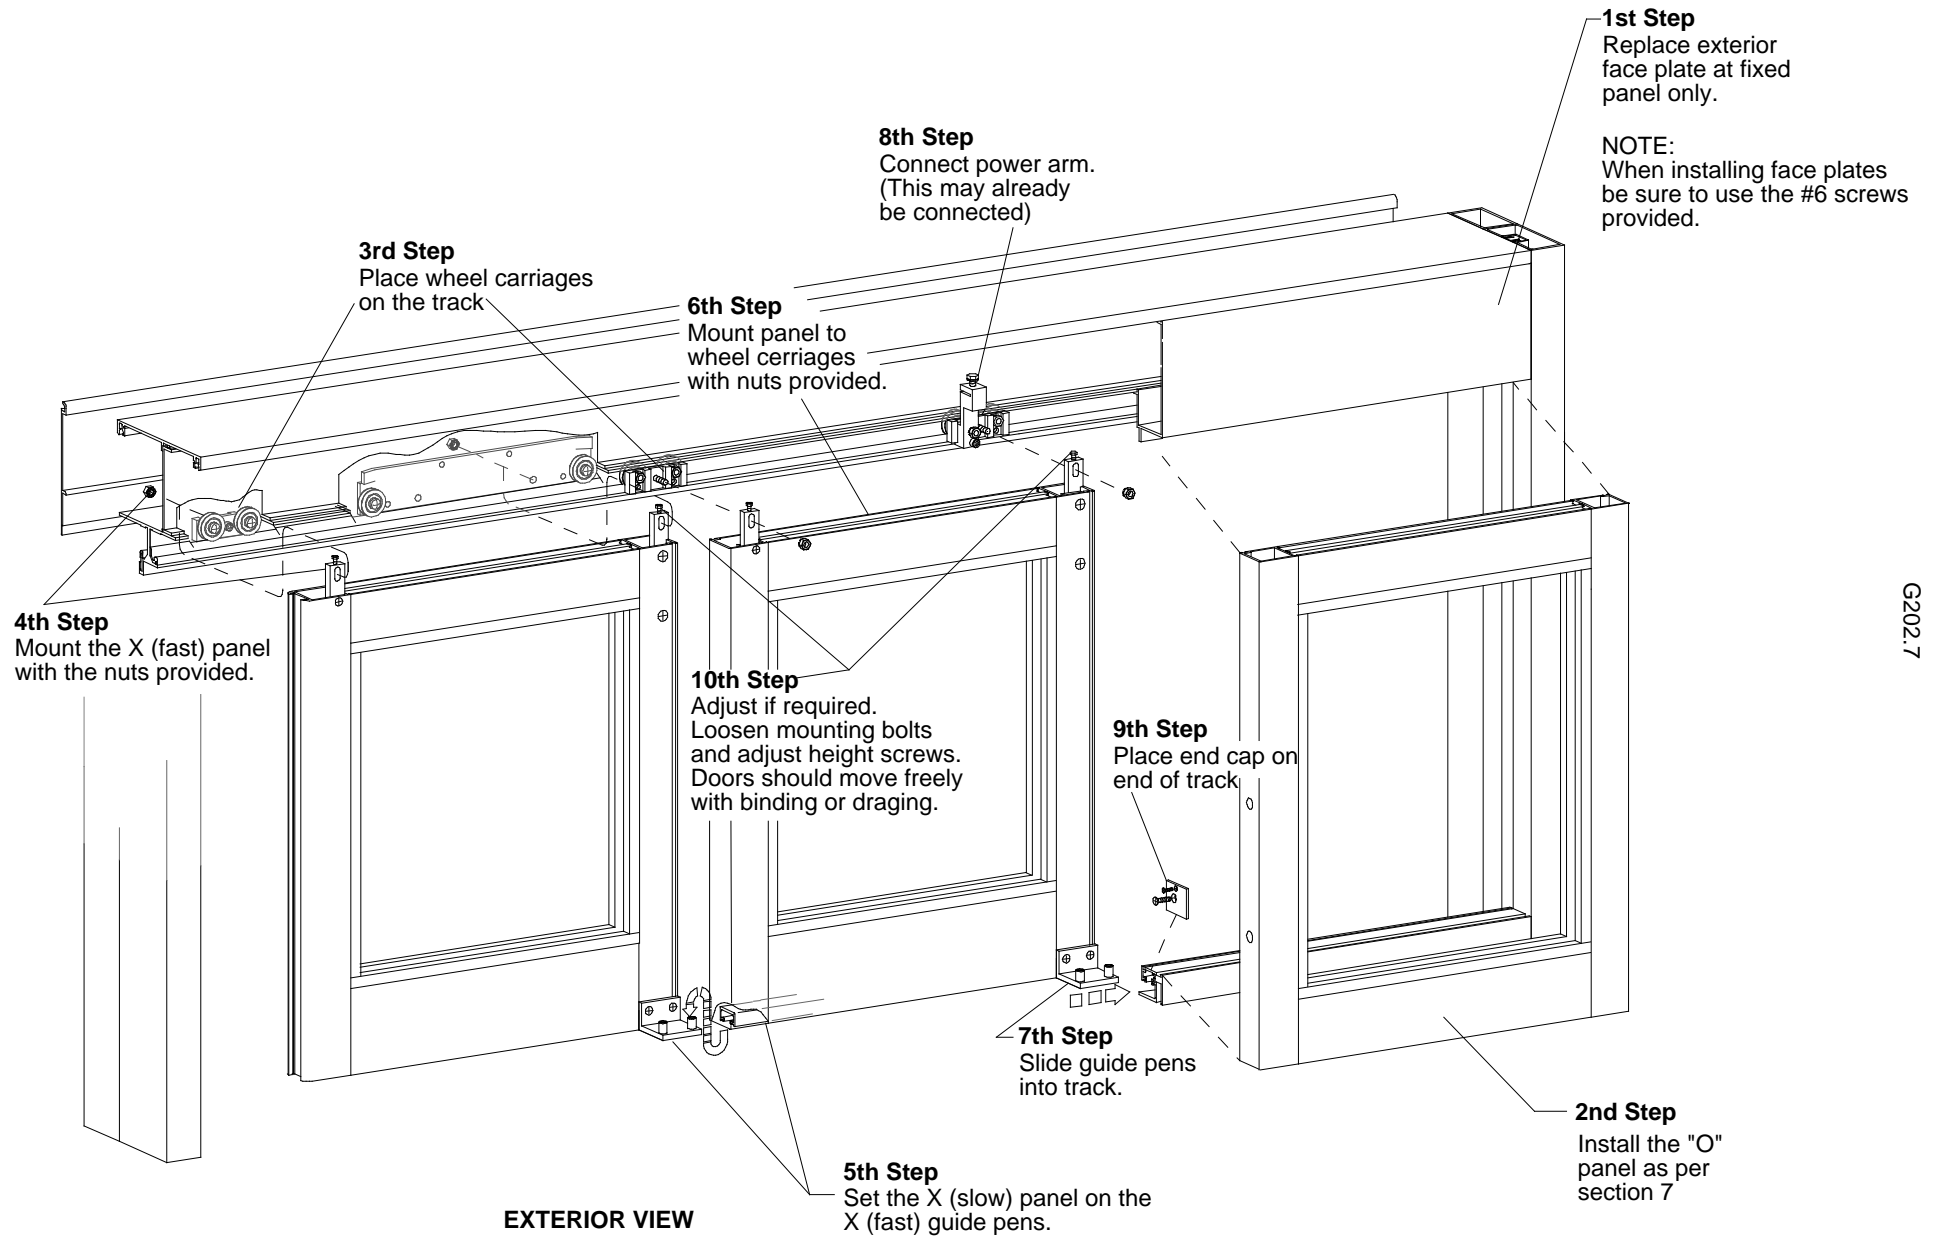

9. TYPICAL GLAZING AND SQUARING

Door panels may be glazed laying down flat or installed in the frame. The latter method is referred to below.

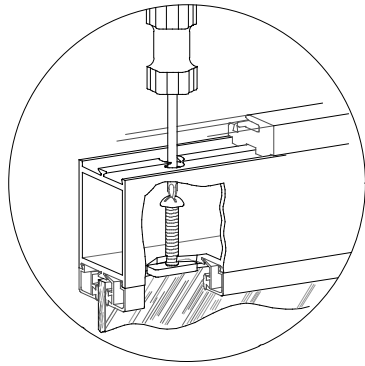

1st Step

Always glaze the "SX" panel with the torsion bar in the broken-out position.


NOTE:

Do not remove glazing blocks from door panels or **glass breakage will occur** when the leveling screw is adjusted.

2nd Step

Use the leveling screw to bring the panels to exact square.

The "SX" is spring loaded and will not stay in open position with out being held.

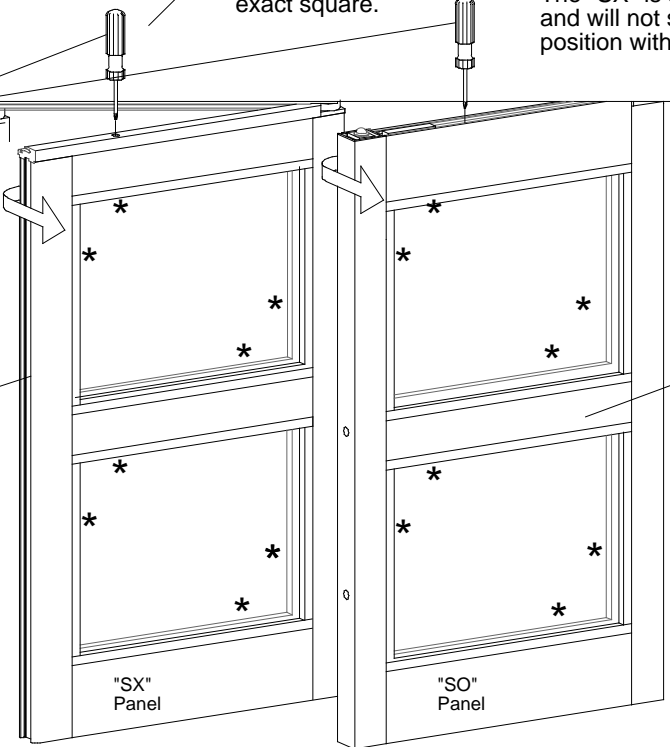


Optional Muntin

* Glazing block locations

10. STANDARD LOCKING

A lock cylinder is included with door. UL requires that the inside of the lock be equipped with a thumbturn. Local codes may vary.

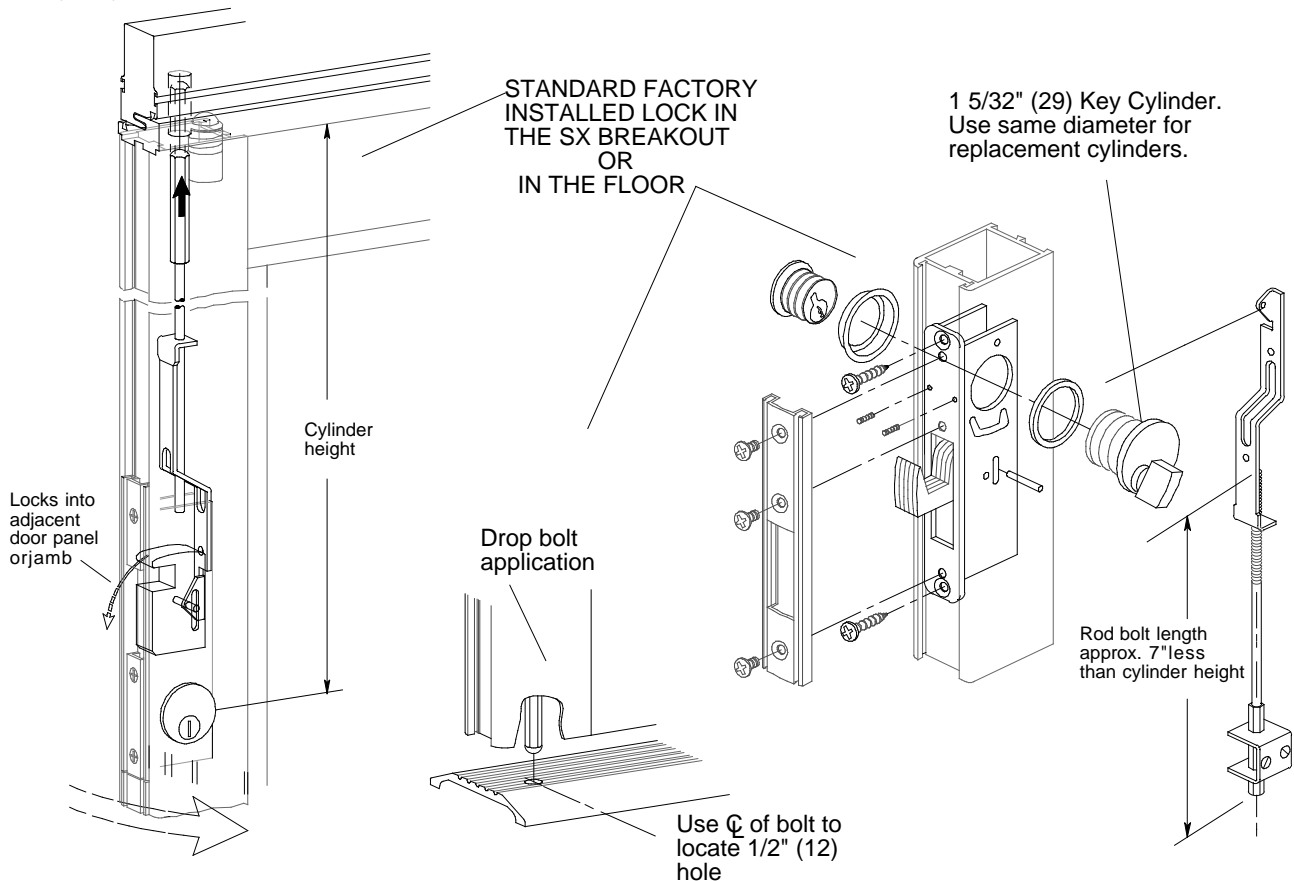

11. AUTOMATIC LOCKING (OPTIONAL)


The Fail Safe and Fail Secure Autolocks will only inhibit the slide action of the door not the "swing" or breakout action. See section 8 for standard locking. Autolocks are installed at the factory. Retrofit units will be supplied with instructions.

GENERAL AUTOLOCK OPERATION

- Open signal is received by control (C2150)
- Unlock signal is sent to Autolock
- Solenoid retracts lockbolt
- Door opens and closes
- Solenoid extends the lockbolt when door is fully closed and the keeper is in locked position
- Door (slide motion only) is locked

LINEAR DRIVE AUTOLOCK

- C2176-5 Fail secure** (if power fails the door will remain locked)
- C2176-5 Fail safe** (if power fails the door will unlock)

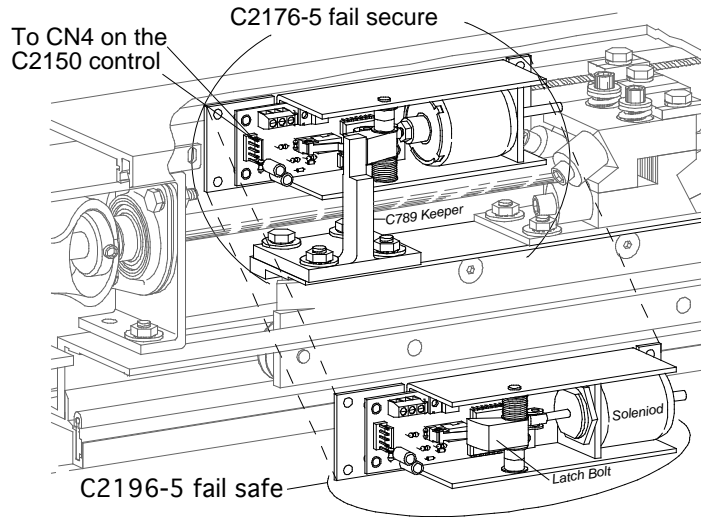

12. ACTIVATING DEVICES

- Activating switches must be located where door operation may be observed by the person actuating it.
- ANSI standard requires a motion detector be placed on each side of the door and be active while the door is open (except the last 6" 150mm of closing). The detector pattern may be reduced to 24" (610) on the control side for one-way traffic.
- Mount sensors on the door header or above at a height of 7ft (2134) to 8ft (2438) from the floor. Sensitivity and detection area may not meet ANSI standards if detector is placed higher.
- Walk test the pattern from various angles and speeds.
- Adjust the sensitivity and pattern of the motion sensor as per ANSI A156.10 See drawing below for pattern and location.

- NOTE: Never decrease the sensitivity or pattern so it will not detect slow moving traffic.**
- The motion detector time delay should be set to a minimum of two seconds cumulative with C2150 control before the door begins to close. Three seconds or more is recommended by Horton Automatics.


13. MOTION SENSOR PREP

1st Step

Drill hole in faceplate for wiring and mount motion sensor with sheet metal screws no more than 7ft to 8ft above the floor. Drilling template is provided with motion detector. Route wiring to avoid moving parts.


2nd Step

Route wiring to C2150 control

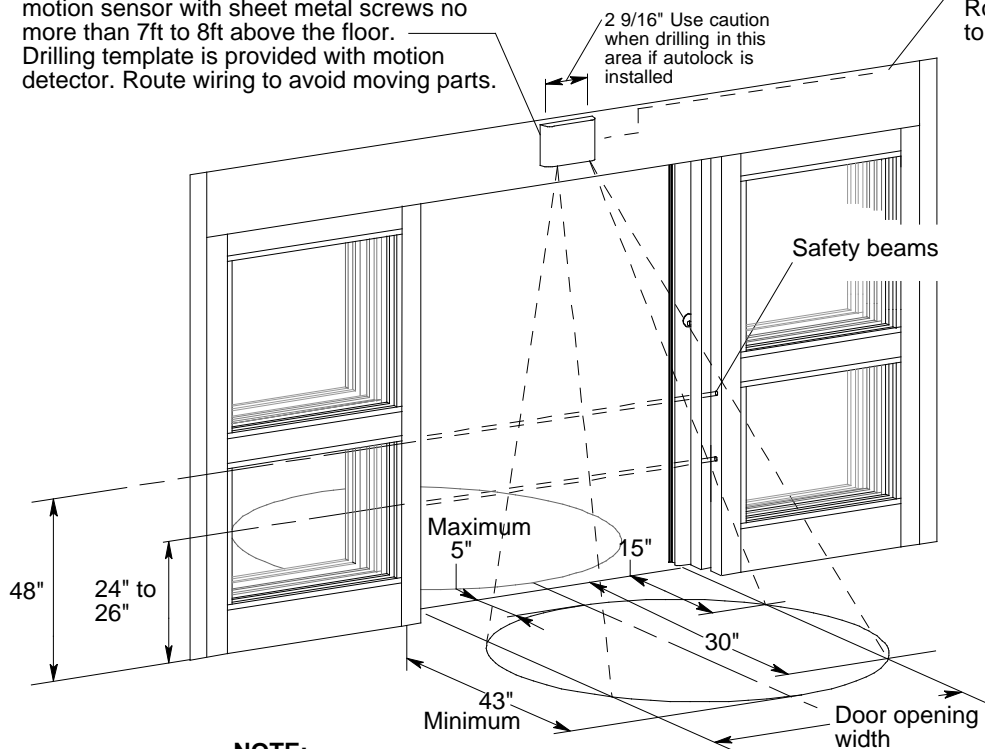

NOTE:
Dimensions taken from face of "fast" sliding door each side.

14. MECHANICAL PARTS - SERIES 2000T

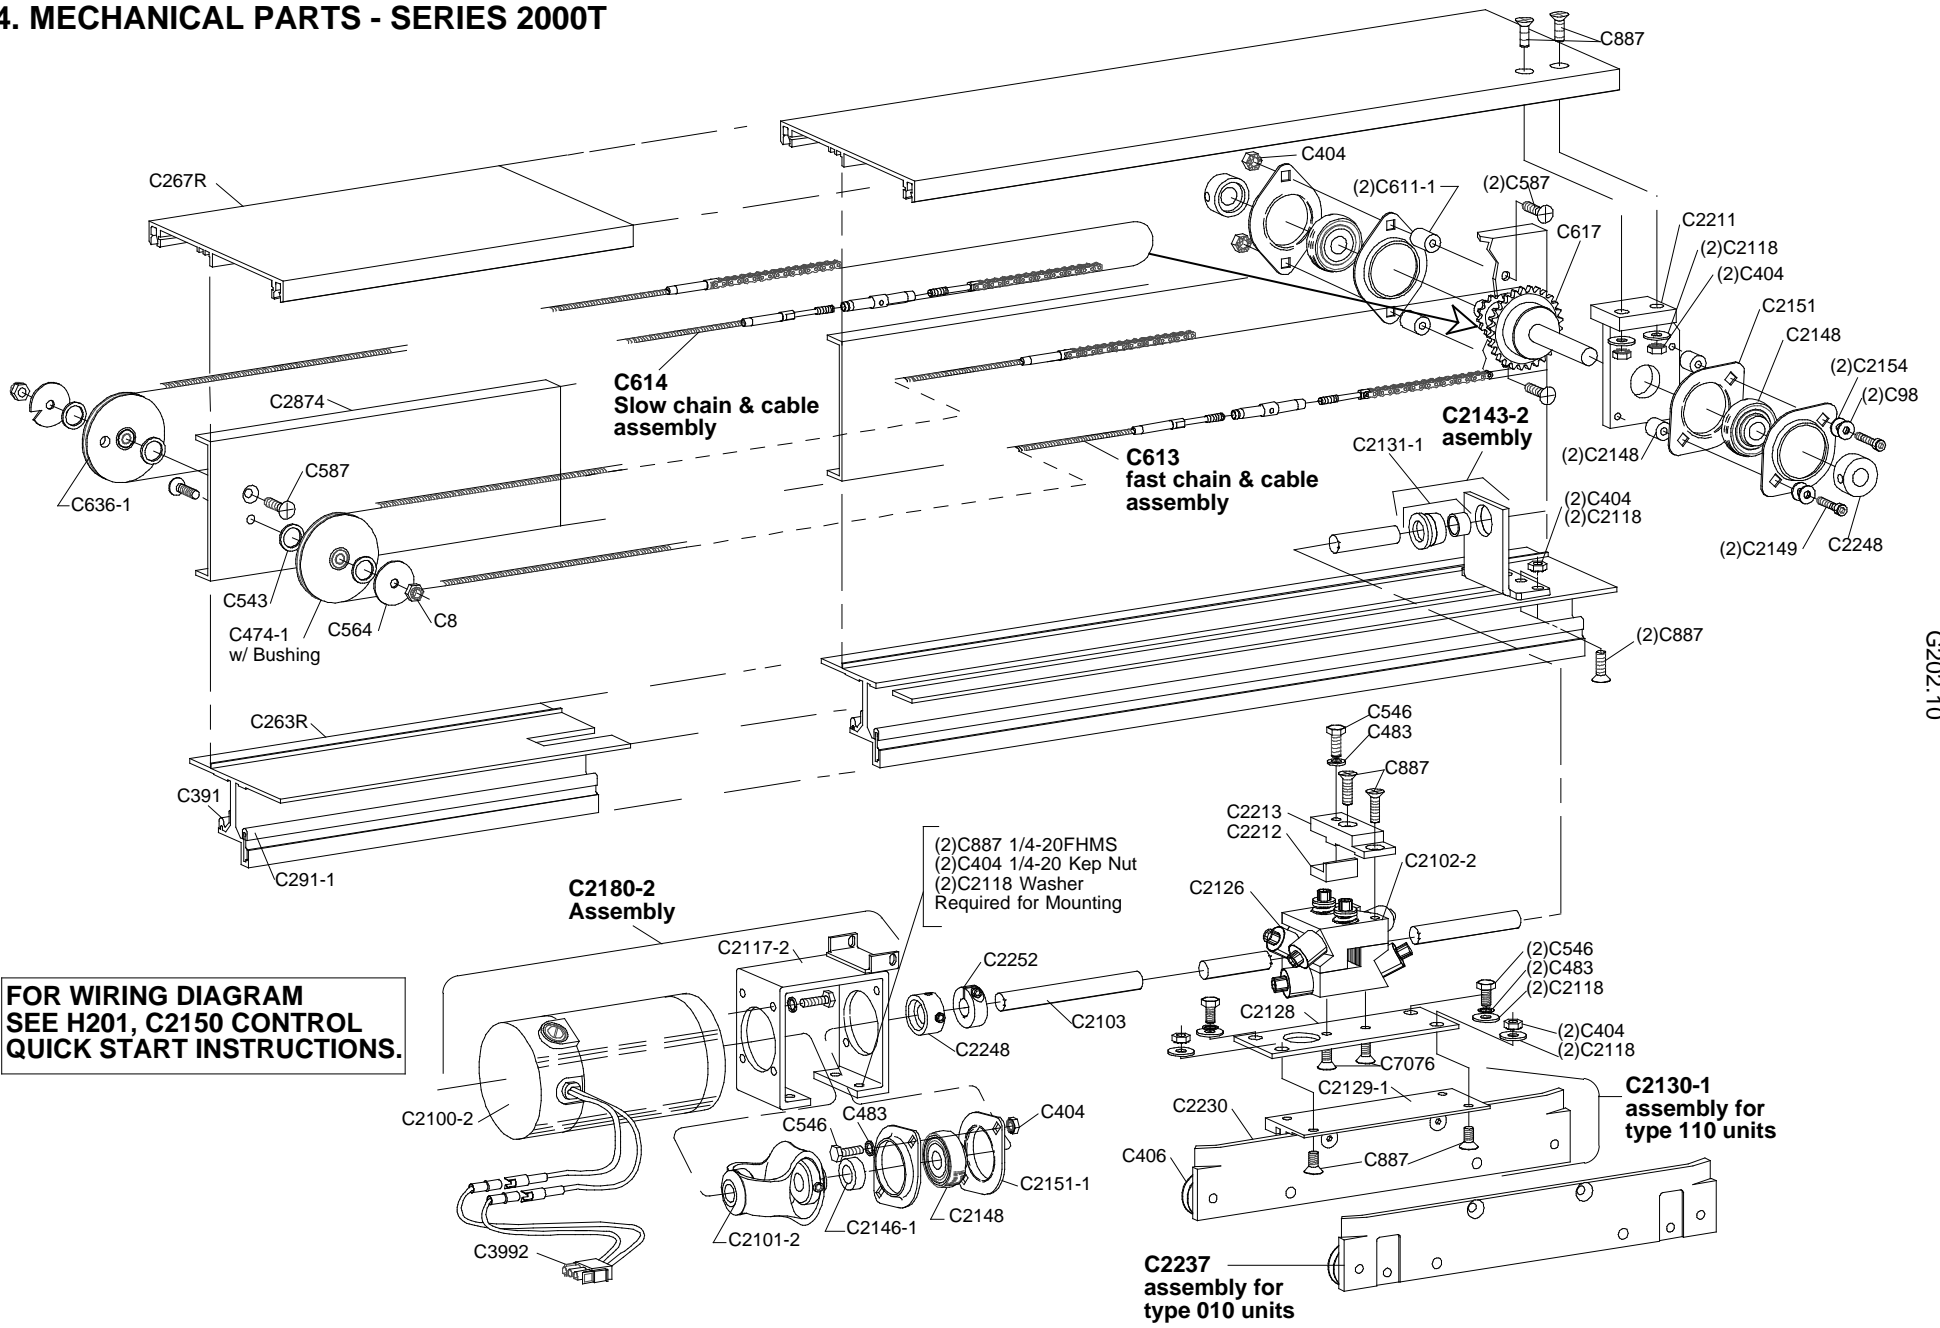

**FOR WIRING DIAGRAM
SEE H201, C2150 CONTROL
QUICK START INSTRUCTIONS.**

15. SAFETY CONSIDERATIONS

To comply with Underwriters' Laboratories Safety Requirements (UL 325), ANSI A156.10 and pedestrian safety, horizontal sliding doors must be adjusted within the following requirements and guidelines.

CLOSING SPEED

- At no time should the door close faster than 1ft per second or close completely in less than 3 seconds for door panels weighing up to and including 160 lbs 73kg.

CLOSING FORCE

- The force required to stop the door should not exceed 30 foot pounds (133N).

REVERSING

- The reversing circuit of the C2150 can be adjusted to reverse when a maximum force of 28 foot pounds (38N) is exerted to prevent the door from closing.

TIME DELAY

- The time before closing should never be less than 2 seconds. 3 seconds or more (after activating zone is clear) is recommended by Horton Automatics.

For set-up and trouble-shooting

SEE HORTON PUBLICATION H202 FIELD QUICK START INSTRUCTIONS.

NOTE: After adjustments are completed be sure the faceplate is secured with screws into the support brackets.

THRESHOLD PROTECTION

- All sliding doors should be installed with a minimum of two presence detectors in the threshold area. Horton Automatics sliding doors are supplied with dual safety beams.
- Motion detectors must be set up as per section 10 on previous page.

16. DECAL APPLICATION

C7280

Place on entry side of slide panels on doors using pushbutton entry To meet knowing act ANSI standard.

C1630-2

For 2-way traffic place one on each sliding panel. For 1-way traffic use C1631-3 (sent with unit)

C1631-3



For 1-way traffic place the side shown toward control side of door.

C1690-1

Daily safety check. Place near on / off switch at eye level.

C1634

Place on sidelites. (sent with unit)

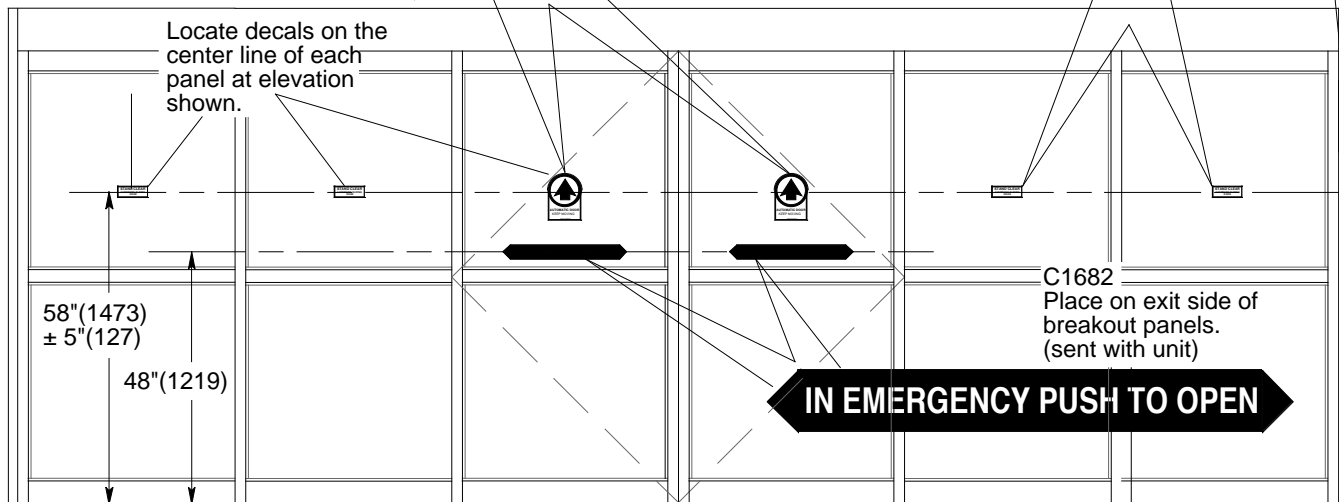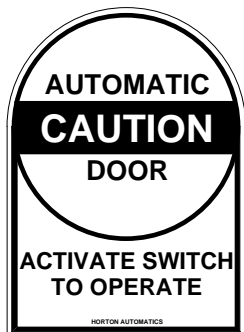

1.137d



4242 Baldwin Boulevard
 Corpus Christi
 Texas 78405-3399
 800-531-3111
 361-888-5591
 Fax: 800-531-3108 361-888-6510
 Internet: <http://www.hortondoors.com>

Horton Automatics, Ltd.
 Unit A, Hortonwood 31
 Telford, Shropshire
 England TFI-4GS
 01952 670169
 Fax: 0192 670181
 International Telephone++44-1952 -670169
 Fax: ++44-1952-670181

Form G202, 2/01

1999 Horton Automatics, printed in U.S.A.

Product equipment depicted in the various figure drawings are approximate and for illustration purposes only. Consult manufacturer for detail product specifications. Horton Automatics reserves the right to improve the product and change its specifications without notice.